


PARK VIEW GAME CHAIR

Model #4186-800 Wood Game Chair

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. Customer Service Phone Number: 502-562-0000

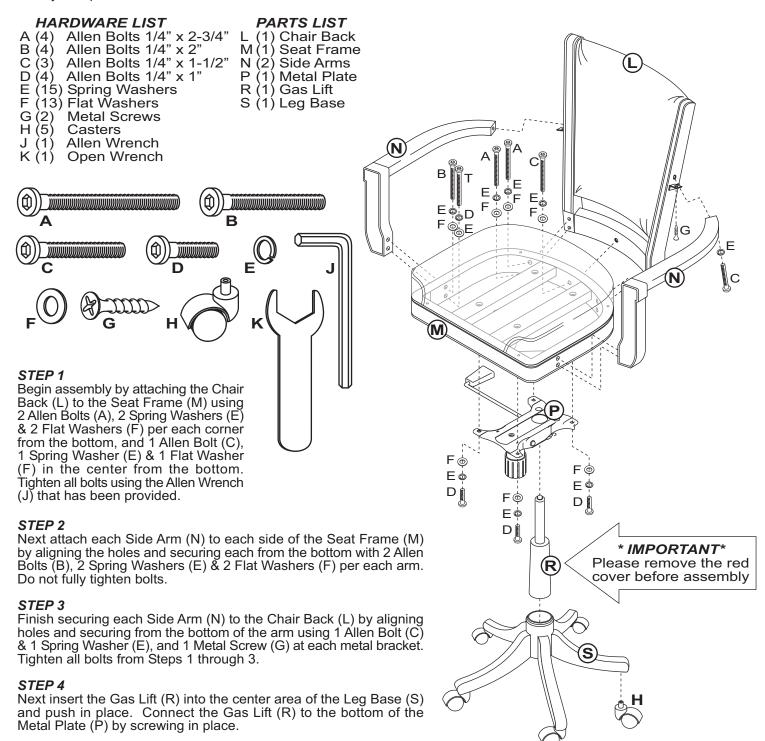

STEP 5

Attach the Metal Plate (P) to the bottom of the Chair Frame (M) with 4 Allen Bolts (D), 4 Spring Washers (E) & 4 Flat Washers (F) to secure in place.

STEP 6

Finally attach each Caster (H) to each leg bottom and tighten using the Hex Wrench (K) that has been provided. The assembly is now complete.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.