

WATER FILTER DRAWER

The water filter cartridge holder is located between the Humidity Controlled Crispers.



WHEN TO REPLACE THE WATER FILTER

The water filter should be replaced every 6 months at the rated capacity or if a noticeable reduction in flow occurs. When replacement is recommended, the Filter Replacement icon will be lit.*

REMOVING THE WATER FILTER

- 1 Pull out the filter drawer in the middle.



- 2 Press the filter knob and rotate 90 degrees counterclockwise. The filter will disengage from the connector and the filter can be removed.



- 3 Check the water tray under the strainer with your finger, then take out and drain the overflow water. Place back in once emptied.



*Recommended replacement varies based on water consumption and time.

INSTALLING THE WATER FILTER

- 1 Remove the outer package and cap of the water filter and open the filter drawer.



- 2 Insert the filter into the filter slot and turn the knob 90 degrees clockwise until it securely stops.

NOTE: When making sure that the knob is fully locked, the dot on the filter handle must be aligned with the dot on the housing. See Page 10 of the SJF2955MS/KS Operation Manual for more details.



- 3 Slide the filter drawer back in.



- 4 Clear the filter aging data by resetting the Filter Replacement icon. Hold down "CHILL/FREEZE BOOST" for 3 seconds and the data should clear. See Page 20 of the SJF2955MS/KS Operation Manual for more details.

NOTE: Before drinking, flush one gallon of water through the filter to clear potential carbon fines and manufacturing residue. For complete safety instructions and initial flushing procedures, refer to the SJF2955MS Operation Manual.

