



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

723489
Console Table

ITEM: 723489

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

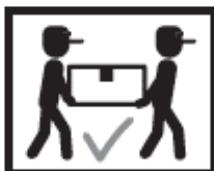


ASSEMBLY TIME

15 MINUTES


PARTS IDENTIFICATION

A TOP

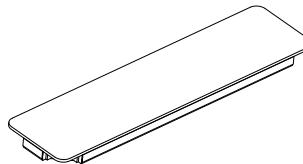


1PC

B SHELF

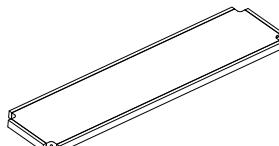

1PC

 C LEG



4PCS

HARDWARE IDENTIFICATION

1 BOLT
(5/16 x 50mm - BLK)



12PCS

2 LOCK WASHER
(1.6 x 14mm - BLK)



12PCS

3 FLAT WASHER
(2 x 19mm - BLK)



12PCS

4 ALLEN WRENCH
(M5 x 65mm - BLK)




1PC


ITEM: 723489

ASSEMBLY INSTRUCTIONS

STEP 1

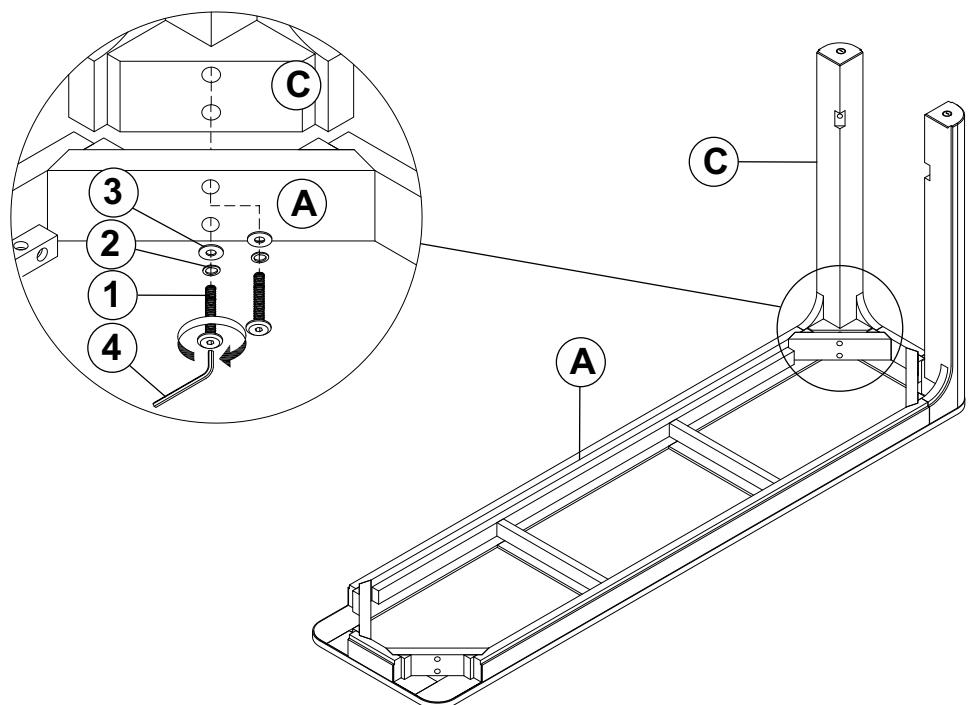

STEP 2

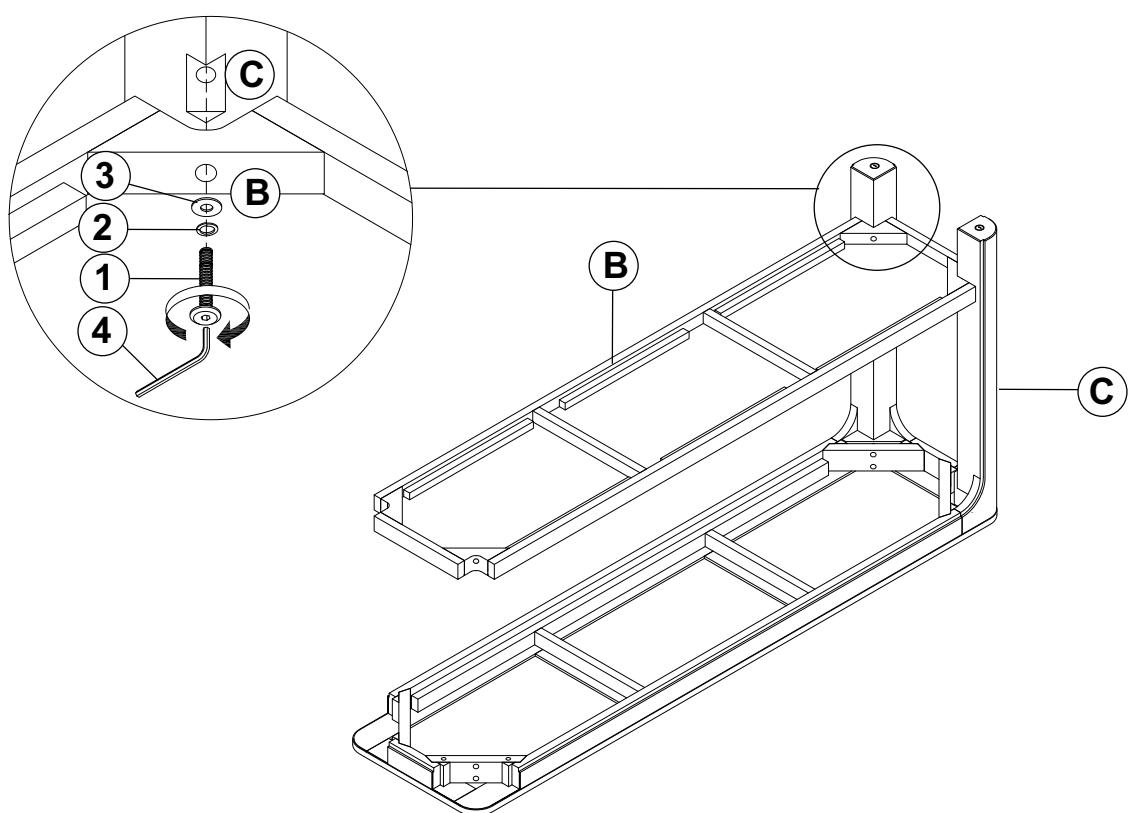

ITEM: 723489


ASSEMBLY INSTRUCTIONS

COASTER
FINE FURNITURE

STEP 3


ATTENTION !

Do not fully tighten bolts in this step.

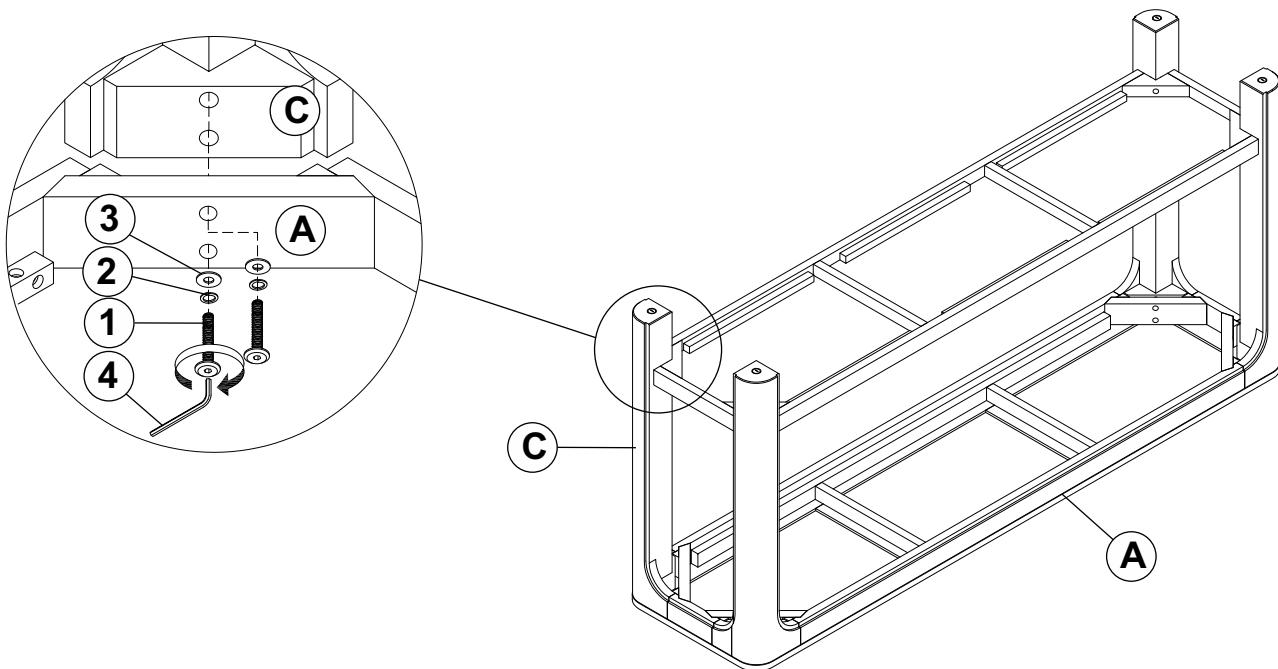

STEP 4

Please tighten bolts 100% after assembly is complete.

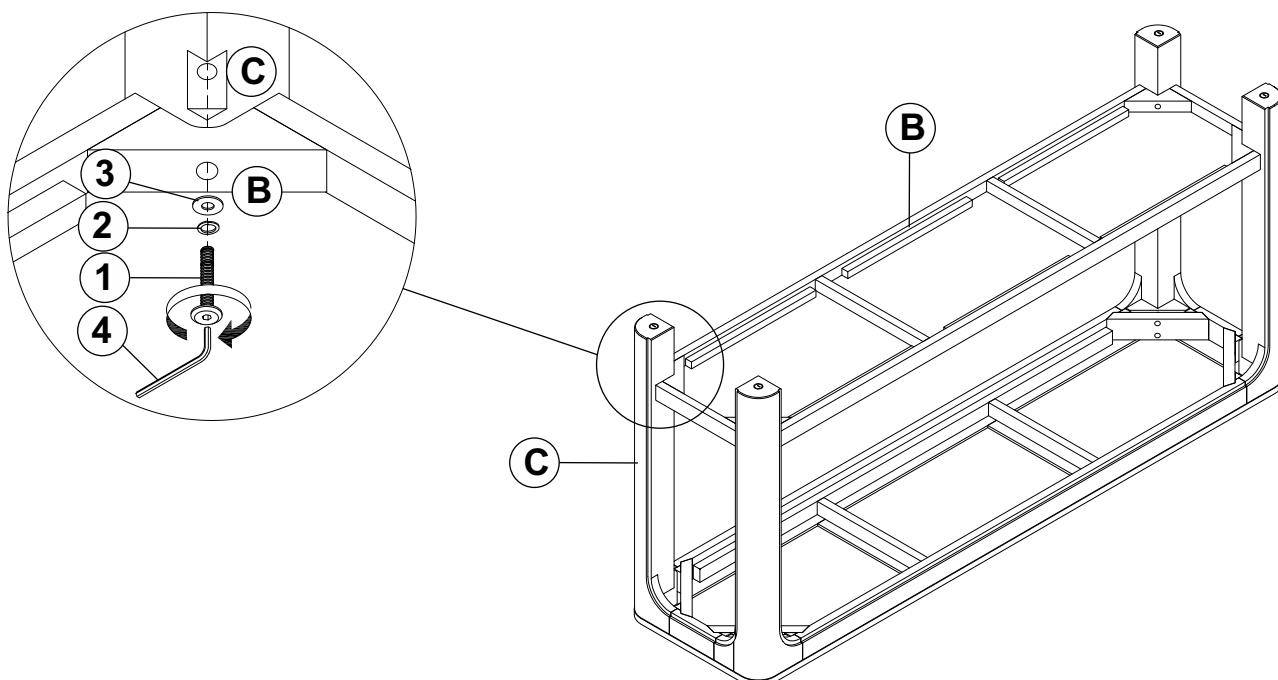


ITEM: 723489



ASSEMBLY INSTRUCTIONS

STEP 5

COASTER
FINE FURNITURE

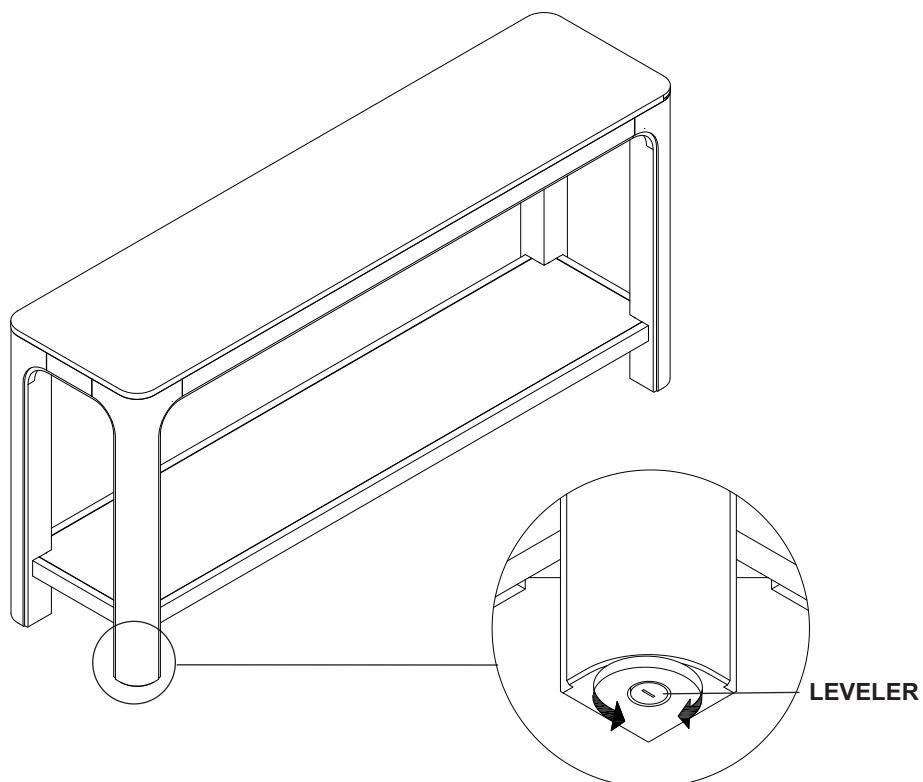


STEP 6 COMPLETE

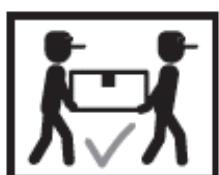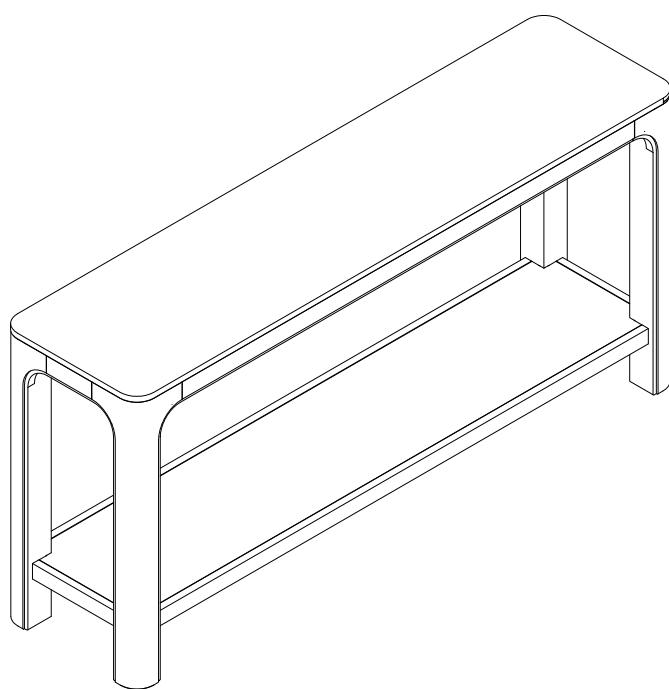

ITEM: 723489

COASTER
FINE FURNITURE

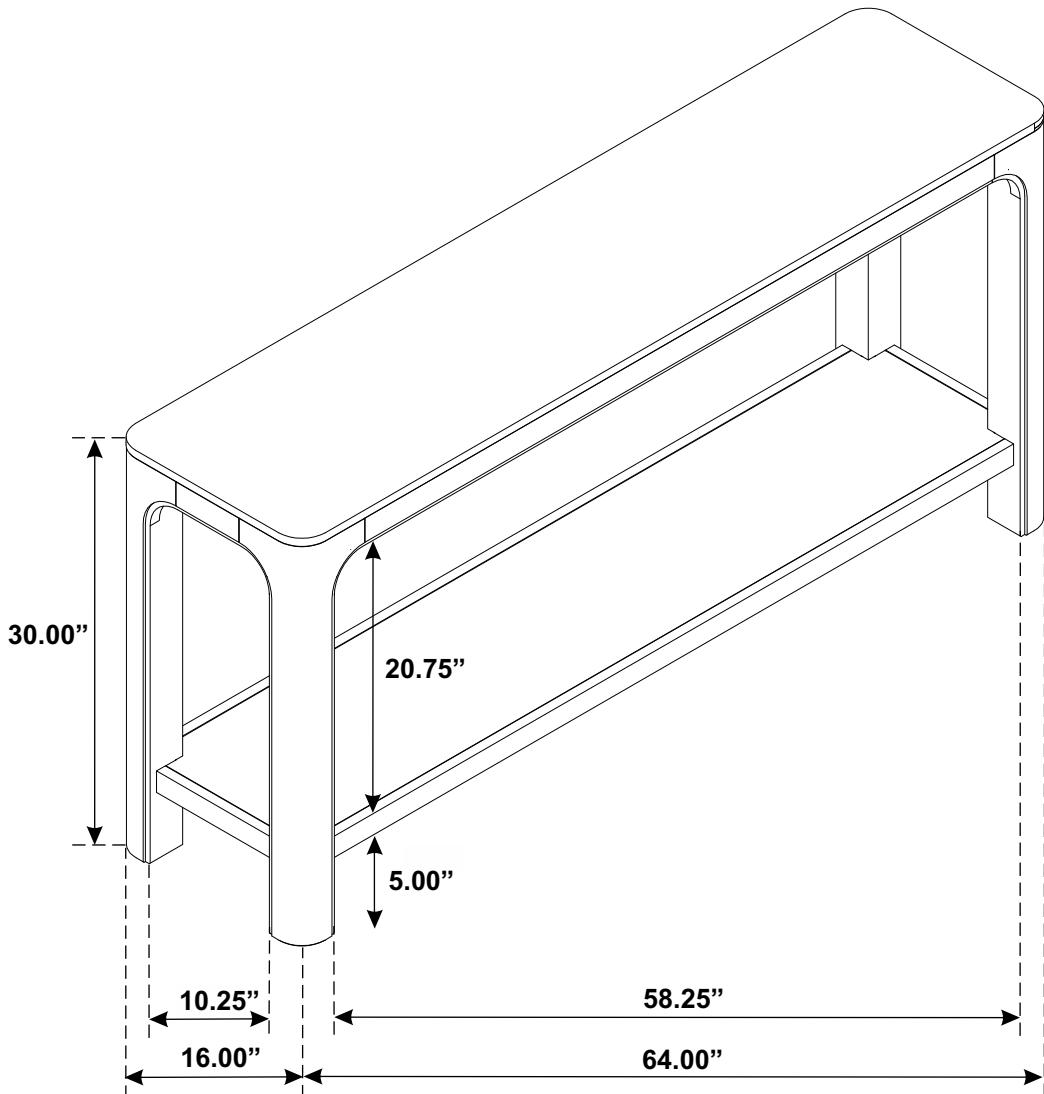

Note: Dimension tolerance $\pm 5\%$