









**CROSLEY**  
FURNITURE

  Outdoor Wicker Dining Chair  
CO7242


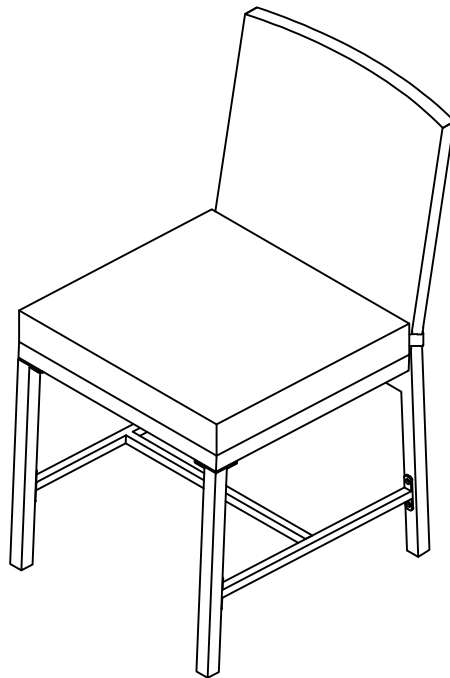




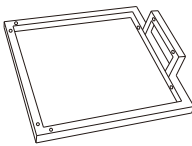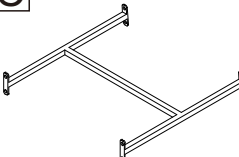

## PART LIST

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Back Panel 2 PCS	Seat Panel 2 PCS	Stretcher 2 PCS	Left Front Leg 2 PCS	Right Front Leg 2 PCS
<b>F</b> 	<b>G</b> 	*Please note cushion covers will ship separately.		
Cover of Seat Cushion * 2 PCS	Core of Seat Cushion 2 PCS			

  
## HARDWARE LIST

<b>#1</b> 	<b>#2</b> 	<b>#3</b> 	<b>#4</b> 
M6*20mm  Bolt 24 PCS (Extra 1)	M6*35mm  Long Bolt 8 PCS (Extra 1)	M6mm  Flat Washer 32 PCS (Extra 1)	M6mm  Allen Wrench 1 PC




Step 1. Lay back panel (part A) down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part B) to back panel (part A) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

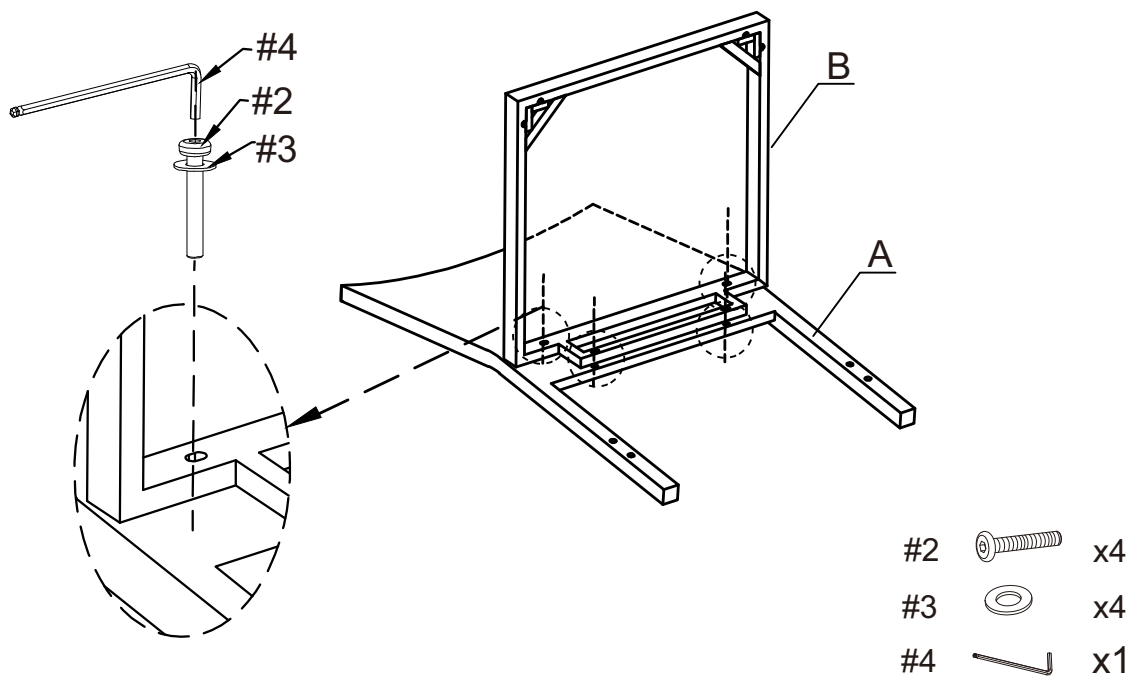

Step 2. Attach stretcher (part C) to back panel (part A) using bolts (part #1), flat washers (part #3) and allen wrench (part #4).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

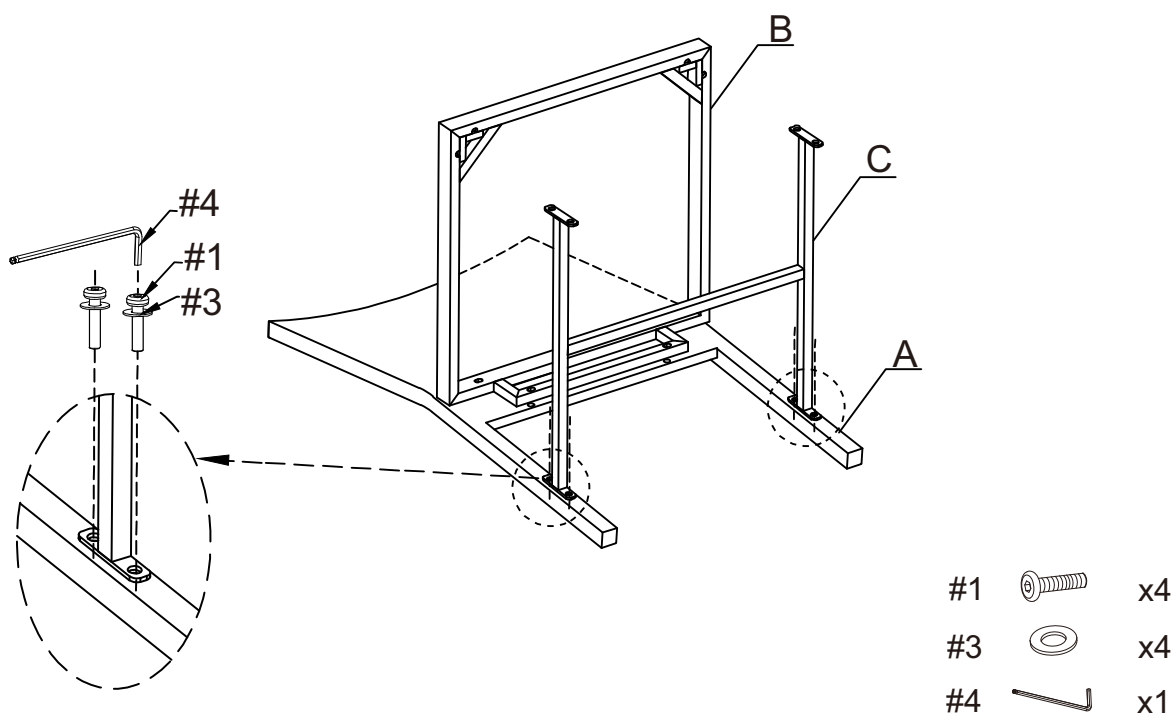




Step 3. Attach left front leg (part D) and right front leg (part E) to assembled unit (parts A, B & C) using bolts (part #1), flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

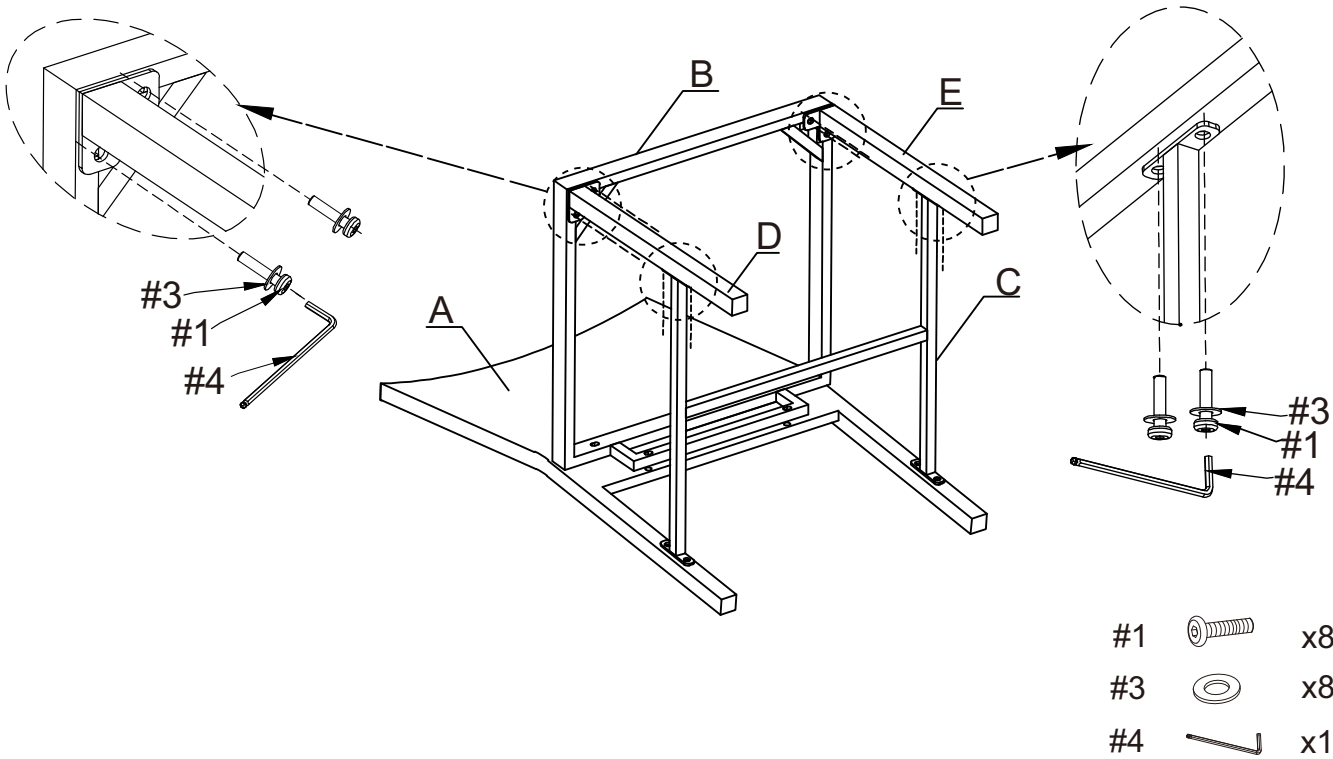

Step 4. Insert core of seat cushion (part G) into cover of seat cushion (part F).

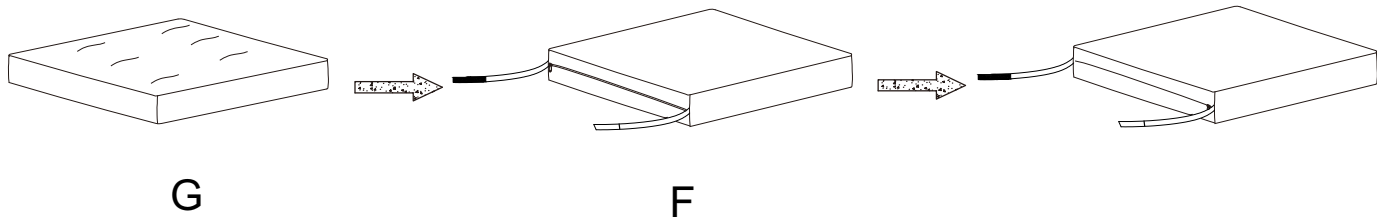



Step 5. Carefully turn unit upright. Add seat cushion and tie strap to chair as shown below.  
Repeat steps 1-5 to assemble remaining chair.

