


Assembly Instruction for
COUNTER CHAIR
DCT350CSBC & DCT550CSBC

- Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.
1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
 3. Please do not over tighten screws or bolts.
 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST FOR CHAIR				HARDWARE LIST PACKED INSIDE BOX			
No.	PART DESC	CODE.	Q'TY	No.	HARDWARE DESC	CODE.	Q'TY
A	SIDE CHAIR BACK FRAME	PDCT350CSBCBFR PDCT550CSBCBFR	1	1	 ALLEN BOLT (Ø1/4"×1-5/8")	PDCT350CSBCHW PDCT550CSBCHW	2
B	SIDE CHAIR SEAT FRAME WITH CUSHION	PDCT350CSBCSEA PDCT550CSBCSEA	1	2	 ALLEN BOLT (Ø1/4"×2-3/8")		4
C	SIDE CHAIR FRONT LEG L / R	PDCT350CSBCLEG PDCT550CSBCLEG	2	3	 ALLEN BOLT (Ø1/4"×3")		4
D	SIDE CHAIR SIDE STRETCHER L / R	PDCT350CSBCSTR PDCT550CSBCSTR	2	4	 SPRING WASHER (Ø1/4")		10
E	SIDE CHAIR FRONT STRETCHER	PDCT350CSBCSTR1 PDCT550CSBCSTR1	1	5	 FLAT WASHER (Ø1/4")		10
				6	 SCREWS/ VIS (#4×1-1/2")		6
				7	 ALLEN KEY (Ø1/8")		1

 Only tighten all bolts when all bolts aligned with bolt inserts.

Step:1

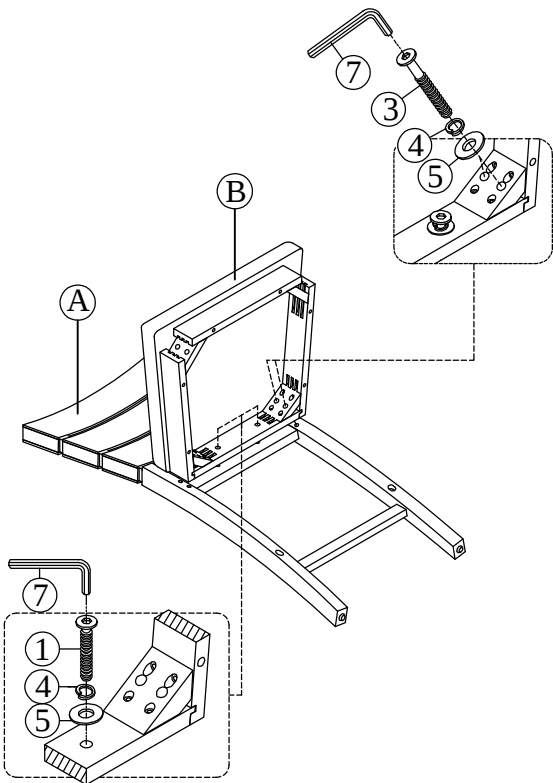

Step:2

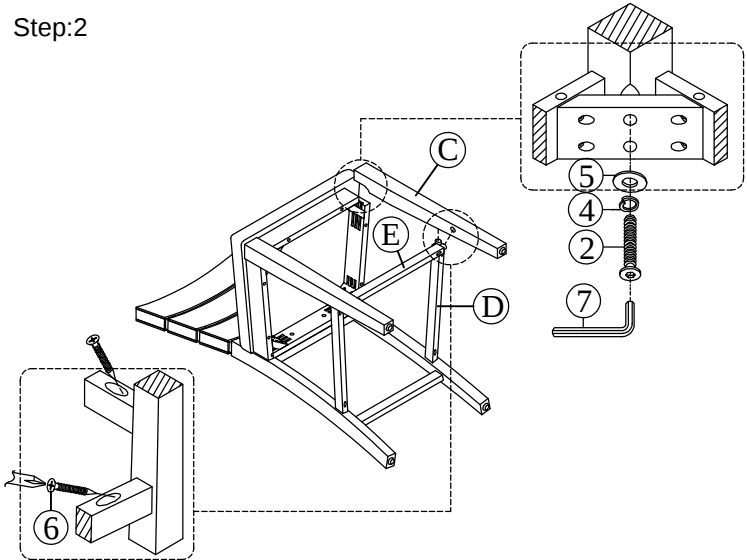

Completed

