

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

708498 Coffee Table

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION


Α	TOP	1PC
В	LEG B	2PCS
С	LEG C	1PC
D	LEG D	1PC

HARDWARE IDENTIFICATION


1	BOLT (M8 x 20mm - BLK)	18PCS
2	FLAT WASHER (M10 x 16mm - BLK)	16PCS
3	FLAT WASHER (M10 x 12mm - BLK)	2PCS
4	ALLEN WRENCH (5mm - BLK)	1PC




ASSEMBLY INSTRUCTIONS STEP 1

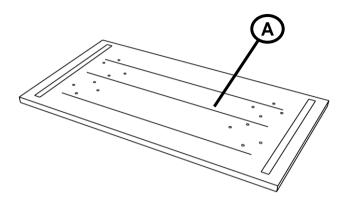

STEP 2

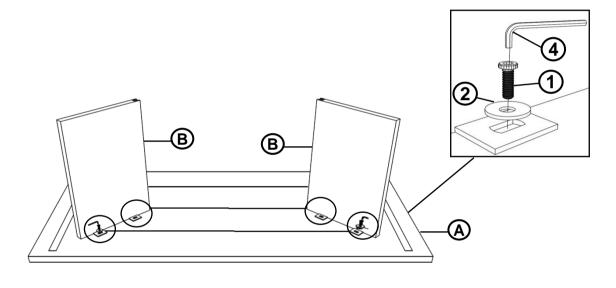


STEP 3

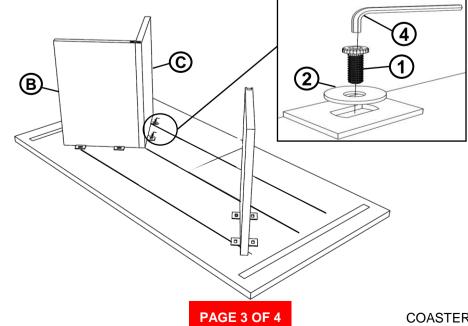





STEP 4

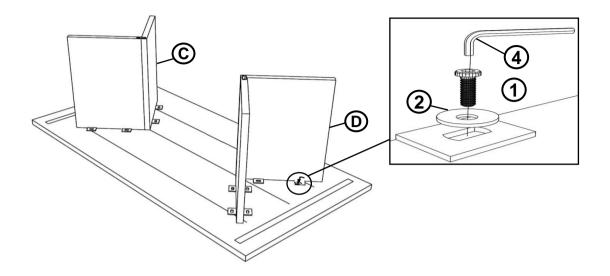

STEP 5

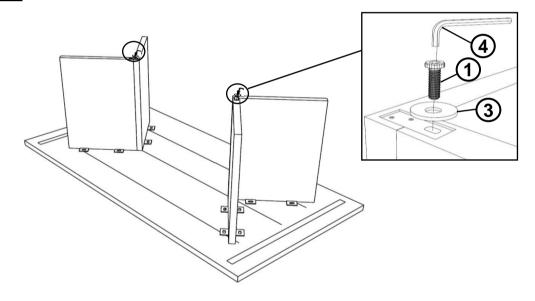


STEP 6 COMPLETE

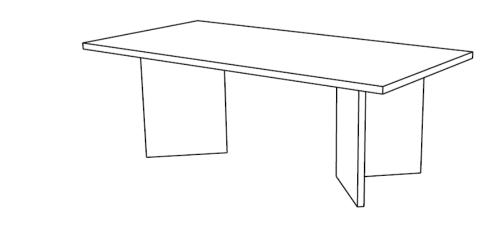



PAGE 4 OF 4



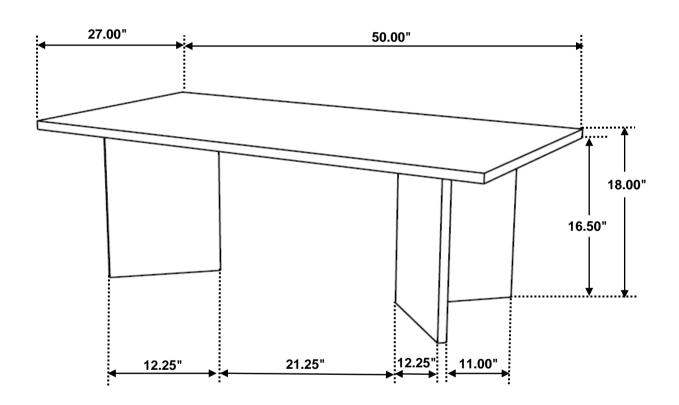

Note: Dimension tolerance ±5%