


Assembly Instructions

For more information contact our team: service.ec@foagroup.com

CM3324BK-BBN

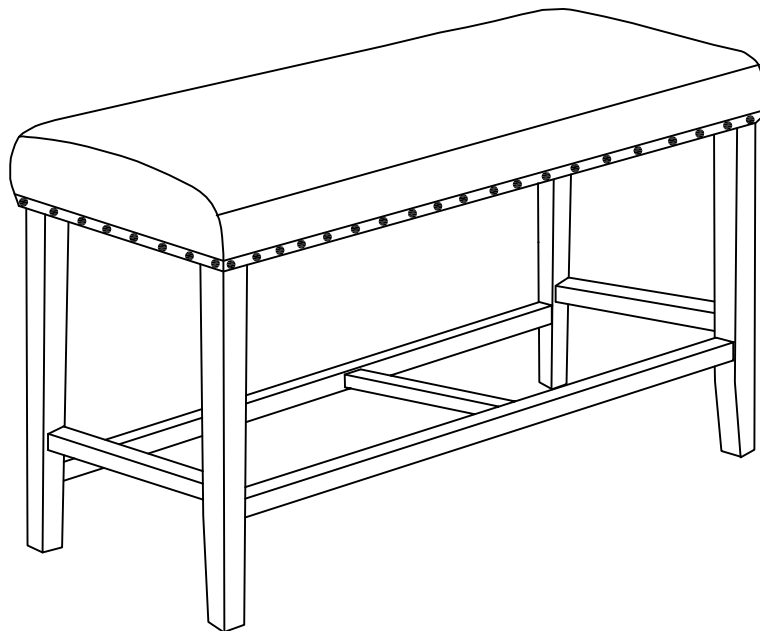

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT


Tools Required For Assembly:

Allen Wrench




(Included)

 Phillips Screwdriver



(Not Included)

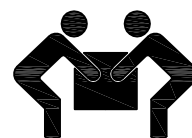


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

BASIC ASSEMBLY TECHNIQUES

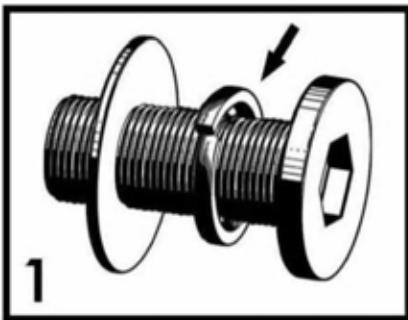


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

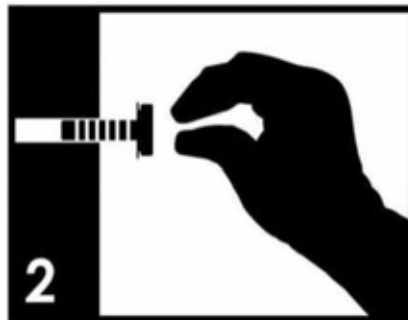


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.




Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

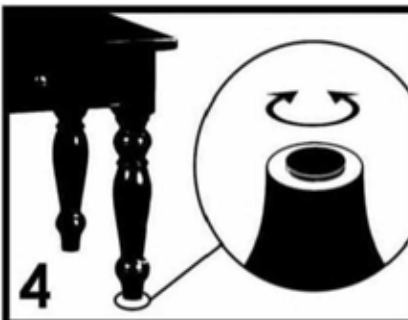

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

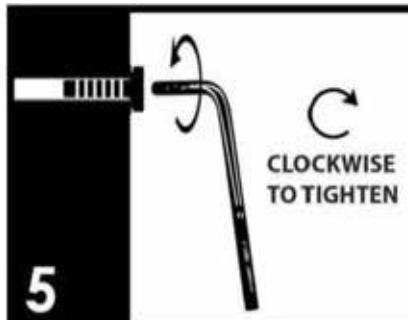


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

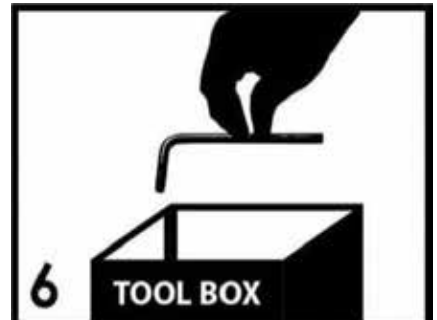

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

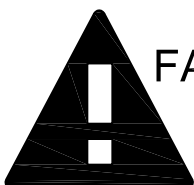


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List

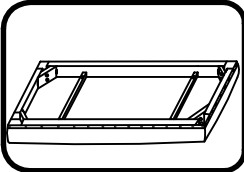


#1 x 1pc
Cushion

 

#2 x 4pcs
Leg (L & R)


 
#3 x 2pcs
Side Support (L & R)




#4 x 2pcs
Front & Back Support



#5 x 1pc
Middle Support

 
Hardware List



#A x 8pcs
Bolt 5/16"X2-1/4"


 
#B x 8pcs
Lock Washer



#C x 8pcs
Flat Washer



#D x 1pc
Allen Wrench




#E x10pcs
Wood Screw Ø8*1-1/2"




#A x 2pcs
#B x 2pcs
#C x 2pcs

- I. Insert a leg (#2) into the slot in the corner of the cushion (#1). Make sure the pre-drilled holes are aligned.
- II. Prepare 2 bolt assemblies by FIRST inserting the lock washer (#B) onto the bolt (#A) then the flat washer (#C) onto that SAME bolt (#A), in that order. Secure using the Allen wrench (#D).

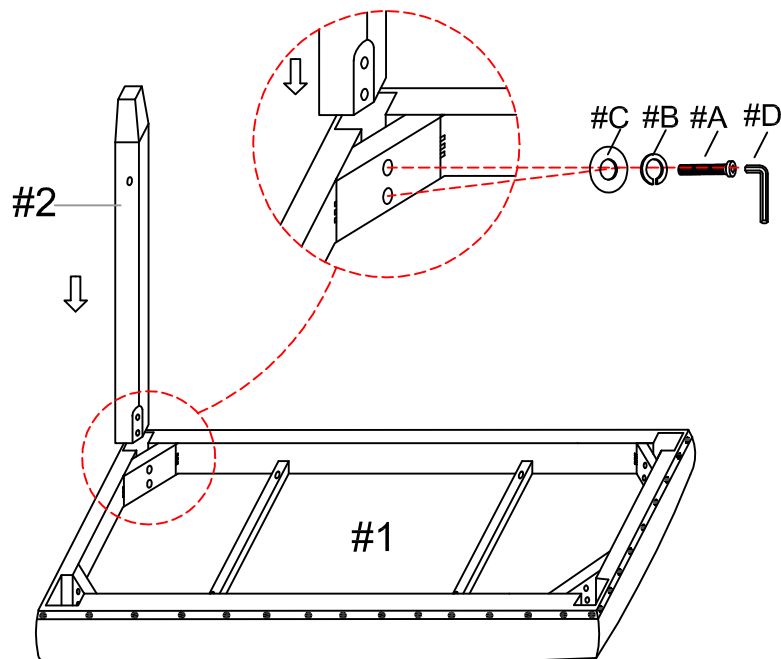


#E x 2pcs

- I. Align the pre-drilled holes on the back support (#4) and the side support (#3) to the leg (#2).
- II. Insert a wood screw (#E) into each pre-drilled hole and secure using the Phillips screwdriver.

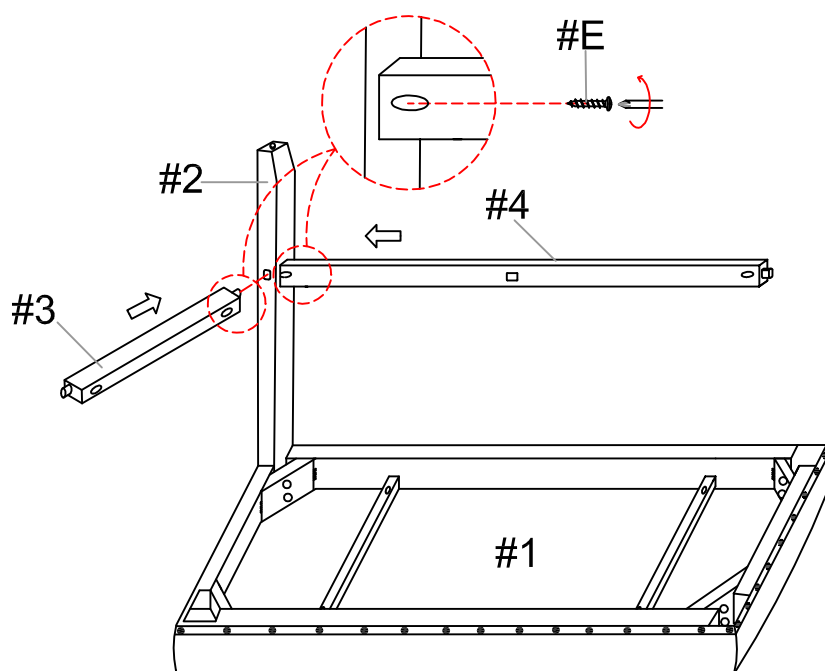



#A x 6pcs
#B x 6pcs
#C x 6pcs

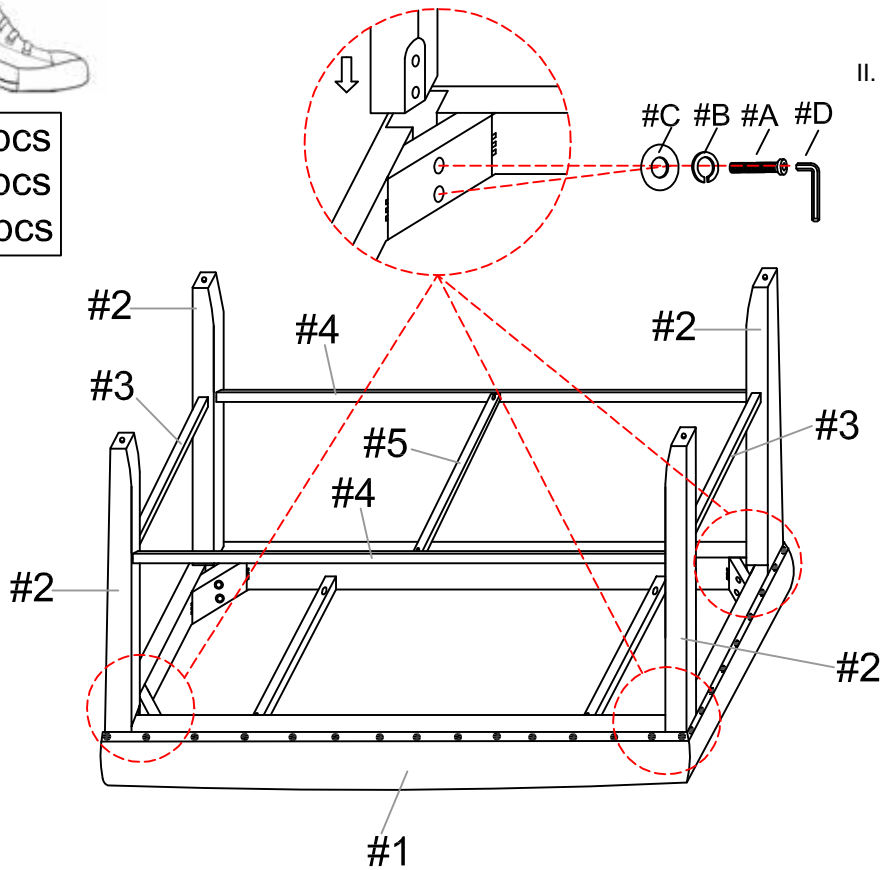


- I. Insert the remaining 3 legs (#2) into the slots in the corners of the cushion (#1). Make sure the pre-drilled holes are aligned.
- II. Prepare 6 bolt assemblies by FIRST inserting the lock washer (#B) onto the bolt (#A) then the flat washer (#C) onto that SAME bolt (#A), in that order. Secure using the Allen wrench (#D).



#E x 8pcs

- I. Align the pre-drilled holes on the front support (#4) and the side support (#3) to the leg (#2).
- II. Insert a wood screw (#E) into each pre-drilled hole and secure using the Phillips screwdriver.
- III. Align the middle support (#5) to the center pre-drilled holes located on the front and back support (#4). Insert a wood screw (#E) into each end and secure using the Phillips screwdriver.

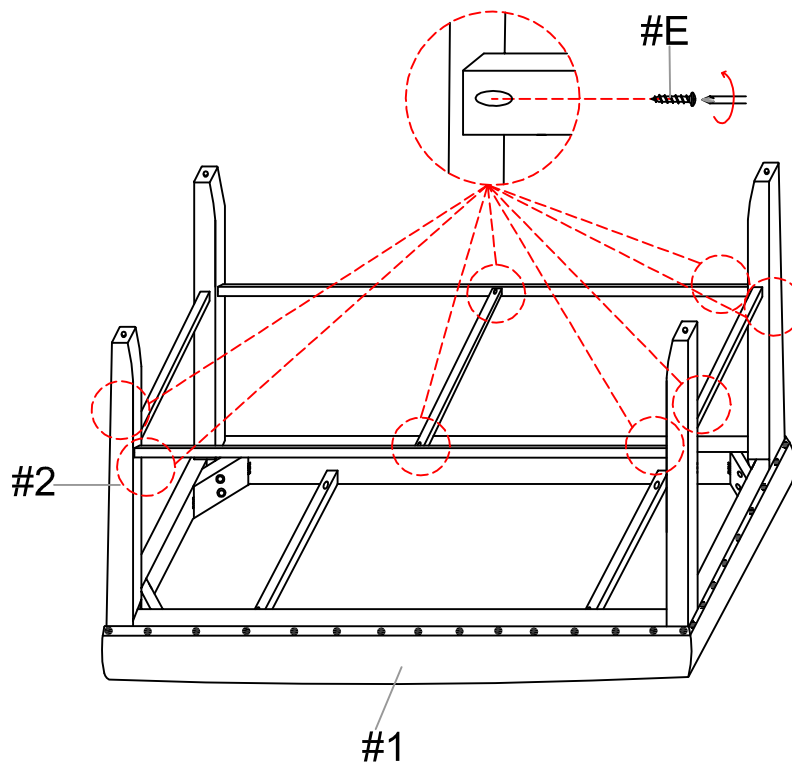

#1
ASSEMBLY IS COMPLETED