

EN FRONT LOAD DRYER


FR SÉCHEUSE À CHARGEMENT FRONTAL

ES SECADORA DE CARGA FRONTAL

USE & CARE GUIDE

GUIDE D'UTILISATION ET D'ENTRETIEN

GUÍA DE USO Y CUIDADO

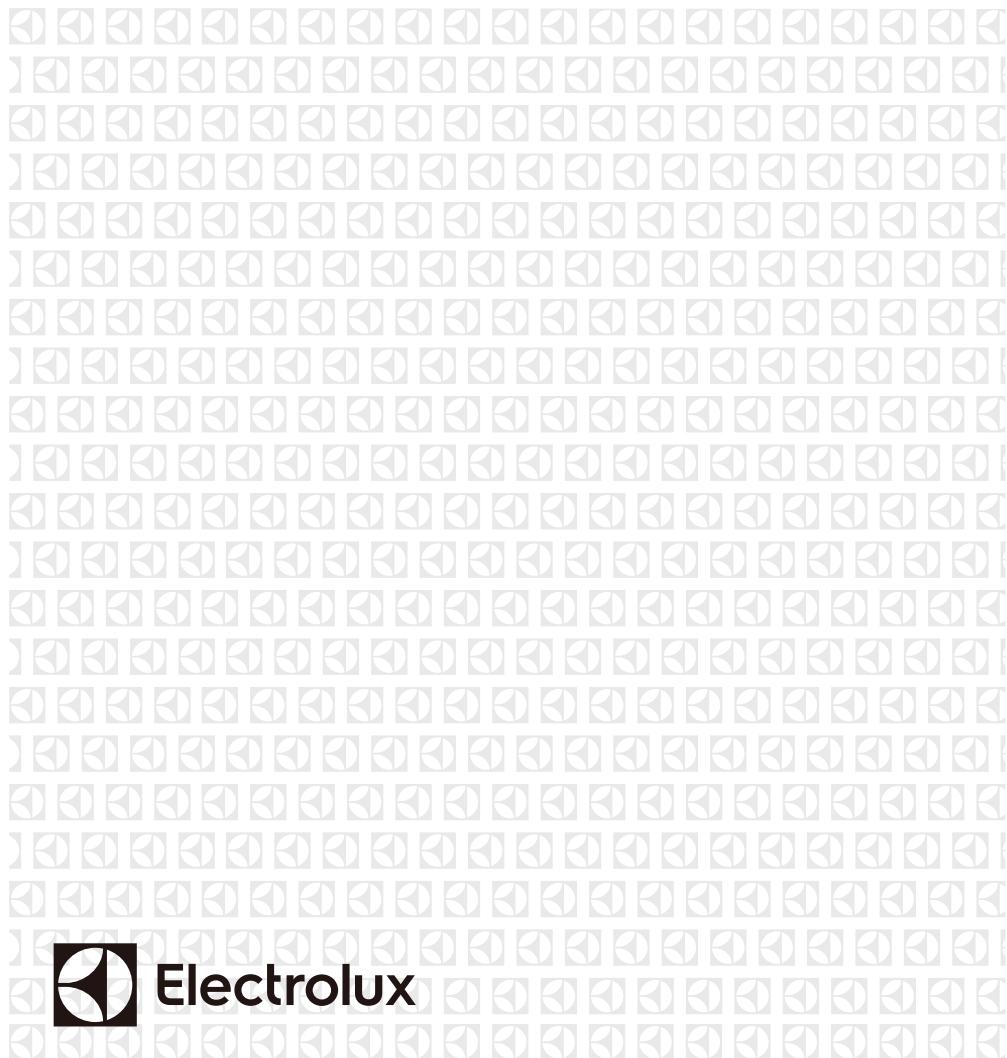

THANK YOU LETTER

Thank you for choosing us! Before using your new product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER	01
SAFETY AND PRECAUTIONS	03
INTRODUCTION	03
WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS	03
IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS	03
IMPORTANT SAFETY INSTRUCTIONS	03
INSTALLATION REQUIREMENTS	06
IMPORTANT TO INSTALLER	06
BASIC REQUIREMENTS	06
LOCATION REQUIREMENTS	06
STACK KIT INSTALLATION INSTRUCTIONS	10
DRAIN SYSTEM	13
ELECTRICAL REQUIREMENTS	14
GROUNDING	16
INSTALLATION INSTRUCTIONS	17
REMOVING FROM THE PACKAGE	17
PARTS IDENTIFICATION	17
TOOLS NEEDED IN INSTALLATION	18
INSTALLATION STEPS	18
OPERATING INSTRUCTIONS	22
CONTROL PANEL	22
DRYING A LOAD OF LAUNDRY	25
EMPTY THE WATER TANK	29
CLEAN FILTER	29
CLEAN THE HEAT EXCHANGER	30
SPECIAL LAUNDRY TIPS	31

MAINTENANCE	32
CARE AND MAINTENANCE	32
TROUBLESHOOTING INSTRUCTIONS	33
CHECK THESE SOLUTIONS IF YOUR DRYER...	33
ERROR CODES	35
APPENDIX	36
LIMITED WARRANTY	37



Read all instructions and explanations before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the appliance is sold or passed on, ensure that the new owner always receives these operation instructions.
You could download the electronic user manual from website too.
<https://www.electrolux.com>

SAFETY AND PRECAUTIONS

INTRODUCTION

Congratulations on the purchase of your new dryer. The dryer features the latest design and functions and will provide reliable and trouble-free performance.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

This manual contains important information on the installation, use, and care of your appliance. Please read this manual carefully before installation and operation of this machine to prevent injury and property damage. Warnings and Important Safety Instructions in this manual DO NOT cover all possible conditions and situations that may occur.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS



WARNING

This indicates that hazards or unsafe practices may cause **serious personal injury or death**. To reduce the risk of fire, explosion, electric shock, or personal injury when using your dryer, these basic safety precautions **SHOULD** be followed.



CAUTION

This indicates that hazards or unsafe practices may cause **minor personal injury or property damage**.



WARNING

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion and to prevent property damage, personal injury or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Installation and service must be performed by a qualified installer or the service agency.

IMPORTANT SAFETY INSTRUCTIONS

WARNING-To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Use this appliance only for its intended purpose as described in this manual.
- Before use, the dryer must be properly installed as described in this manual.

SAFETY AND PRECAUTIONS

- ALWAYS follow the fabric care instructions supplied by the garment manufacturer.
- Risk of Suffocation and Injury from Entrapment: Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove door of the drying compartment.
- Do not reach into the appliance if the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather or freezing temperatures.
- Do not tamper with the controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless it is specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Packaging material can be dangerous for children. There is a risk of suffocation! Keep all packaging from children.
- Always check the inside of the dryer for foreign objects before loading laundry. Keep the door closed when not in use.
- Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
- Clean the lint screen before or after each load.
- Keep the area around the exhaust opening and surrounding areas free from lint, dust, and dirt.
- The interior of the dryer and exhaust duct should be cleaned periodically by qualified service personnel.
- This appliance must be grounded. See "**Electrical Requirements**" and "**Grounding requirements**" in the "**INSTALLATION REQUIREMENTS**" section.
- This appliance must be properly grounded. Never plug the power cord into a receptacle that is not grounded adequately and in accordance with local and national codes. Refer to "**Grounding requirements**" in the "**INSTALLATION REQUIREMENTS**" section for more information.
- Ensure pockets are free from small irregularly shaped hard objects and foreign material, i.e. coins, knives, pins, etc. These objects could damage your dryer.
- Do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).
- Sharp Edges -To reduce the risk of injury, use care when cleaning the condenser or evaporator coil fins.

SAVE THESE INSTRUCTIONS.



WARNING-Risk of fire or explosion

- Do not dry items that have been previously cleaned, washed, soaked, or spotted with gasoline, dry cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode. Any material that has been in contact with a cleaning solvent or flammable liquids or solids should not be placed in the dryer until all traces of these flammable liquids or solids and their fumes have been removed.

SAFETY AND PRECAUTIONS

- There are many highly flammable items used in homes, such as acetone, denatured alcohol, gasoline, kerosene, some liquid household cleaners, some spot removers, turpentine, waxes, and wax removers. Store all highly flammable items away from the dryer.
- Do not dry items containing foam rubber (may be labeled latex foam) or similarly textured rubber-like materials on a heat setting. Heated foam rubber materials can, under certain circumstances, produce fire by spontaneous combustion.
- Do not use the dryer to dry clothes which have traces of any flammable substance, such as vegetable oil, cooking oil, machine oil, flammable chemicals, thinner, etc., or anything containing wax or chemicals, such as mops and cleaning clothes. Flammable substances may cause the fabric to catch fire by itself.
- Do not store or use gasoline or other flammable vapors and liquids near this or any other appliance.
- Do not dry articles that have been previously cleaned in, washed in, soaked in or spotted with gasoline, dry-cleaning solvents, other flammable or explosive substances as they give off vapors that could ignite or explode.
- Keep the area underneath and around your appliances free of combustible materials (lint, paper, rags, etc.), gasoline, chemicals and other flammable vapors and liquids.
- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. To reduce the risk of fire, the final part of a tumble dryer cycle occurs without heat(cool down period). Avoid stopping a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that any residual heat is dissipated.
- Residual oil on clothing can ignite spontaneously. The potential for spontaneous combustion increases when items containing vegetable oil or cooking oil are exposed to heat. Heat source such as your dryer can warm these items, allowing an oxidation reaction in the oil to occur.
- Oxidation creates heat. If this heat cannot escape, the items can become hot enough to catch fire. Piling, stacking, or storing these kinds of items may prevent heat from escaping and can create a fire hazard.



CAUTION

- Do not sit on top of the dryer.
- Because of continuing product improvements, we reserve the right to change specifications without notice. For complete details, see the Installation Instructions packed with your product before selecting cabinetry, making cutouts, or beginning installation.
- Do not dry clothing with large buckles, buttons, or other heavy metal or solid things.
- Install and use in accordance with the manufacturer's instructions.
- Do not place items in your dryer that have been spotted or soaked with vegetable oil or cooking oil. Even after being washed, these items may contain significant amounts of these oils.
- Take care that children's fingers are not caught in door when closing it. This may result in injury.

INSTALLATION REQUIREMENTS

IMPORTANT TO INSTALLER

Please read the following instructions carefully before installing the dryer. These instructions should be kept for future reference.



CAUTION

- The dryer is not suitable for installation in a mobile home.
- Remove the door from all discarded appliances to avoid the danger of a child being trapped and suffocating. When discarding an appliance, unplug and cut off the power cord.
- Install the dryer according to the manufacturer's instructions and all applicable local codes.

BASIC REQUIREMENTS

Make sure you have everything necessary for the proper installation.

- A GROUNDED ELECTRICAL OUTLET is required. Refer to the "Electrical Requirements" section for more information.
- An electric dryer POWER CORD is required and must be purchased separately if using a U.S. model

LOCATION REQUIREMENTS

- The dryer should be located so that there is enough space at the front for loading the dryer. See the following pages for precise minimum clearance measurements.
- Make sure the room in which the dryer is located has enough fresh air. The dryer must be located where there are no air-flow obstructions.
- The dryer must not be installed or stored in an area where it will be exposed to water and/or weather. The dryer area must be kept clear of combustible materials, gasoline, and other flammable vapors and liquids.
- A dryer produces combustible lint. The area around the dryer should be kept lint-free.



WARNING-Risk of Fire

- Clothes dryer installation must be performed by a qualified installer.
- Install the clothes dryer according to the manufacturer's instructions and local codes.
- To reduce the risk of severe injury or death, follow all installation instructions.
- Save these instructions.

INSTALLATION REQUIREMENTS

Alcove , closet or wall insert/recessed installations




- No other fuel-burning appliance should be installed in the same closet as the dryer.

WARNING

Minimum clearances between the dryer and adjacent walls or other surfaces :


Sides	1 in. (25.4mm)	Rear	2 in.(50.8mm)
Top	2 in. (50.8mm)		Closet front 2 in. (50.8mm)

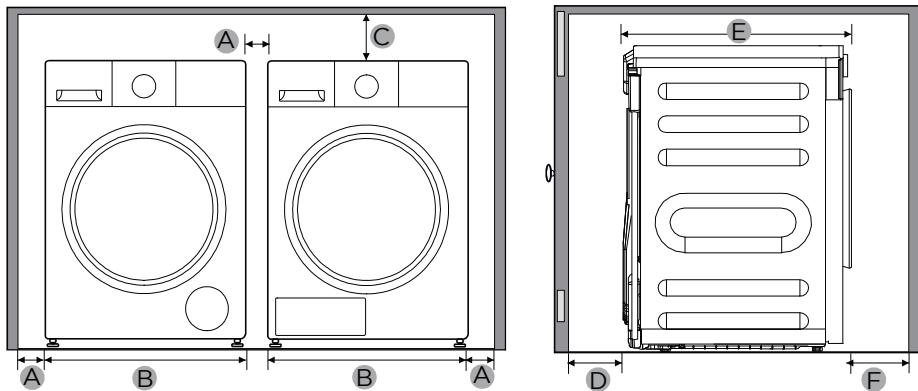

A	1 in. (25.4mm)	C	2 in.(50.8mm)	E	25.6 in.(650mm)
B	23.4 in. (595mm)	D	2 in. (51mm)	F	2 in. (50.8mm)

INSTALLATION REQUIREMENTS


Undercounter installation

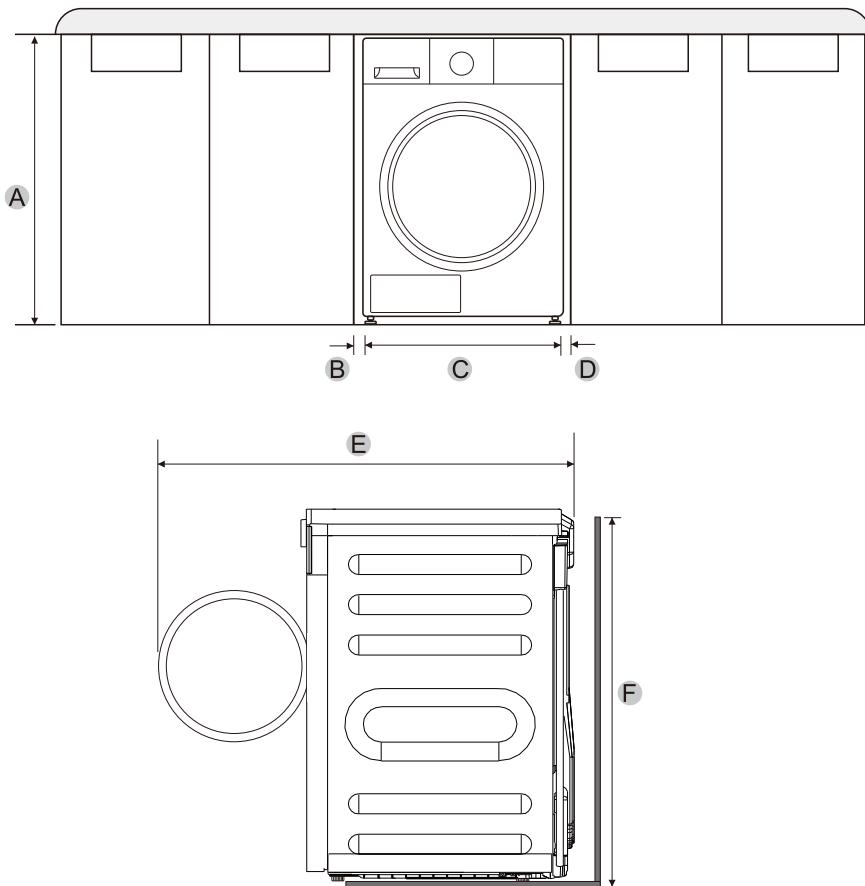

A	35.5in.(901mm)	C	23.4 in. (595mm)	E	42.2in.(1072mm)
B	1 in. (25mm)	D	1 in. (25mm)	F	33.5in.(850mm)

INSTALLATION REQUIREMENTS

Installation with stacked washing machine and dryer

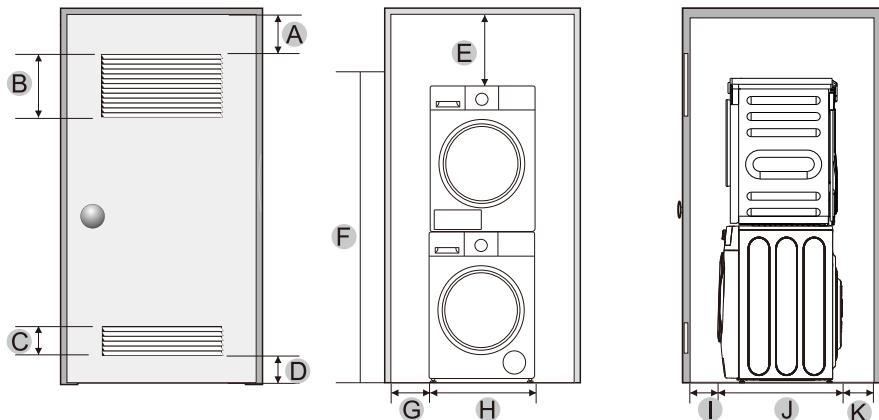

A	3in.(76mm)	E	2in.(50.8mm)	I	3in.(76mm)
B	48in.(3100mm)	F	/	J	25.7 in.(653mm)
C	24in.(1550mm)	G	1in.(25.4mm)	K	2 in.(50.8mm)
D	3in.(76mm)	H	23.4 in. (595mm)		


NOTE

- The front of the closet must have two unobstructed air openings for a combined minimum total area of 72 sq.in. (465 sq.cm) with a minimum clearance of 3 in. (76mm) at the top and bottom. A slatted door with equivalent space clearance is acceptable.

INSTALLATION REQUIREMENTS

Stack Kit Installation Instructions

1. The stacking kit includes the following parts:

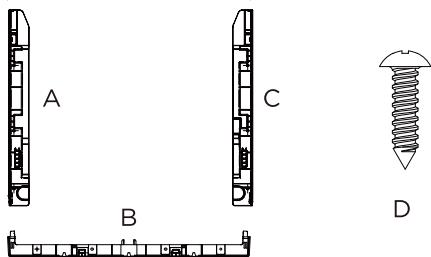


A:1×Left Bracket C:1×right Bracket
B:1×Decorative Strip D: 6×Screws

Confirm that the accessory package contains the above components

2. Installation method

Step 1:


First, screw the left and right protective brackets to the decorative strip.

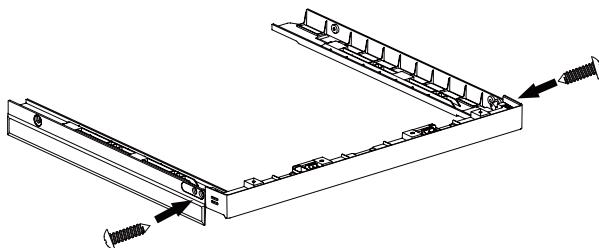

INSTALLATION REQUIREMENTS

Step 2:


Align the decorative strip and brackets with the top of the washing machine and glue them in place, pressing firmly to secure the backing adhesive.

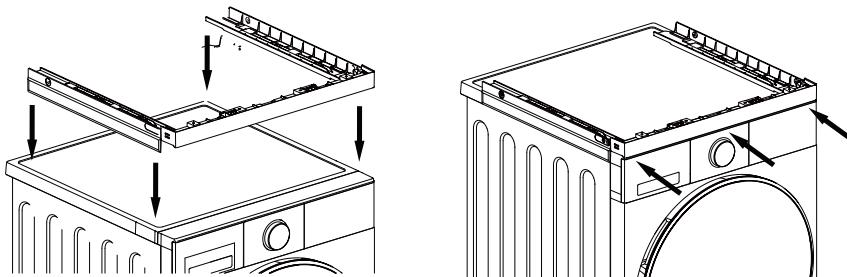

Attention: Align the front of the decorative strip with the front of the washing machine control panel.

Step3:

Adjust the leveling foot upwards to the shortest possible position, where no threads are exposed.


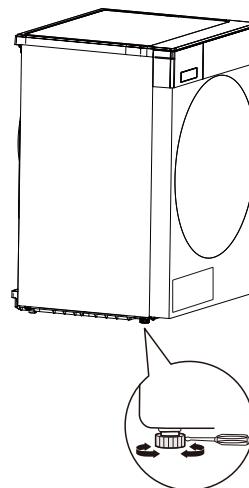


Rotate the foot clockwise to the shortest position

INSTALLATION REQUIREMENTS

Step 4:

Carefully lift the dryer and place it on top of the washer.

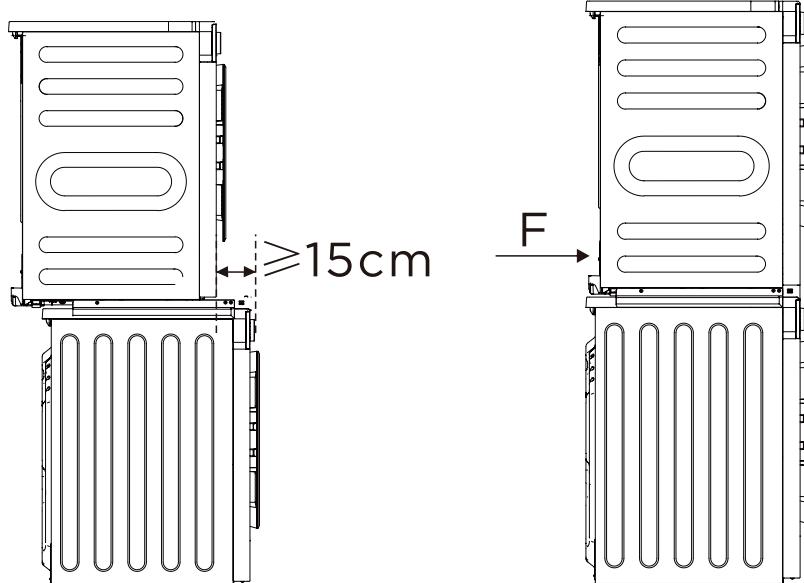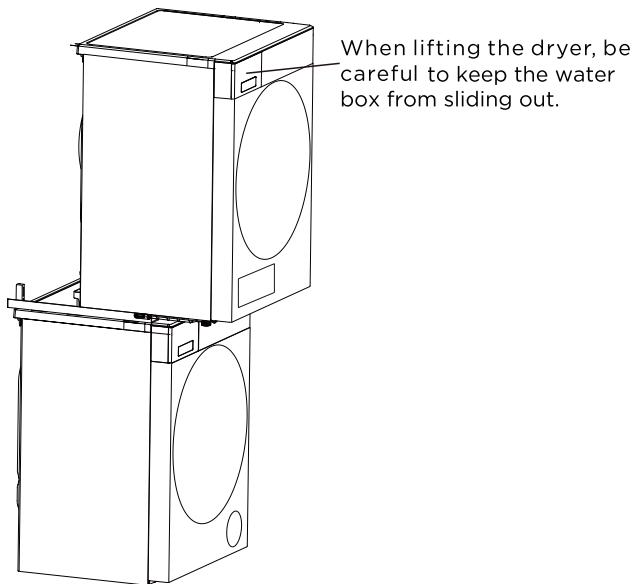


INSTALLATION REQUIREMENTS

Step 5:

Lift the front of the dryer slightly.


Adjust the position of the dryer so that the decorative strip aligns with the front door of the dryer, and then use two screws on each side to secure the dryer.

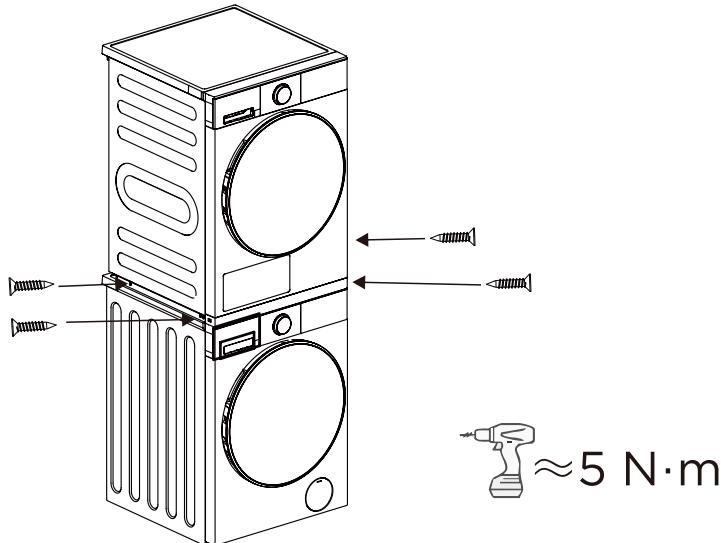

DRAIN SYSTEM


The following parts are optional for specific models.

If your dryer has following parts, please wear gloves and install them as per the instruction below.

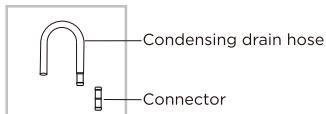


INSTALLATION REQUIREMENTS


DRAIN SYSTEM

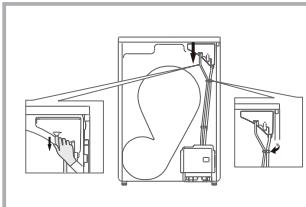


- Take the hose out of the holder.

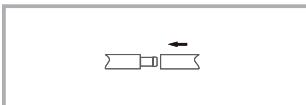

- Disconnect the hose from the water container.
You may need to disconnect with force ,due to the tension between the hose and the inflow.

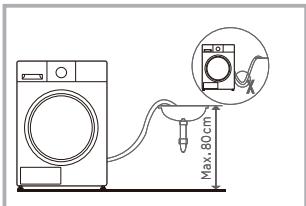

- Insert the drain hose and the external drainage hose into the connector.

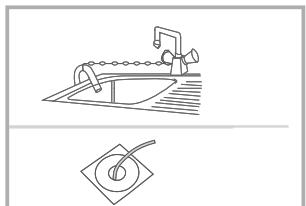

- Put the unconnected end of the hose into a washing basin or drain. To ensure smooth drainage,make sure the pipe is not folded.

ELECTRICAL REQUIREMENTS

The wiring diagram is located on the back board of the unit.



- The improper connection of the equipment grounding conductor can result in the risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether your dryer is properly grounded. Do not modify the plug provided with your dryer - if it doesn't fit the outlet, have a proper outlet installed by a qualified electrician.
- To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with local codes, or in the absence of local codes, with the National Electrical Code, ANSI/NFPA No. 70 - Latest Revision (for the U.S.) or the Canadian Electrical Code CSA C22.1 - Latest Revisions and local codes and ordinances. It is your responsibility to provide adequate electrical services for your dryer.
- All gas installations must be done in accordance with the National Fuel Code ANSI/Z223.1 - Latest Revision (for the U.S.) or CAN/CGA - B149 Installation Codes - Latest Revision (for Canada) and local codes and ordinances.

INSTALLATION REQUIREMENTS

Electrical connections

An individual branch (or separate) circuit serving only your dryer is recommended.
DO NOT USE AN EXTENSION CORD.

Electric models - U.S. only

The dryers require a 120/240 volt, 60Hz AC approved electrical service.
The electric service requirements can be found on the data label located on the back.

A 30-ampere fuse or circuit breaker on both sides of the line is required.

- If a power cord is used, the cord should be plugged into a 30-ampere receptacle.

- The power cord is NOT provided with U.S. electric model dryers.



RISK OF ELECTRIC SHOCK:

WARNING

When local codes allow, the electrical supply of the dryer may be connected by means of a new power supply cord kit, marked for use with a dryer, that is UL listed and rated at a minimum of 120/240 volts, 30-ampere with three No. 10 copper wire conductors terminated with closed loop terminals, open-end spade lugs with turned up ends, or with tinned leads.

- Do not reuse a power supply cord from an old dryer. The power cord electric supply wiring must be retained at the dryer cabinet with a suitable UL-listed strain relief.
- Grounding through the neutral conductor is prohibited for (1) new branch-circuit installations, (2) mobile homes, (3) recreational vehicles, and (4) areas where local codes prohibit grounding through the neutral conductor. (Use a 4-prong plug for 4 wire receptacles, NEMA type 14-30R.)

Electric models - Canada only

- A 120/240 volt, 60Hz AC approved electrical service fused through a fuse or circuit breaker on both sides of the line is required.

- All Canadian models are shipped with the power cord attached.

NOTE

- A power cord is NOT provided with U.S. electric model dryers.

INSTALLATION REQUIREMENTS

Install the clothes dry according to manufacture's instructions and local codes.

GROUNDING INSTRUCTIONS

- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current. This appliance should be used with a cord that has an equipment grounding conductor and grounding plug.
- For products sold in Canada, your dryer is equipped with a cord that has an equipment-grounding conductor and a grounding plug.
- The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- Do not modify the plug provided with the appliance: if it will not fit the outlet, have a proper outlet installed by a qualified electrician.
- If a power cord is not used and the electric dryer is to be permanently wired, this appliance must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.
- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.



- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative or personnel if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance: if it will not fit the outlet, have a proper outlet installed by a qualified electrician.
- Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personnel - Do not contact the following parts while the appliance is energized: Permanent Magnet Synchronous Pump, Brushless DC Motor, Capacitor, Fan, Choke, PCB, Motor Compressor Thermally Protected.



INSTALLATION INSTRUCTIONS

REMOVING FROM THE PACKAGE

1. Unpack your dryer and inspect it for shipping damage. Make sure you have received all the parts shown below and items listed in the Stacking Kit Installation Instructions.
2. To prevent personal injury or strain, wear protective gloves whenever lifting or carrying the unit.

WARNING  Packaging materials can be dangerous to children; Keep all packaging material (plastic bags, polystyrene, etc.) well out of children's reach.


PARTS IDENTIFICATION

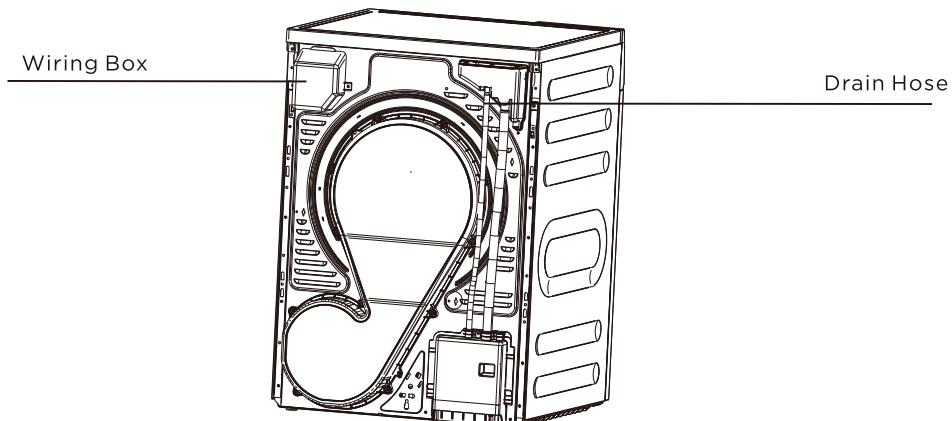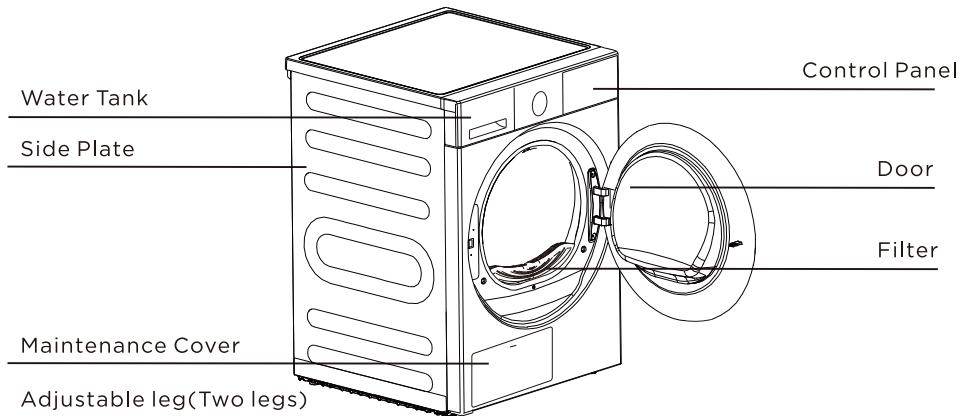

INSTALLATION INSTRUCTIONS

TOOLS NEEDED IN INSTALLATION

Tools needed:

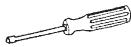

Phillips screwdriver



Flat screwdriver



Level



Pliers



Adjustable wrench
that opens to 1"
(25 mm)



Cutting knife



Tape measure

INSTALLATION STEPS


For the proper installation, we recommend that you hire a qualified installer.

STEP 1 Choose the proper location

Move your dryer to an appropriate location for the installation. Consider installing the dryer and washer side-by-side, to allow access to the electrical.

STEP 2 Connect the electrical wiring

Three wire outlet

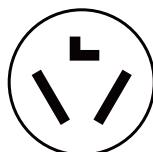

3-Wire
receptacle
(10-30R)

Use a 3-wire power supply cord with ring terminals and UL listed strain relief. The 3-wire power supply cord, at least 4.92 ft. (1.5 m) long, must have 3 10-gauge solid copper wires and match a 3-wire receptacle of NEMA Type 10-30R, rated 120/240V, min 30A.


INSTALLATION INSTRUCTIONS

3-Wire system connections

1. Connect the grounding wire of the power cord to the external ground conductor screw. If the power cord has no grounding wire, please remove the appliance grounding wire (white) from the center terminal block screw. Remove the external ground connector screw, connect the appliance grounding wire to the external ground connector, then replace and tighten the screw.
2. Remove the two side terminal block screw and connect the other wires to the outer terminal screws. Be sure to cross the screw through the terminal ring and tighten the screw.
3. Tighten the strain relief screws.
4. Insert the tab of the terminal block cover into your dryer's rear panel slot. Secure the cover with a screw.

3-Wire system instructions:

- A Center terminal block screw
- B Grounding connector
- C Neutral grounding wire (White)
- D Neutral wire (white or center wire)
- E 3/4" (1.9cm) UL-listed strain relief

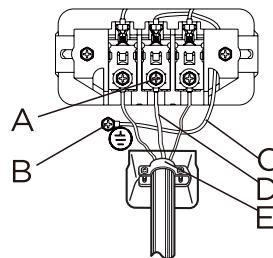

- Ring-type terminals are recommended. If using strap terminals, make sure they are tightened.

Four wire outlet



Use a 4-wire power supply cord with ring terminals and UL listed strain relief. The 4-wire power supply cord, at least 4.92 ft. (1.5 m) long, must have 4 10-gauge solid copper wires and match a 4-wire receptacle of NEMA Type 14-30 R, rated 120/240V, min 30A. The ground wire (ground conductor) may be either green or bare. The neutral conductor must be identified by a white color.

4-Wire system connections

1. Remove the center terminal block screw.
2. Connect the ground wire (green or unwrapped) of the power cord to the external ground conductor screw.
3. Connect the neutral wire (white or center wire) of the power cord and the appliance grounding wire (white) under the center screw of the terminal block. Be sure to cross the screw through the ring of the power cord terminal and tighten the screw.
4. Connect the other wires to the outer terminal block screws. Be sure to cross the screw through the terminal ring and tighten the screw.


INSTALLATION INSTRUCTIONS

5. Tighten the strain relief screws.
6. Insert the tab of the terminal block cover into your dryer's rear panel slot. Secure the cover with a screw.

4-Wire system instructions:

IMPORTANT: Ring-type terminals are recommended. If using strap terminals, make sure they are tightened.

- A Center terminal block screw
- B External ground connector
- C Green or bare copper wire of the power cord
- D Neutral grounding wire (White)
- E Neutral wire (white or center wire)
- F 3/4" (1.9cm) UL-listed strain relief

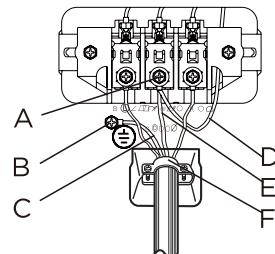

Ring-type terminals are recommended. If using strap terminals, make sure they are tightened.



U.S. Models:

Risk Of Electric Shock - All U.S. models are produced for a **3-WIRE SYSTEM CONNECTION**.

The dryer frame is grounded to the neutral conductor at the terminal block.

A **4-WIRE SYSTEM CONNECTION** is required for new or remodeled construction, or if local codes do not permit grounding through neutral conductor.

If the 4-wire system is used, the dryer frame cannot be grounded to the neutral conductor at the terminal block. Refer to the **"Electrical Requirements"** section on page 16 for 3-WIRE or 4-WIRE SYSTEM CONNECTIONS.

Remove the terminal block cover plate.

Insert the power cord with a UL-listed strain relief through the hose provided in the cabinet near the terminal block.

- A strain relief must be used.

Do not loosen the nuts already installed on the terminal block. Be sure they are tight.


Use a 3/8" (1cm) deep well socket.

STEP 3 Level the dryer

To ensure that the dryer provides the optimal drying performance, it must be leveled. To minimize vibration, noise, and unwanted movement, the floor must be a perfectly level, solid surface.

- Adjust the leveling feet only as much as necessary to level the dryer. Extending the leveling feet more than necessary can cause the dryer to vibrate.

INSTALLATION INSTRUCTIONS

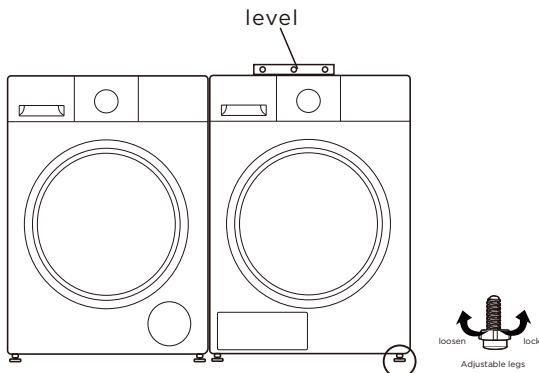

STEP 4 Power on

Make sure all electrical connections are complete. Plug in your dryer.

STEP 5 Final check

- Make sure the dryer is plugged into an electrical outlet and is properly grounded.
- Make sure the dryer is leveled and is sitting firmly on the floor.
- Start your dryer to confirm that it runs, heats, and shuts off.


OPERATING INSTRUCTIONS

CONTROL PANEL



WARNING

To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** before operating the appliance.

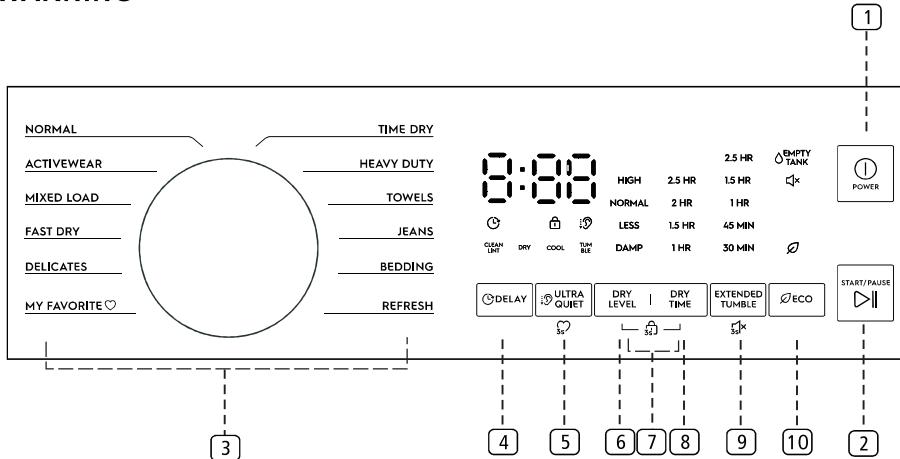

1 Power button

Press to turn your dryer on or enter standby mode. If your dryer is on for more than 10 minutes without any buttons being pressed, it automatically returns to standby mode.

2 Start/Pause button

Press to start or pause the program.

3 Cycle selector

Turn the knob to select the appropriate cycle for your laundry load. The cycle you select determines the heat control for the cycle. The NORMAL, ACTIVEWEAR, MIXED LOAD, FAST DRY, DELICATES, MY FAVORITE, HEAVY DUTY, TOWELS, JEANS, BEDDING are Sensor. REFRESH, TIME DRY are Manual.

OPERATING INSTRUCTIONS

4 Delay ⏱

This function is used for delaying clothes drying time with in 12 hours. The delay time means the programme will start after x hours. When the delay programme starts, the time starts to countdown on the display and the delay icon blinks.

5 Ultra quiet 🌙 / My Favorite ❤

Ultra quiet

This function is suitable for drying clothes with low heat at night.

My Favorite

Used to define and save your favourite programme, which is used frequently.

1. Select the desired programme and other drying functions.
2. Press and hold the "Ultra quiet" for 3 seconds until the beep sounds.
3. Turn the programme selector to "My Favorite", then you can start My Favorite programme.

If you want to change the "My Favorite" settings, repeat the steps (1)and (2).

6 Dry Level

Press the button to select the dry level, including "Damp-Less-Normal-High". Different dry level will result in different drying time. For clothes to be ironed manually, a lower dry level should be selected.

7 Child lock

This function is useful to prevent children from playing with the unit. Press the "Dry Level" and "Dry Time" together to activate the control lock function. Press again for another 3 seconds to deactivate the function. All buttons except the "Power" will be out of function when control lock activated.

- When this function is activated, all functions will be out of function except the "POWER" button and deactivate function above.
- You can power on your unit and set this function then power off. When you do so, even if the unit is powered on, you still cannot start it before the Child lock function is deactivated.
- This function will not be cancelled automatically if your unit is out of power, such as unplug the unit, power supply out of service, etc.

8 Dry Time

The button is effective only for Manual cycles. Press the button to change the drying time you prefer. Each press of the button adjusts the drying time by 30 minutes to get your desired drying time.

9 Extend Tumble

Press once to add the wrinkle care step into the operating program. Press again to cancel selection.

If wrinkle prevent was active, it provides approximately 150 minutes of intermittent tumbling in unheated air at the end of the cycle to reduce wrinkling. The load is already dry, and can be removed at any time during the wrinkle care cycle.

OPERATING INSTRUCTIONS

10 ECO

Press to select the ECO DRY mode. The ECO DRY mode is a power saving mode that reduces power while providing efficient drying performance.

- To save energy, turn ECO DRY on.
- To dry quickly, turn ECO DRY off.

11 Energy Star

Turn on the dryer, the default "Normal" cycle is energy star mode (Cycle: Normal, Dry Level: Normal), it will save about 5% for bulky and bedding loads.

Symbols



Delay



Ultra quiet



Child lock



Empty tank



No signal



ECO

8:88

Remaining Time Indicator /Error Message

OPERATING INSTRUCTIONS

DRYING A LOAD OF LAUNDRY

STEP 1: Power on your dryer

- Press the Power button to power your dryer on.

STEP 2: Load your dryer

- Place only one wash load in your dryer at a time.
- Mixed loads of heavy and lightweight fabrics will dry differently, which may result in lightweight fabrics being dry while heavy fabrics remain damp at the end of a drying cycle.
- Add one or more similar items to your dryer when only one or two articles of clothing need drying. This improves the tumbling action and drying efficiency.
- Overloading restricts tumbling action, resulting in uneven drying as well as excessive wrinkling of some fabrics. Do not overload your dryer.

STEP 3: Select the appropriate cycle and options for the load

- Select the appropriate cycle according to the cycle chart using the Cycle Selector.
- Select the appropriate optional functions by using the buttons on the control panel.

STEP 4: Start your dryer

Pressing the Start/Pause button will start the selected cycle. To pause the cycle, press the Start/Pause button, then open the door. To resume, close the door and then press Start/Pause.

Opening the door during a cycle will immediately pause operation. Close the door and press the Start/Pause button to resume.

OPERATING INSTRUCTIONS

Cycle	Maximum Amount	Dry Level	Delay	Dry Time	Eco Mode	Damp alert	Ultra Quiet	Extend Tumble
NORMAL		High Normal Less Damp	Y	N	N	Y	Y	Y
ACTIVE WEAR		High Normal Less	Y	N	N	Y	Y	Y
MIXED LOAD		High Normal	Y	N	Y	Y	Y	Y
FAST DRY		N	Y	N	N	Y	N	Y
DELICATES		High Normal Less	Y	N	N	Y	N	Y
MY FAVORITE		High Normal Less Damp	Y	N	N	Y	Y	Y
TIME DRY	/	N	Y	Y	N	N	N	Y
HEAVY DUTY		High Normal	Y	N	Y	Y	N	Y
TOWELS		High Normal	Y	N	Y	Y	Y	Y
JEANS		High Normal	Y	N	Y	Y	Y	Y
BEDDING		High Normal	Y	N	Y	Y	N	Y
REFRESH	/	N	Y	Y	N	N	N	Y

OPERATING INSTRUCTIONS

* "Y" means optional functions you can select.

Load Size Recommendations:

For best results, follow the wet load size recommendations noted for each cycle.

 **Small load:** Fill the dryer drum with 3-4 items, not more than 1/4 full.



Medium load: Fill the dryer drum up to about 1/2 full.



Large load: Fill the dryer drum up to about 3/4 full. Do not overload. Items need to tumble freely.

Please refer to the following table for the recommended load for each cycle.

Cycle	Weight	Application/Properties
NORMAL		Completely dry single-layer or multi-layer cotton laundry for direct storage.
ACTIVE WEAR		Dry sportswear and thin fabrics, such as polyester.
MIXED LOAD		For drying mixed loads made of cotton, synthetics including mixed fabrics.
FAST DRY		Dry 1-3 pieces of synthetic fiber/thin cotton clothing with low moisture content.
DELICATES		Dry delicate synthetic fabrics.
MY FAVORITE		Adjust and save your favourite cycle settings.
TIMED DRY	/	Dry individual items or finish drying multi-layer fabrics with different drying needs, such as jackets. The cycle time range is 30-150 minutes (adjusted in 30-minute increments).
HEAVY DUTY		Dry sturdy and large items.
TOWELS		Completely dry thick or multi-layer synthetic fabrics.
JEANS		Dry jeans or other denim clothes that are spun in the washing machine.
BEDDING		Suitable for a typical bed linen load (bed sheets, pillowcases, duvet covers). Do not exceed the maximum load quantity for this program. Note: In addition this program can be used for duvets, also oversized, which are suitable for tumble drying. Always dry duvets individually.
REFRESH	/	Refresh clothes kept in storage for a long time and remove odors. The cycle time range is 20-150 minutes.


OPERATING INSTRUCTIONS

STEP 5: Unloading your laundry

- The "Clean filter" will flash 10 sec. when your laundry load is powered on.
- The dryer will beep 6 times when the cycle is done.
- Clean the filter after every cycle once the laundry is unloaded.

NOTE



- Please put clothes that are worn, easily tangled, or small into a laundry bag before drying.
- Knot long belts or ropes before drying.
- Button up clothes with small or decorative buttons before drying.
- Zip up clothes with zippers and turn them inside out before drying.

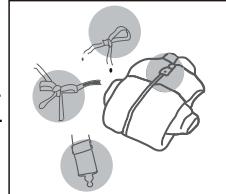

OPERATING INSTRUCTIONS

EMPTY THE WATER TANK

1. Use two hands to pull out the water tank.
2. Keep the water tank horizontal to avoid spills.
3. Tilt the water tank to pour out the condensate water into a basin or drain.
4. Reinstall the water tank.

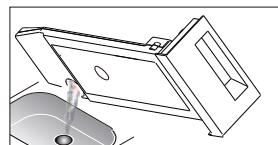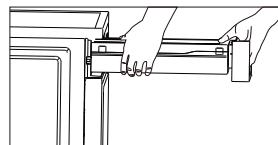

WARNING



- Empty the water tank after each use. Otherwise, the cycle will stop paused and the “^{EMPTY}_{TANK}” icon will flash. After the tank is emptied, restart the dryer by pressing **【Start/Pause】** button.
- Do not drink the condensate water.
- Do not use the dryer without the water tank.

CLEAN FILTERS

This dryer has a double-layer door lint filter. Make sure you clean the lint filter after each cycle.

Clean the lint filter

1. Open the door.
2. Take out the inner filter.
3. Take out the outer filter.
4. Open the filter (if applicable) and remove the lint.
You can rinse it under running water if needed.
5. Dry the door filter thoroughly before reinstalling.

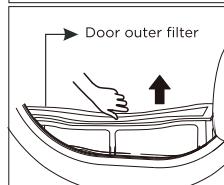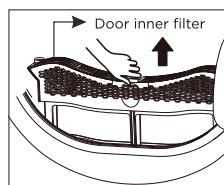

NOTE

- Make sure the filter orientation is correct before reinstalling.


OPERATING INSTRUCTIONS

CLEAN THE HEAT EXCHANGER



Do not touch the heat exchanger with your hand, as this may cause injury.

- As necessary, approx. once every 2 months, remove lint from the heat exchanger using a vacuum cleaner with a dusting brush attached.
- Clean the heat exchanger without applying any pressure to avoid damaging the heat filter. The dryer will not dry if the heat exchanger cooling fins are damaged or bent.

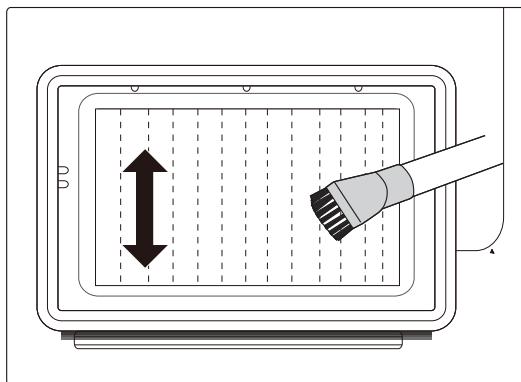

OPERATING INSTRUCTIONS

SPECIAL LAUNDRY TIPS

Items	Drying guide
Bedspreads & Comforters	<ul style="list-style-type: none">- Follow the care label instructions or use the Bedding cycle.- Make sure the item is thoroughly dry before using or storing.- May require repositioning to ensure even drying.
Blankets	<ul style="list-style-type: none">- Use the Normal cycle and dry only one blanket at a time for best tumbling action.- Make sure the item is thoroughly dry before using or storing.- May require repositioning to ensure even drying.
Curtains & Drapery	<ul style="list-style-type: none">- Use the Delicates cycle and the Less Dry setting to help minimize wrinkling.- Dry these in small loads for best results and remove as soon as possible.
Cloth Diapers	<ul style="list-style-type: none">- Use the Normal cycle.
Down-Filled Items (jackets, sleeping bags, comforters, etc.)	<ul style="list-style-type: none">- Use the Normal cycle.- Add a couple of dry towels to shorten drying time and absorb moisture.
Foam Rubber (rug backs, stuffed toys, shoulder pads, etc.)	<ul style="list-style-type: none">- DO NOT dry using heat. Use the Refresh cycle (no heat). <p>WARNING: Drying a rubber item with heat may damage it or create a fire hazard.</p>
Pillows	<ul style="list-style-type: none">- Use the Normal cycle.- Add a couple of dry towels and a pair of clean sneakers to assist with tumbling and fluff the pillows. <p>DO NOT dry kapok or foam pillows using heat. You can only dry these items using the Refresh cycle.</p>
Plastics (shower curtains, outdoor furniture covers, etc.)	<ul style="list-style-type: none">- Use the Refresh cycle (no heat).



If you encounter issues that you require assistance with:

- Press the [On/Off] button.
- Pull out the main plug and contact the service center.

MAINTENANCE

WARNING

Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personnel – Do not contact the following parts while the appliance is energized: Permanent Magnet Synchronous Pump, Brushless DC Motor, Capacitor, Fan, Choke, PCB, Motor Compressor Thermally Protected.

CARE AND MAINTENANCE

Control panel

- Clean with a soft, damp cloth. Do not use abrasive substances.
- Do not spray cleaners directly on the panel.
- The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products. Apply such products away from your dryer and wipe up any spills or overspray immediately.

Stainless steel or anodized drum

- To clean the stainless steel or anodized drum, use a damp cloth with a mild, non-abrasive cleaner suitable for stainless steel and anodized surfaces.
- Remove the cleaner residue and dry with a clean cloth.

Dryer exterior

- Clean with a soft, damp cloth. Do not use abrasive substances.
- Protect the surface from sharp objects.
- Do not place any heavy or sharp objects or a detergent box on the dryer. Store them separately to avoid scratching or damaging the top cover of the dryer.
- Since the entire dryer has a high-gloss finish, the surface can be scratched or damaged.
- Avoid scratching or damaging the surface when using the dryer.

TROUBLESHOOTING INSTRUCTIONS

CHECK THESE SOLUTIONS IF YOUR DRYER...

If your dryer has any of the following problems, check the solutions listed below before making a service call. This will help you save time and money.

Problem	Solution
Dryer doesn't start	<ul style="list-style-type: none">- Make sure the door is latched shut.- Be sure the power cord is plugged into a live electrical outlet.- Check the home's circuit breaker and fuses.- Press the Start/Pause button again if the door is opened during the cycle.
Dryer doesn't heat	<ul style="list-style-type: none">- Check the home's circuit breaker and fuses.- Select a heat setting other than Air Fluff .- Clean the lint filter .- Dryer may have moved into the cool-down process of the cycle.
Doesn't dry	<ul style="list-style-type: none">- Check the all of the above, plus...- Do not overload. One dryer load should be equivalent to one washer load.- Sort heavy items from lightweight items.- Large, bulky items like blankets or comforters may require repositioning to ensure even drying.- Load may be too small to tumble properly. Add a few towels.
The unit is noisy	<ul style="list-style-type: none">- Check the load for objects such as coins, loose buttons, nails, broken zips, etc. Remove promptly.- It is normal to hear the dryer gas valve or heating element cycle on and off during the drying cycle.- Be sure the dryer is leveled properly as outlined in the Installation Instructions
The remaining time changes abnormally	<ul style="list-style-type: none">-Sensor cycles will automatically estimate the dampness of clothes. The dryer will adjust the remaining time during the cycle to account for the amount, material, and dampness of the clothes. This is normal.

TROUBLESHOOTING INSTRUCTIONS

Problem	Solution
Clothes are unevenly dried	<ul style="list-style-type: none"> - Seams, pockets, and other similarly heavy areas may not be completely dry when the rest of the load has reached the selected dryness level. This is normal. Select the Time Dry setting or a higher dryness level in order to ensure all areas are completely dry. - If one heavy item is dried with a lightweight load, such as one towel with sheets, it is possible that the heavy item will not be completely dry when the rest of the load has reached the selected dryness level. Sort heavy items from lightweight items for the best drying results.
Shuts off before load is dry	<ul style="list-style-type: none"> - Household odors from painting, varnishing, strong cleaners, etc. may enter the dryer with the surrounding room's air. This is normal as the dryer draws the air from its surroundings - When these odors linger in the air, ventilate the room completely before using the dryer.
Odors remain in clothing after Refresh Cycle	<ul style="list-style-type: none"> - Fabrics containing strong odors should be using the appropriate wash cycle.
Garments still wrinkled after Wrinkle Care was used	<ul style="list-style-type: none"> - Small loads of 1 to 4 items work best. - Load fewer garments. Load similar types of garments together.
Lint on clothes	<ul style="list-style-type: none"> - Clean the lint filter before every cycle. With some clothes that produce high amounts of lint, it is necessary to clean the filter after the cycle as well. - Some fabrics are lint producers (for example, a fuzzy white cotton towel) and should be dried separately from clothes that are lint trappers (for example, a pair of black linen pants). - Divide larger loads into smaller loads for drying. - Check pockets thoroughly before washing and drying clothes.
“Filter” is lighting up	<ul style="list-style-type: none"> - Clean lint filter.
“ ^{EMPTY} TANK” is flashing	<ul style="list-style-type: none"> - When “^{EMPTY}TANK” flashes, the dryer will beep for 5 seconds. - Check the water container. If it's full, please pour out the condensate water and restart the dryer. - If the container is not full, please restart the dryer directly. - If the “^{EMPTY}TANK” icon is still flashing after you have finished the first two steps, please call the service center.

TROUBLESHOOTING INSTRUCTIONS

Problem	Solution
Selected dryness level was not reached or took too long	<ul style="list-style-type: none">- Clean lint filter.- Empty container.- Check drain hose.- Check that the dryer installation location is not too restricted.- Clean the moisture sensors.- Clean the air inlet- Use higher dry level or longer time settings
The dryer does not shut off instantly when remote control pauses or stops	Cooling in progress — the dryer will shut off automatically when cooled. This is a normal operation, not a fault.

ERROR CODES

Error Code	Possible Cause	Solution
<i>E 33</i>	Temperature sensor error	
<i>E 64</i>	Motor communication error	Please contact your local service center if the problem occurs.
<i>E 82</i>	PCB communication error	

TROUBLESHOOTING INSTRUCTIONS

APPENDIX

Fabric Care Chart

The following symbols provide garment care direction. Clothing care labels include symbols for washing, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to maximize garment life and reduce laundering problems.

Wash Cycle		Special Instructions		Warning Symbols for laundering	
	Normal	<input type="checkbox"/>	Line Dry/ Hang to Dry		Do Not Wash
	Permanent Press / Wrinkle Resistant / Wrinkle Control	<input type="checkbox"/>	Drip Dry		Do Not Wring
	Gentle/Delicates	<input type="checkbox"/>	Dry Flat		Do Not Bleach
	Hand Wash	Heat Setting			Do Not Tumble Dry
Water Temperature**			High		No Steam (added to iron)
	Hot		Medium		Do Not Iron
	Warm		Low	Dryclean	
	Cold		Any Heat		Dry Clean
Bleach			No Heat/Air		Do Not Dry Clean
	Any Bleach (when needed)	Iron-Dry or Steam Temperatures		<input type="checkbox"/>	Line Dry/ Hang to Dry
	Only Non-Chlorine (color-safe) Bleach (when needed)		High	<input type="checkbox"/>	Drip Dry
	Tumble Dry Cycle		Medium	<input type="checkbox"/>	Dry Flat
Normal			Low		
	Permanent Press/ Wrinkle Resistant/ Wrinkle Control		For machine-washable wool. Loads should be under 8 pounds.		
	Gentle/ Delicates				

** The number of dots represent appropriate wash water temperatures for various items. The temperature range for Hot is 105°-125°F/41°-52°C, for Warm 85°-105°F/29°-41°C and for Cold 60°-85°F/16°-29°C.

LIMITED WARRANTY

For the applicable warranty period as set forth below, as measured from date of delivery, Electrolux will repair or replace any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions. The date of delivery establishes the warranty period, should service be required.

Warranty Periods:

- All parts – One year including labor. In addition, your appliance is covered by a one year, parts only, limited warranty. During the 2nd year from your original date of purchase, Electrolux will pay for parts needed for this appliance that have proven to be defective in materials or workmanship when your appliance is installed, used, and maintained in accordance with the provided instructions.

Exclusions

This warranty does not cover the following:

1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
2. Product that has been transferred from its original owner to another party or removed outside the USA or Canada.
3. Rust on the interior or exterior of the unit.
4. Products purchased "as-is" are not covered by this warranty.
5. Products used in a commercial setting.
6. Service calls which DO NOT involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions.
7. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
8. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory.
9. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts.
10. Pickup and delivery costs; your appliance is designed to be repaired in the home.
11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
12. Damages to the finish of appliance or home incurred during transportation or installation, including but not limited to floors, cabinets, walls, etc.
13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

If You Need Service

Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.

This warranty only applies in the USA, Puerto Rico and Canada. In the USA and Puerto Rico, your appliance is warranted by Electrolux Consumer Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.

USA

1-877-435-3287

Electrolux Consumer Products, Inc.

North America

10200 David Taylor Drive

Charlotte, NC 28262



Canada

1-800-265-8352

Electrolux Canada Corp.

5855 Terry Fox Way

Mississauga, Ontario, Canada

L5V 3E4