

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

704251
TV CONSOLE

ITEM:704251



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



 
ASSEMBLY TIME

60 MINUTES

MAX TV SIZE : 75"


PARTS IDENTIFICATION

A LEFT SIDE
PANEL

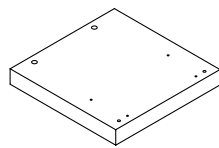


1 PC

 B LEFT DIVIDER
PANEL




1 PC

 C MIDDLE DIVIDER
PANEL




1 PC

 D RIGHT DIVIDER
PANEL




1 PC

 E UPPER DIVIDER
PANEL




2 PCS

 F BOTTOM PANEL

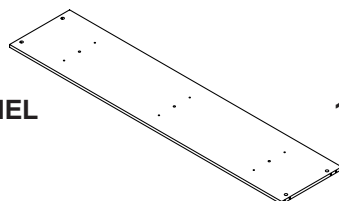


1 PC

 G CROSS PANEL

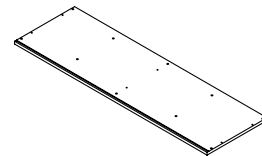


1 PC

 H TOP PANEL

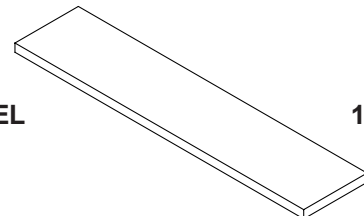


1 PC

 I BACK PANEL

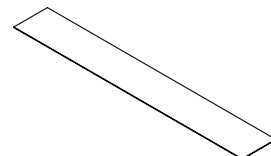


1 PC

 J LEFT DRAWER
FRONT PANEL

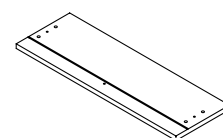


1 PC

 K RIGHT DRAWER
FRONT PANEL

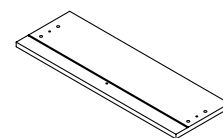

1 PC






 
L DRAWER
BACK PANEL



2 PCS

      NOTE:

 

 
 
 
 


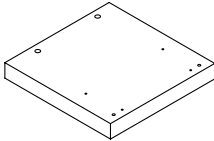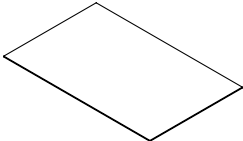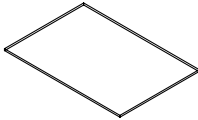
 

 
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

M	DRAWER LEFT SIDE PANEL		2 PCS	P	DRAWER BOTTOM SUPPORT		2 PCS
N	DRAWER RIGHT SIDE PANEL		2 PCS	Q	RIGHT SIDE PANEL		1 PC
O	DRAWER BOTTOM PANEL		2 PCS	R	GLASS		2 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **704251****HARDWARE IDENTIFICATION****Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	7	PLASTIC FEET Ø15mm		4 PCS
2	WOODEN DOWEL Ø8x30mm		36 PCS	8	GLASS PIN Ø5x23mm SR		8 PCS
3	CAM BOLT Ø7x35.5mm SR		24 PCS	9	GLIDES L=350mm SR		2 SET
4	CAM LOCK Ø15x12mm SR		24 PCS	10	GLIDES BOLT Ø6x13mm SR		24 PCS
5	SCREW Ø4.5x42mm SR		10 PCS	11	FOOT Ø35xH19mm		3 PCS
6	SCREW Ø 4.5x42mm SR		10 PCS	12	STICKER Ø20mm		4 PCS

 
Z9,Z11 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 704251

COASTER
FINE FURNITURE

STEP 1

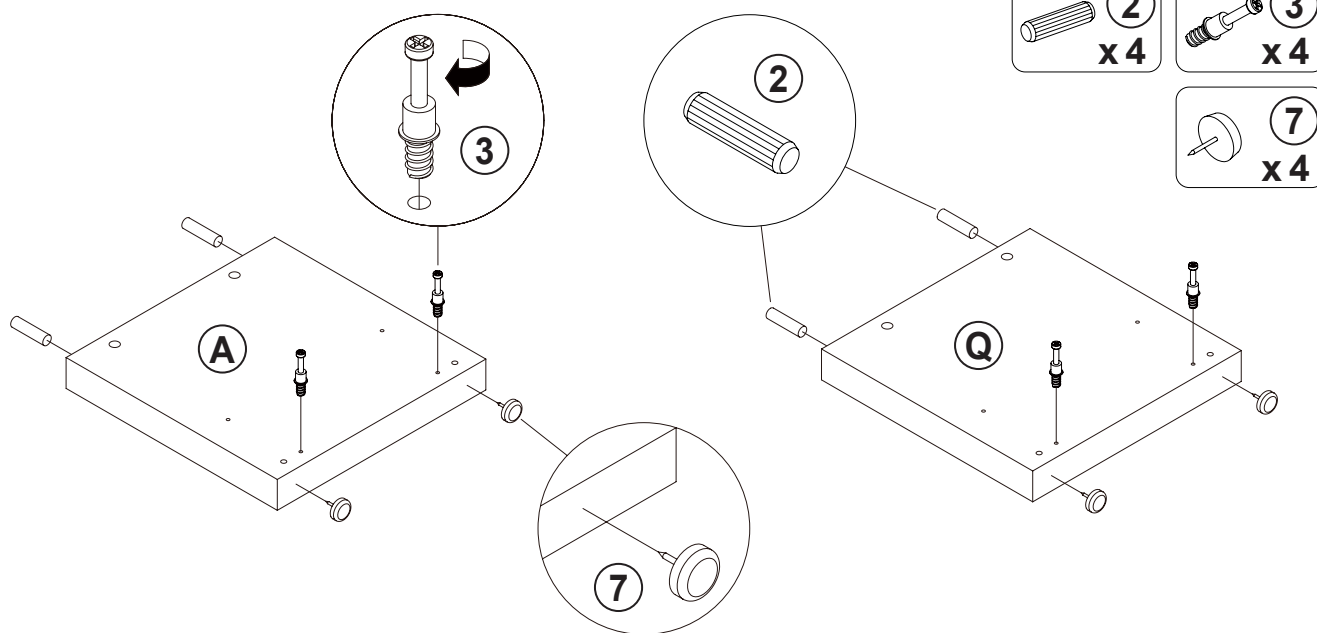

 
STEP 2

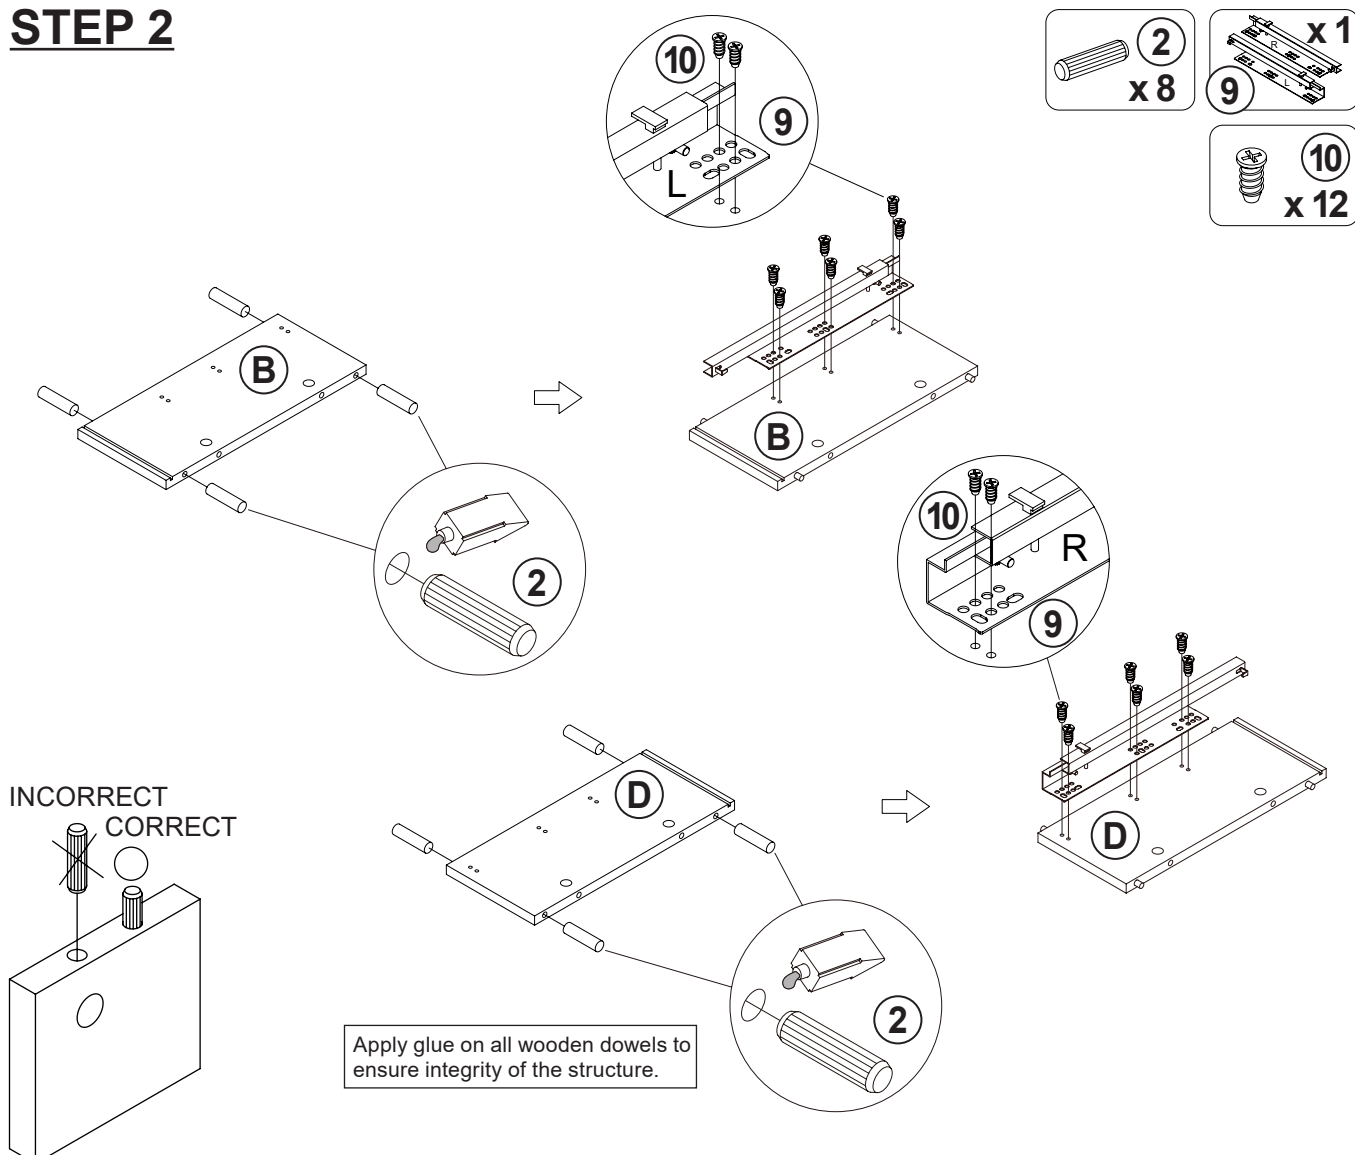


ITEM: **704251**

STEP 3

 COASTER
FINE FURNITURE

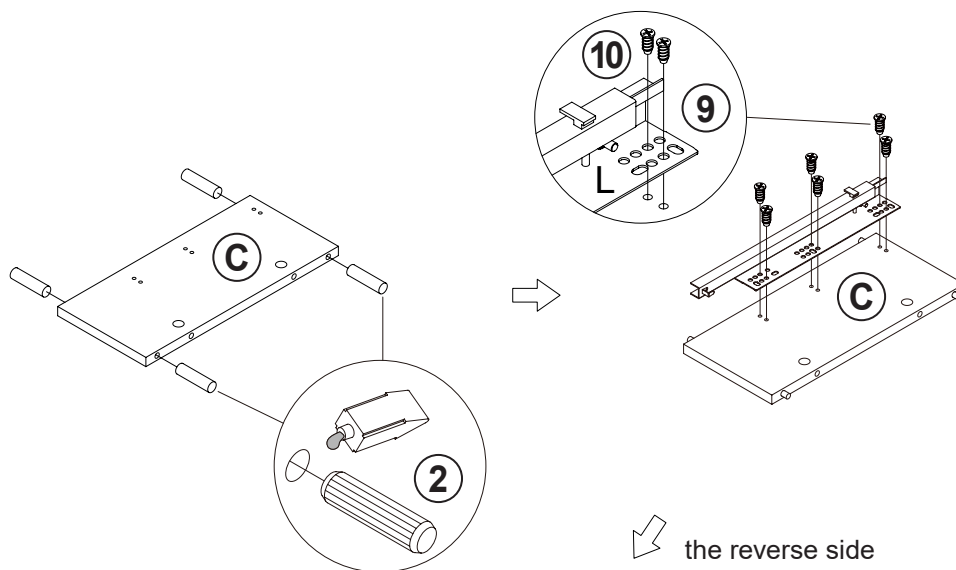


 Apply glue on all wooden dowels to ensure integrity of the structure.

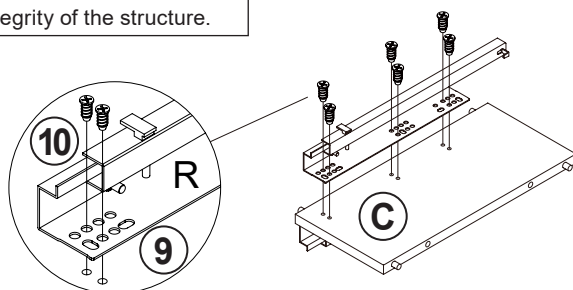

the reverse side


 
STEP 4

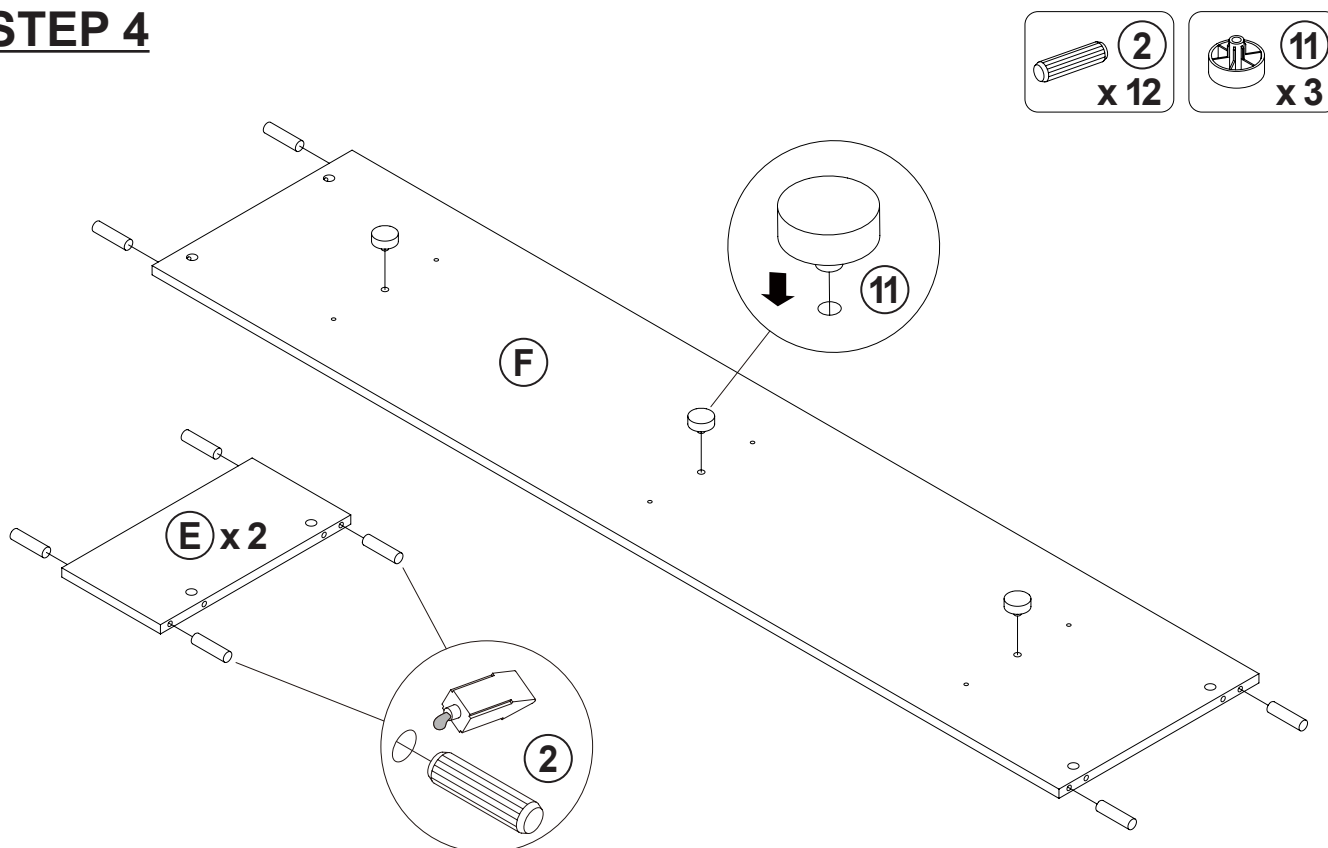



ITEM: 704251

STEP 5

  COASTER
FINE FURNITURE

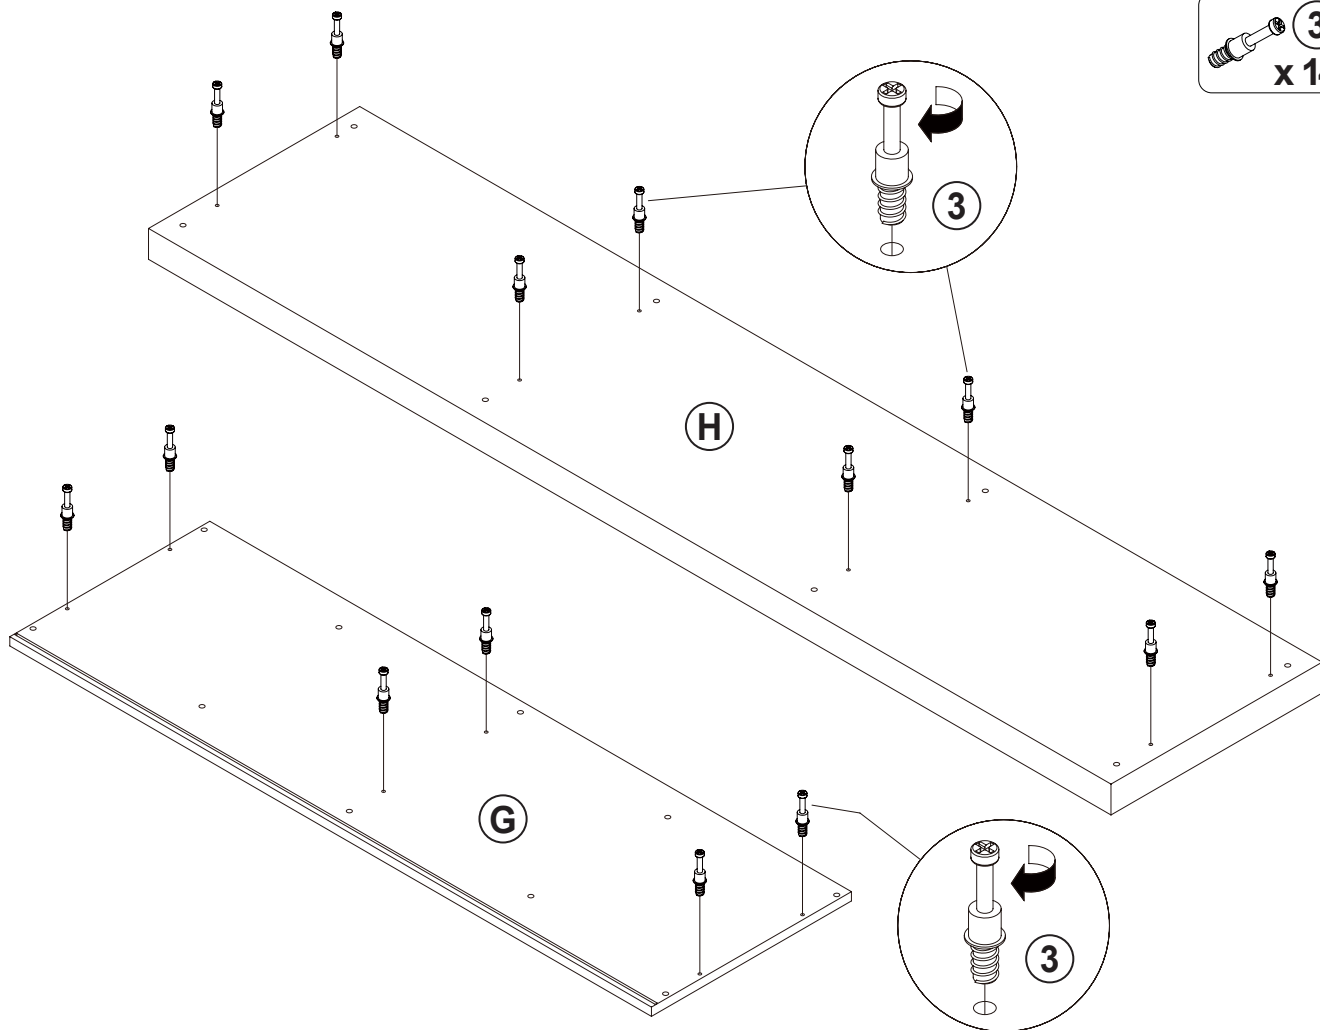

  STEP 6

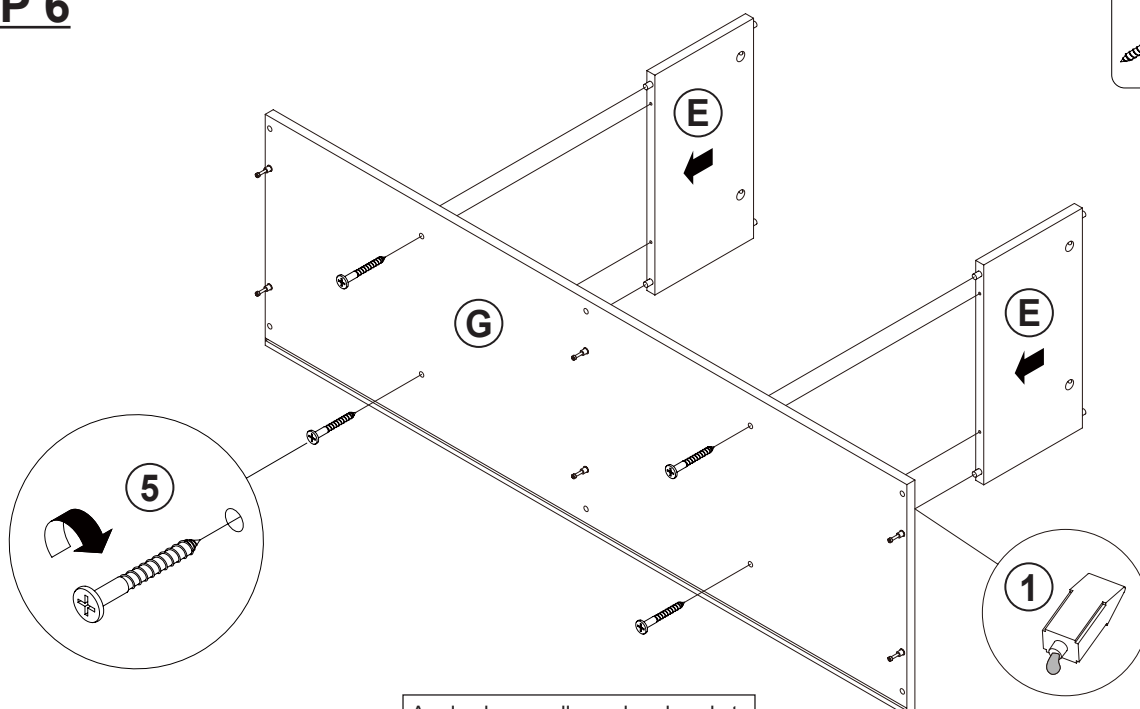



Apply glue on all wooden dowels to ensure integrity of the structure.




ITEM: 704251

STEP 7

  COASTER
FINE FURNITURE

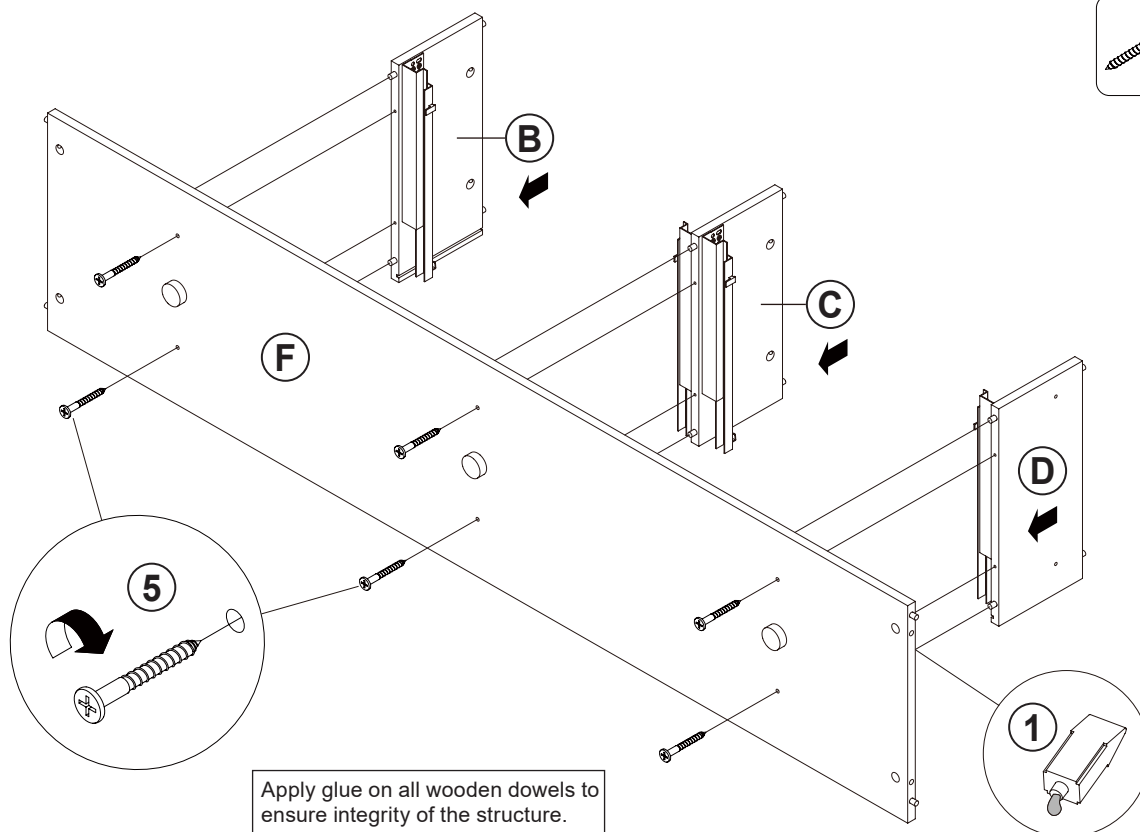

   
STEP 8

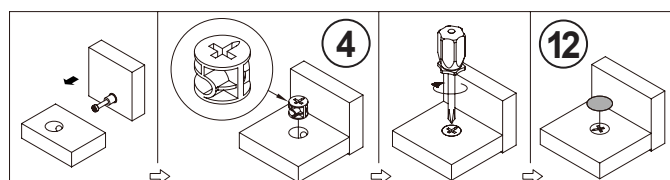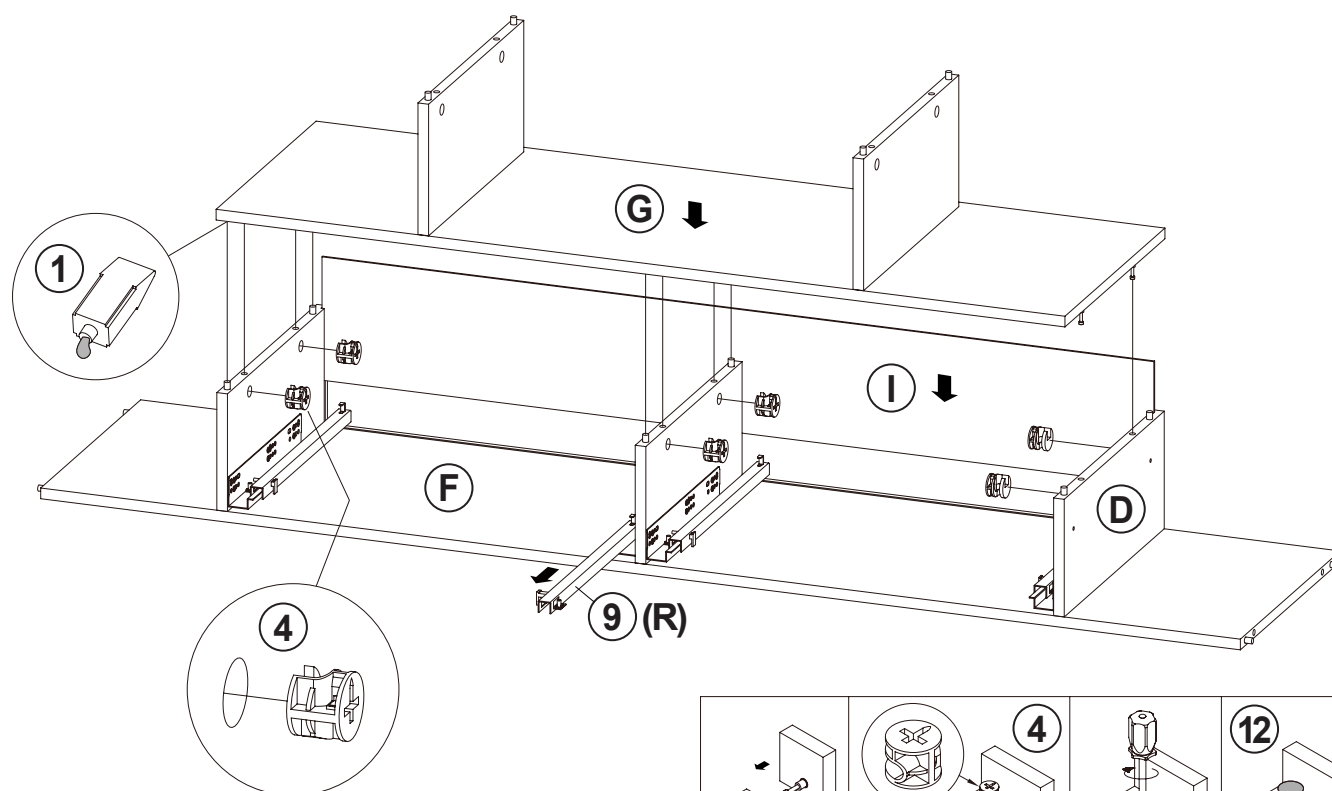


ITEM: 704251

COASTER
FINE FURNITURE

 STEP 9

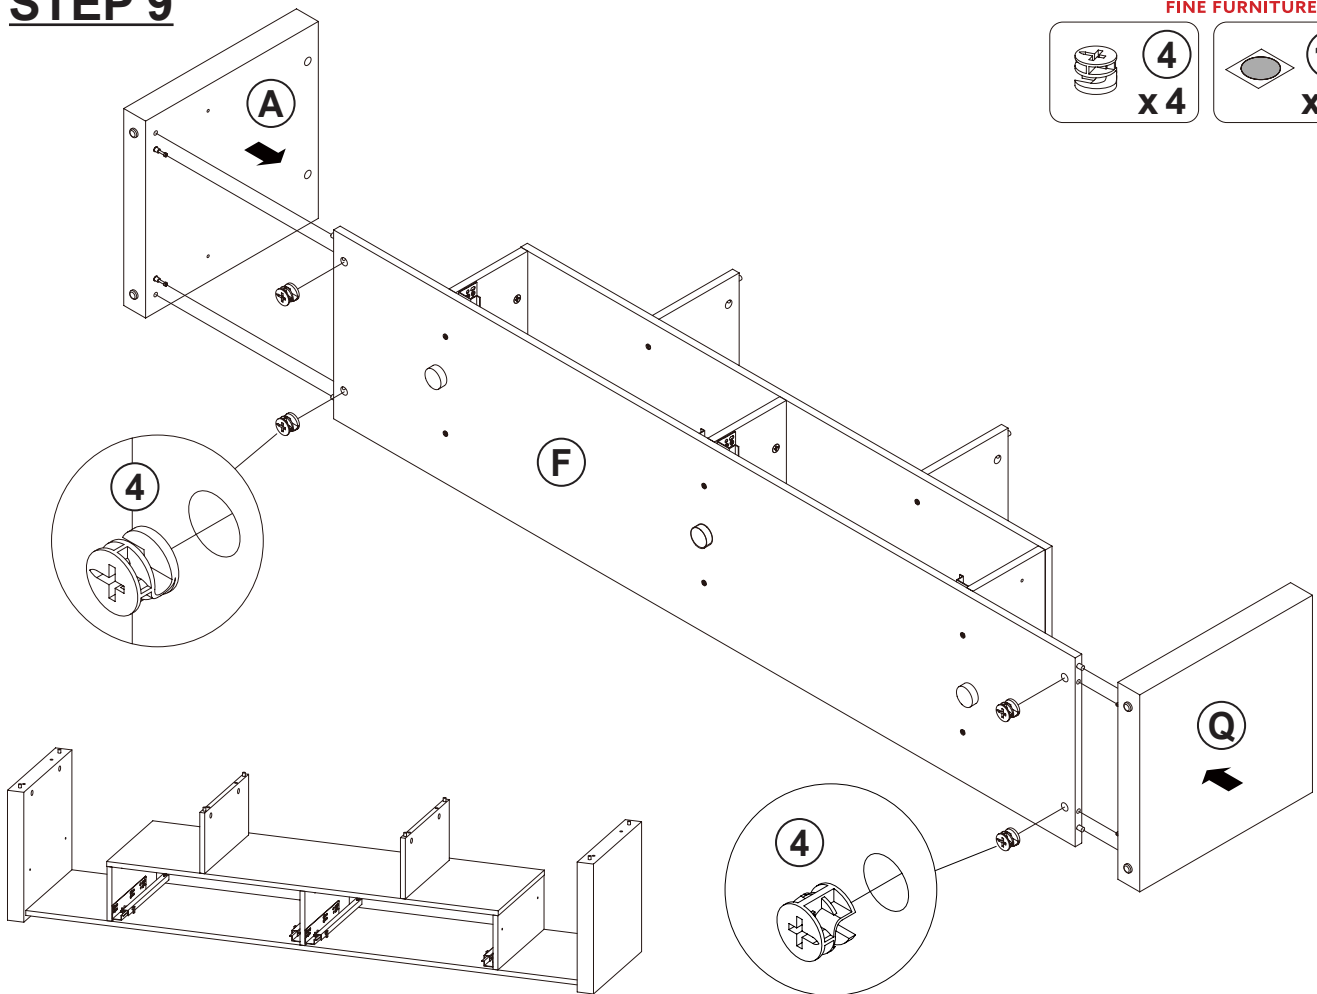


 STEP 10


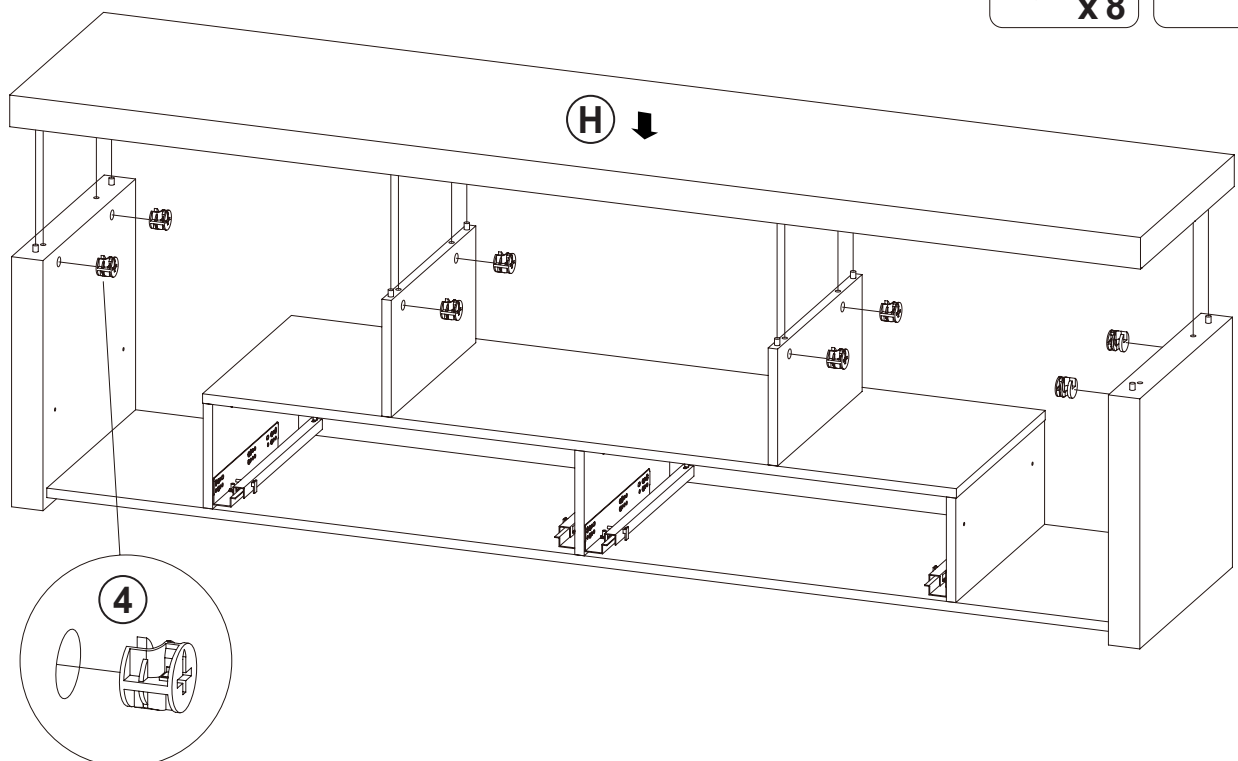


ITEM: 704251

 
STEP 11

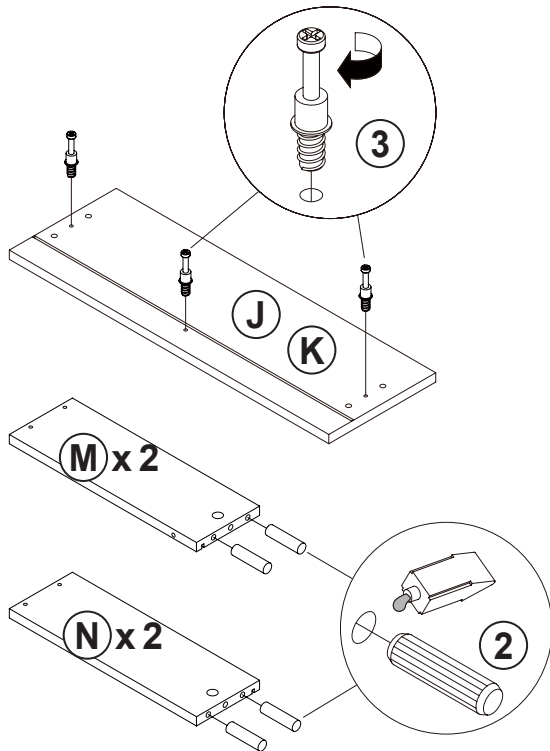

 
 
STEP 12

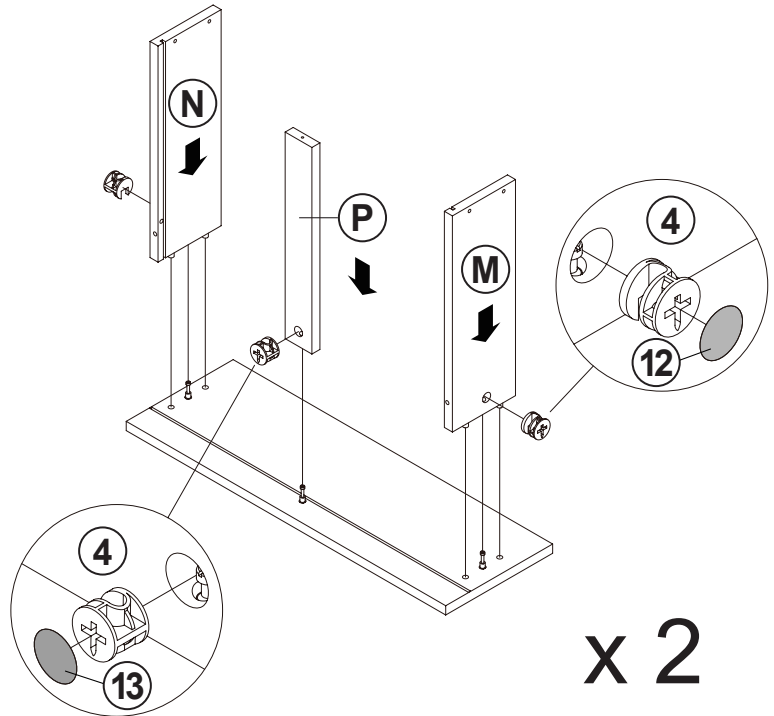

 STEP 13

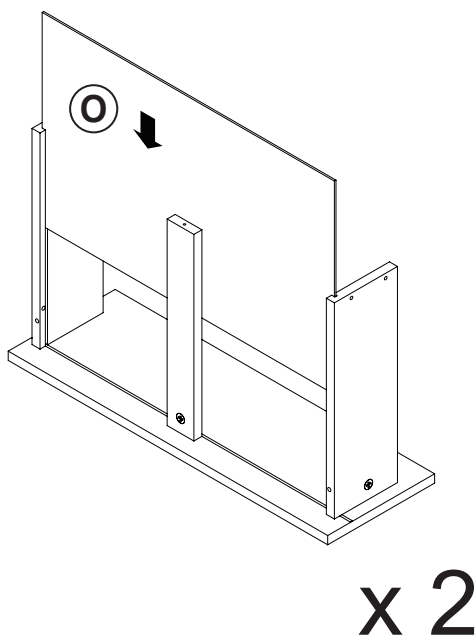

 
 
STEP 14

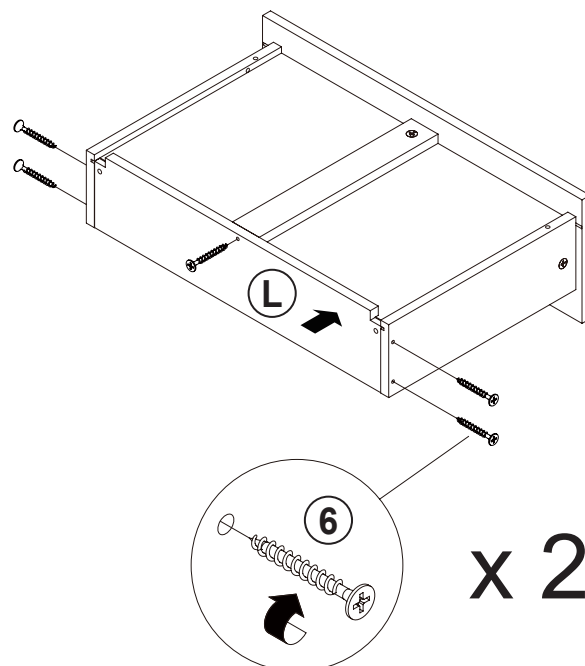







ITEM: **704251**

COASTER
FINE FURNITURE

 
 
STEP 15

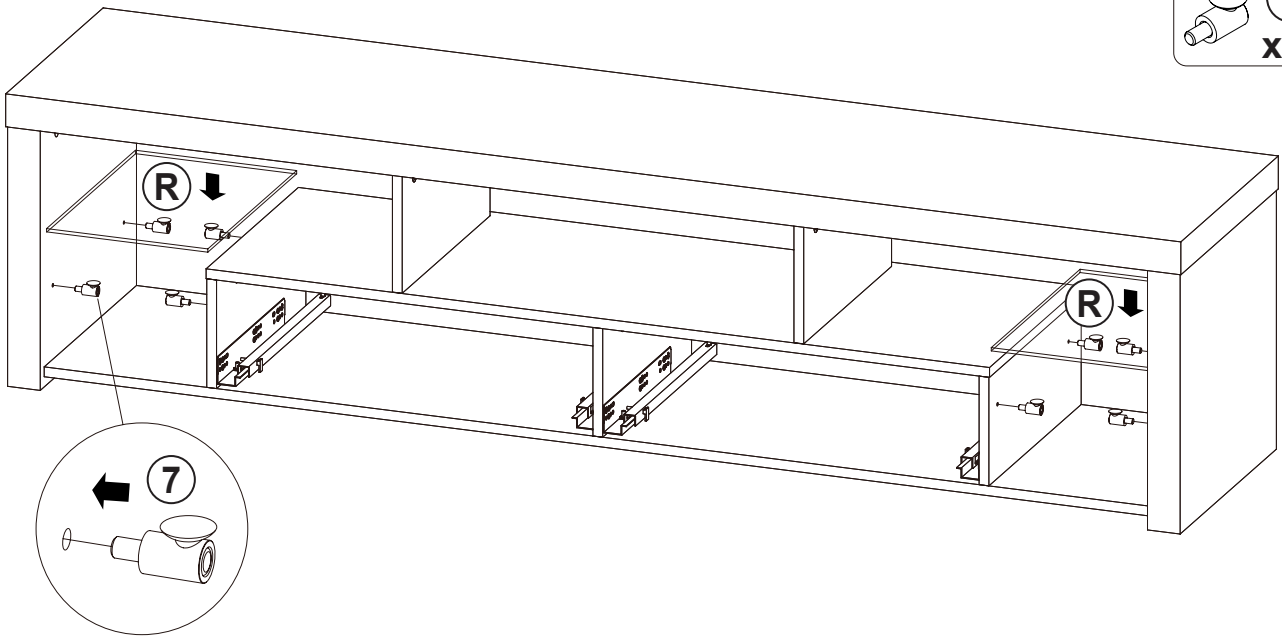

      STEP 16

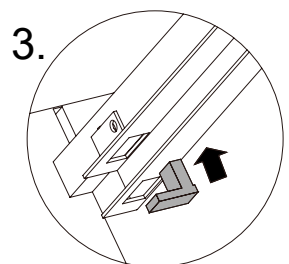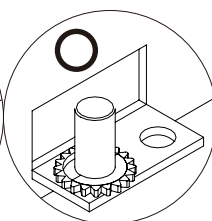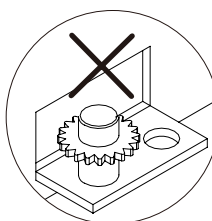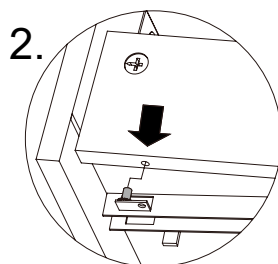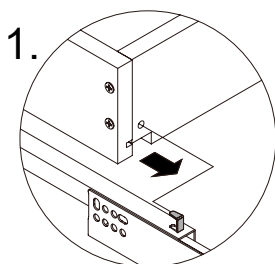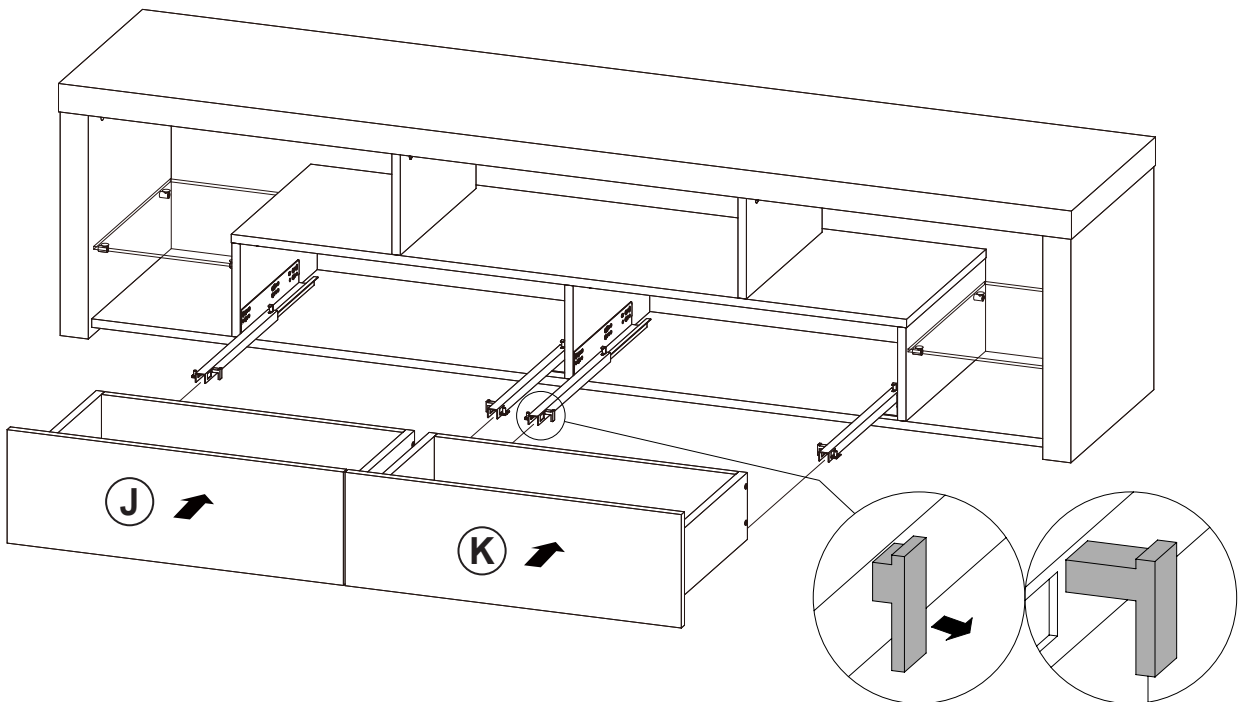

ITEM: 704251

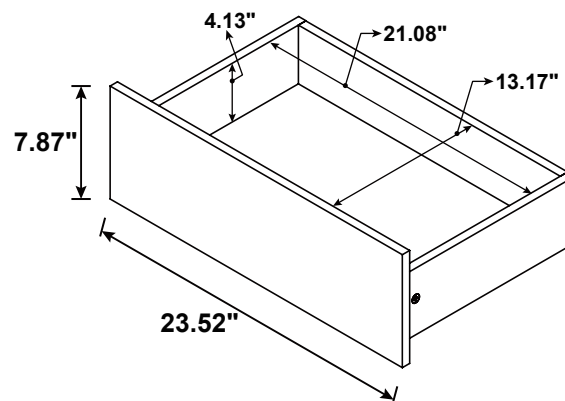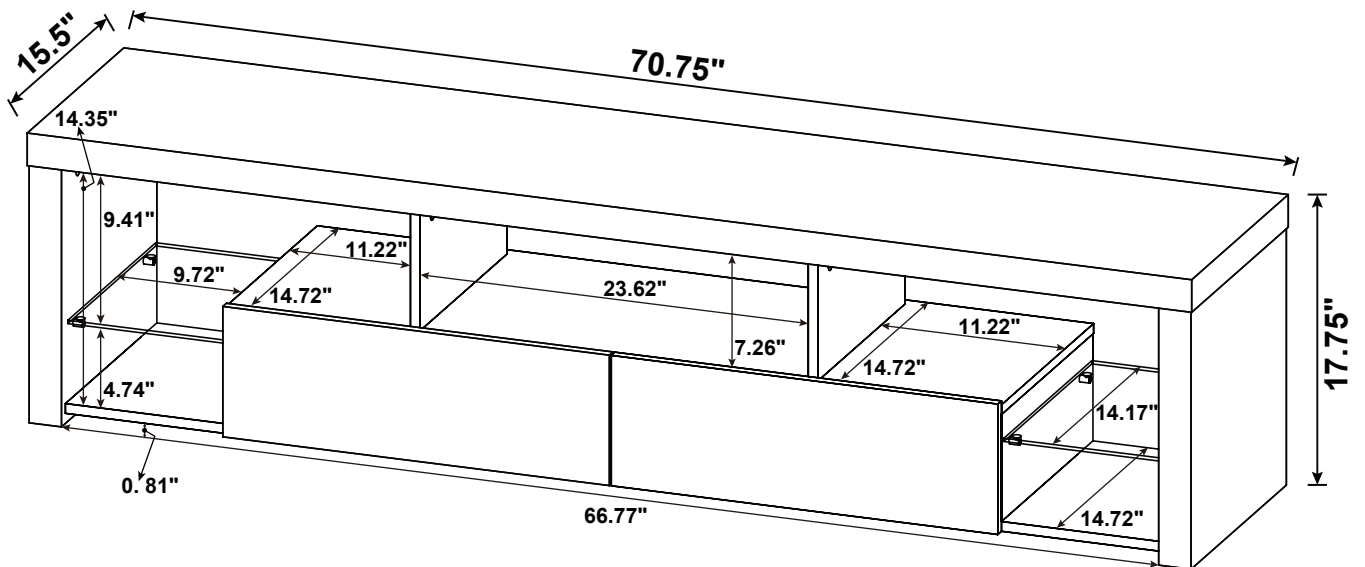  

Note : Dimension tolerance $\pm 5\%$