MEASURE FIRST LG LAUNDRY INSTALLATION GUIDE

You found the LG washer and dryer that fit your lifestyle—now make sure they fit your space. **These LG models are larger than typical front load washers and dryers**, so use this guide to ensure your purchase can be successfully delivered and installed.

WALK THE PATH



FIT THE SPACE

Your new LG washer and dryer pair requires a MINIMUM AREA of 60" W x 40.8" H x 37.3" D to allow for proper spacing

and venting. (If you add pedestals, the minimum height is 54.7")

	WIDTH	HEIGHT	DEPTH	DEPTH (door open)	HEIGHT (with pedestal)
Washer	29"	40.8"	32.3"	57"	54.7"
Dryer	29"	40.8"	32.3"	57"	54.7"

Be sure to check ALL dimensions, including depth, to ensure a proper fit.



CLEAR THE WAY

Prepare for a smooth delivery by dealing with potential obstacles now. Here are some helpful hints to try:

- If a doorway is too narrow or the door cannot be opened fully, remove the door. If the hinges are fixed pin hinges, they will need to be unscrewed to remove the door.
- For narrow stairs with hand rails, removing the railing may help you meet the minimum 30" clearance.
- **Double-check the depth.** If the laundry room isn't deep enough for the appliances **plus** the dryer duct, you may be able to use special venting components, such as a side vent kit, to reduce venting requirements. See associate for details.



Remember, if ANY part of the delivery path or final installation location is too small to fit this LG washer and dryer, and the obstructions can't be moved, you'll need to notify your retailer BEFORE your scheduled delivery date!

GET IT INSTALLED

To ensure your installation goes smoothly, here are some final items you'll need to have in place:



If your purchase includes installation, your LG washer and dryer will be unboxed, put in place, connected to the appropriate sources and leveled. Then they'll be tested to make sure that everything works correctly. All packing material will be removed and your home restored to its original condition.