

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE




Fine Furniture for every stage of life




REVISION 0 : 11/19/2020 REVISION 1 : 09/29/2022


PAGE 1 OF 6


COASTERFURNITURE.COM

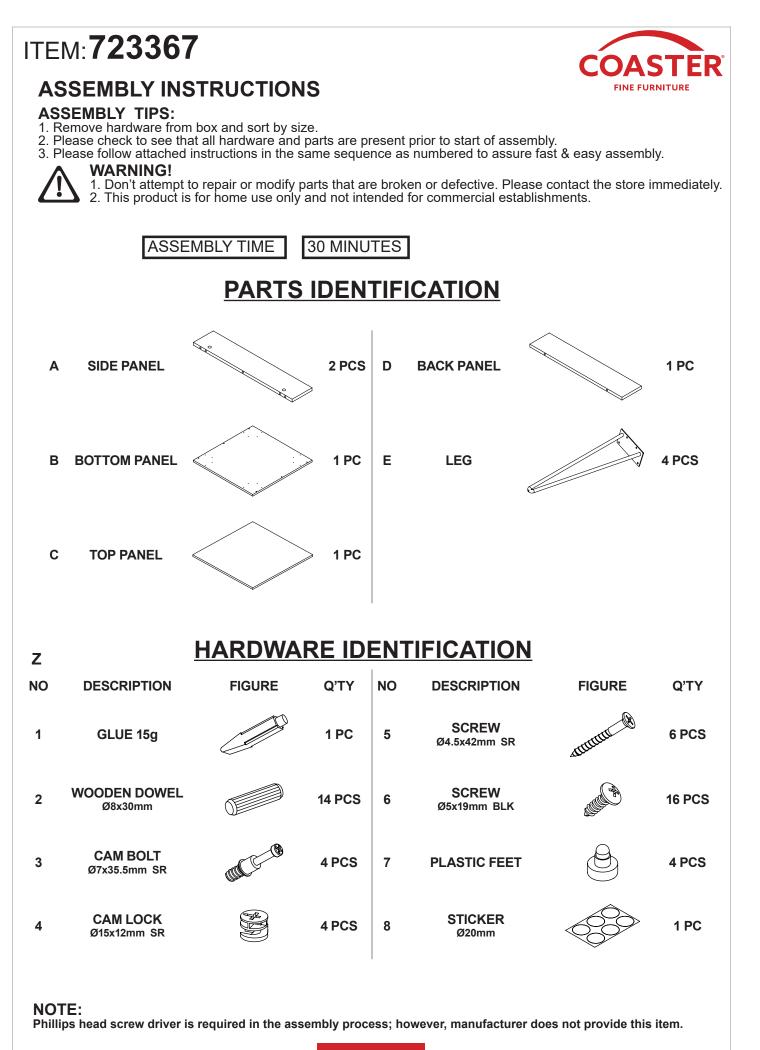


PAGE 2 OF 6

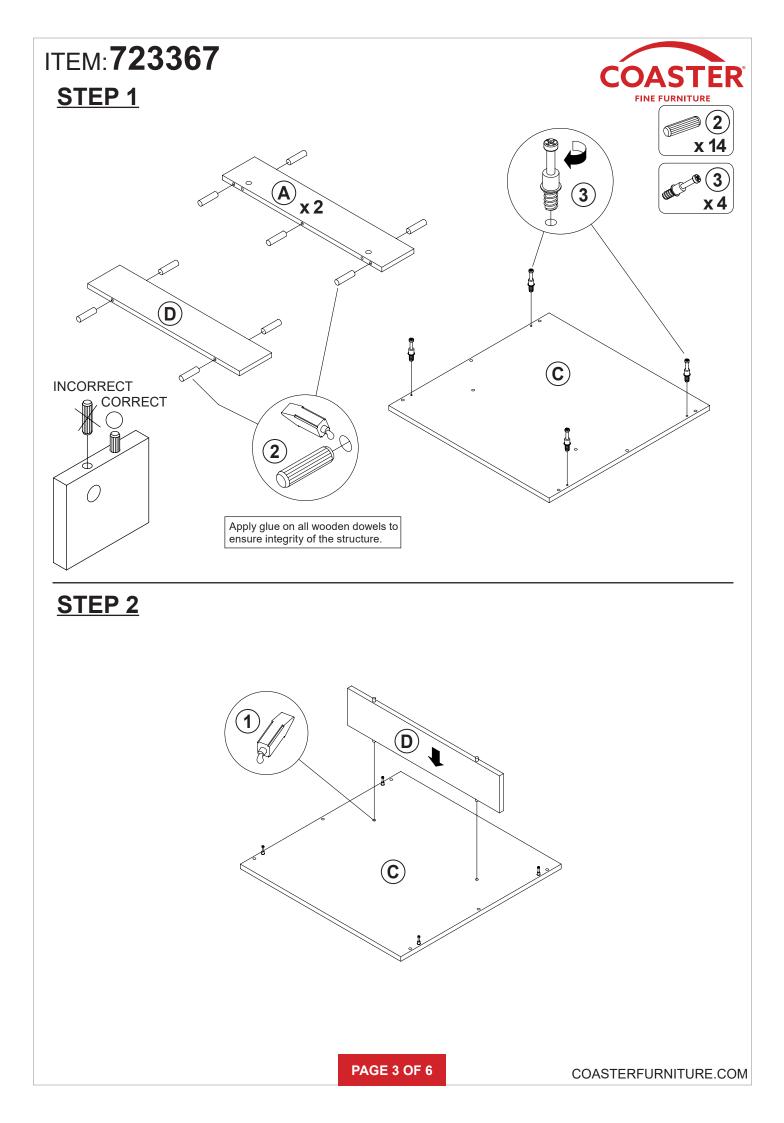

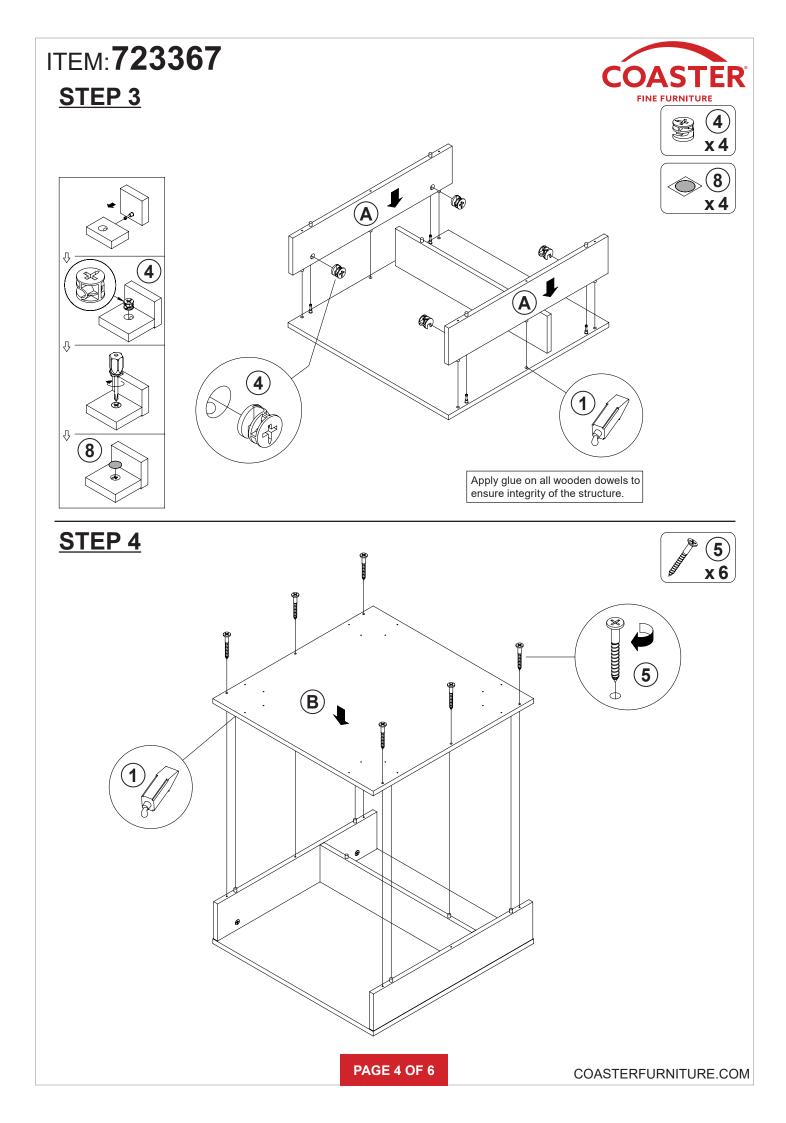

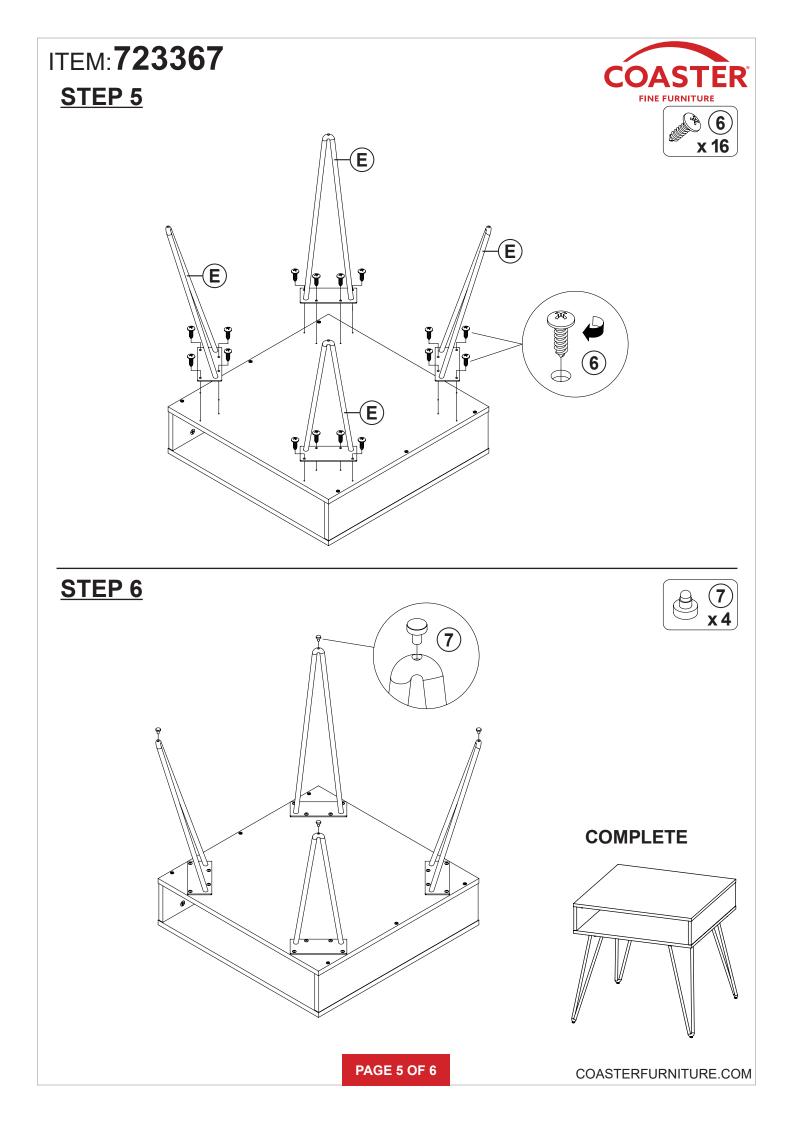


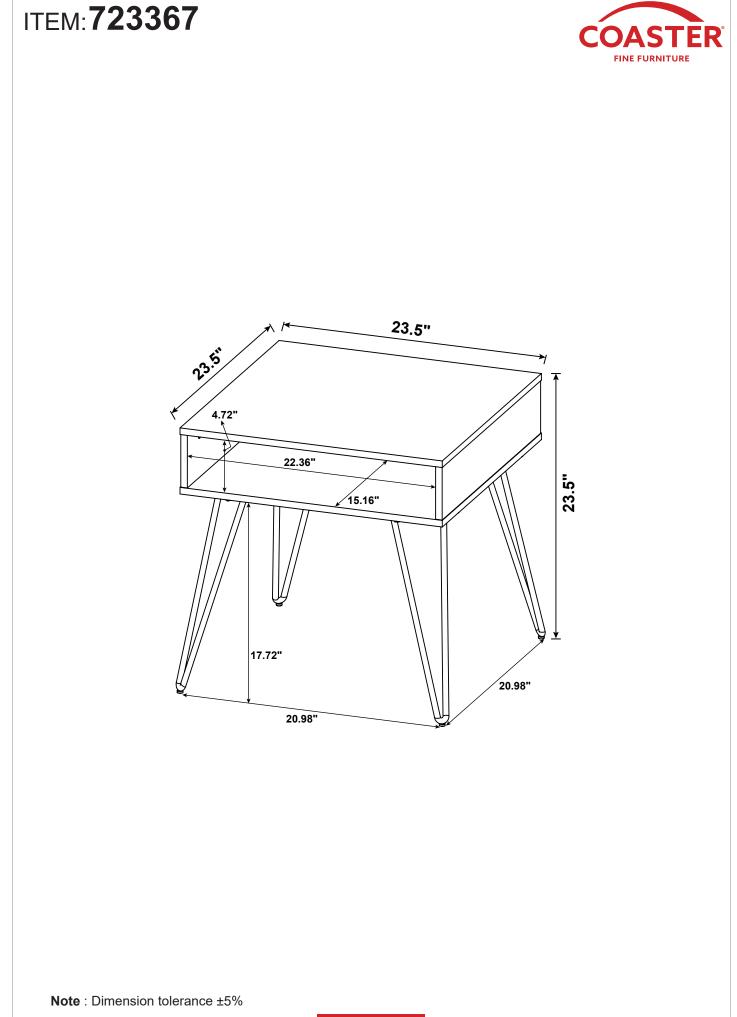

PAGE 6 OF 6



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

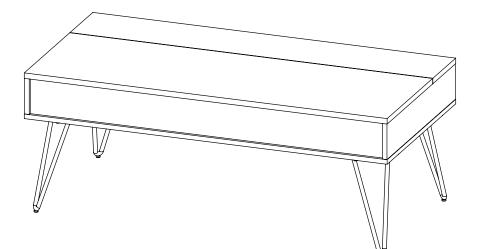

Fine Furniture for every stage of life



REVISION 0 : 11/19/2020 REVISION 1 : 09/23/2022 REVISION 2 : 01/18/2023

PAGE 1 OF 10

COASTERFURNITURE.COM

# ITEM:723368



### **ASSEMBLY INSTRUCTIONS**


#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

# WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments. ASSEMBLY TIME 60 MINUTES



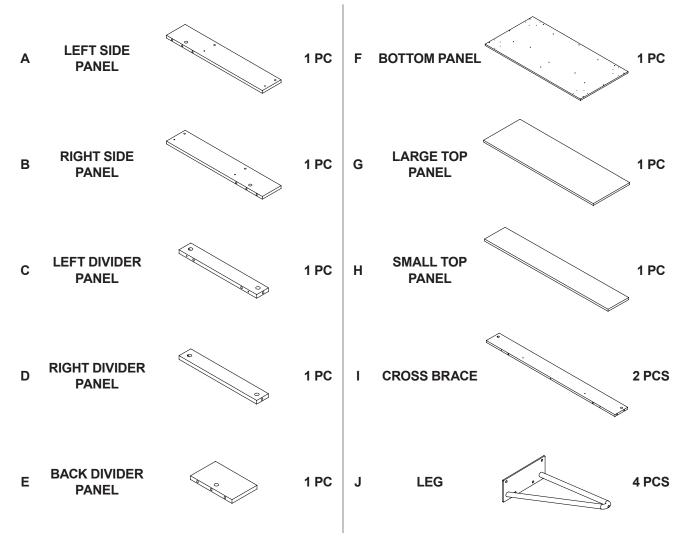

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

**PAGE 2 OF 10** 

# ITEM:723368



### **HARDWARE IDENTIFICATION**

Z NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g	Ø	1 PC	9	CROSSBAR L=600mm BLK		1 PC
2	WOODEN DOWEL Ø8x30mm		24 PCS	10	BOLT Ø5.8x16mm BLK		12 PCS
3	CAM BOLT Ø7x35.5mm SR	al C-O	11 PCS	11	BOLT M6x28mm BLK		4 PCS
4	CAM LOCK Ø15x12mm SR	ALL A	11 PCS	12	BOLT M6x15mm BLK		4PCS
5	SCREW Ø4.5x42mm SR		17 PCS	13	ALLEN WRENCH 4mm SR		1 PC
6	SCREW Ø5x19mm BLK		16 PCS	14	STICKER Ø20mm		2 PCS
7	PLASTIC FEET		4 PCS				
8	LIFTER BLK	R Color	1 SET				
Z8,Z9 not included in blister packaging.							
NOTE: Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.							

PAGE 3 OF 10

