

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

801404 Writing Desk

REVISION 0: 22/12/2021

PAGE 01 OF 07

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING !

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

25 MINUTE

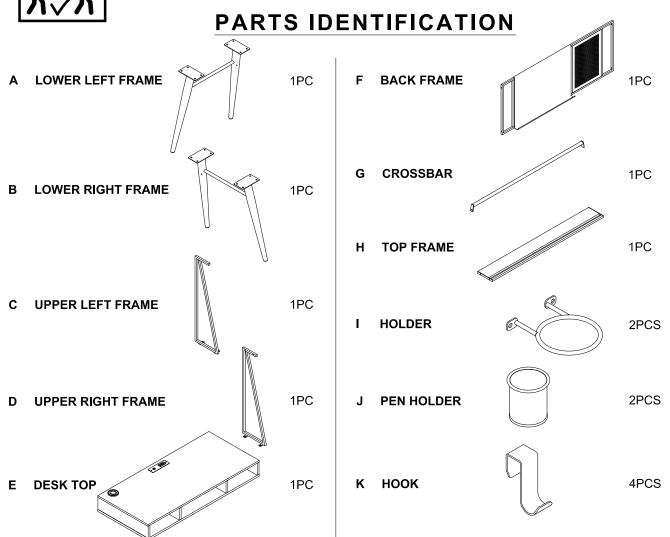


HARDWARE IDENTIFICATION

1	BOLT (1/4"x1/2" - BLK)	22Pcs	4	WASHER (ø16mm - BLK)	20PCS
2	BOLT (1/4"x7/8" - BLK)	4PCS	5	ALLEN KEY (4x22x60mm - WHT)	1PC
3	BOLT (3/16"x1/2" - BLK)	8PCS			

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

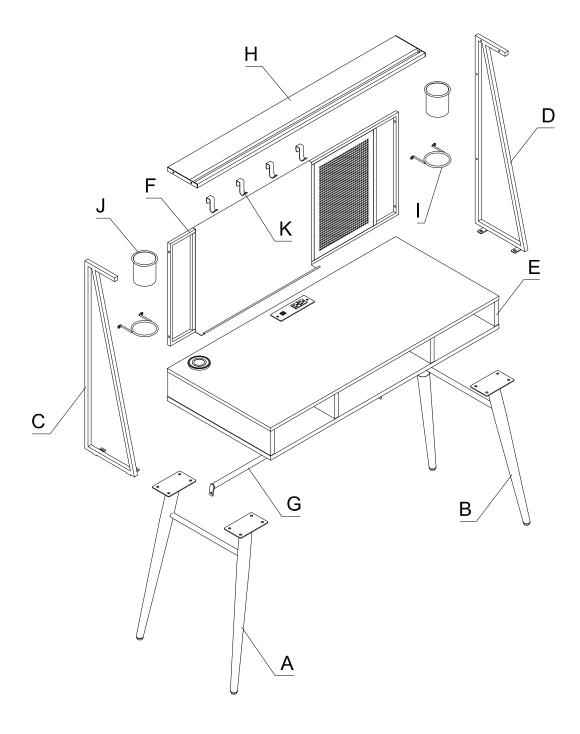



ASSEMBLY INSTRUCTIONS


STEP 1:

ASSEMBLY

 Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.




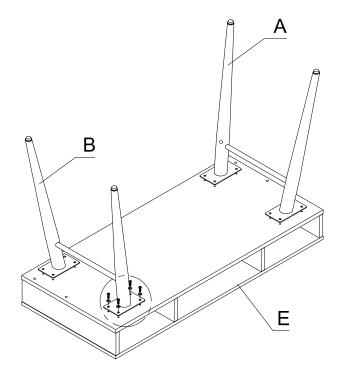


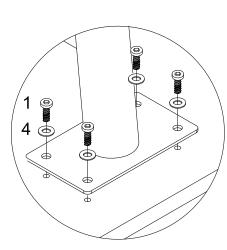


STEP 2:




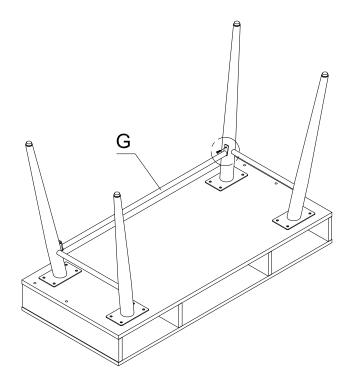


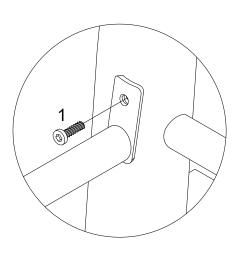


PAGE 04 OF 07

 

 


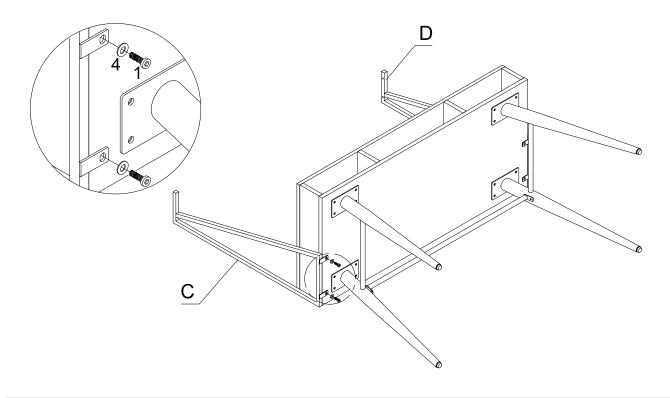


STEP 4:

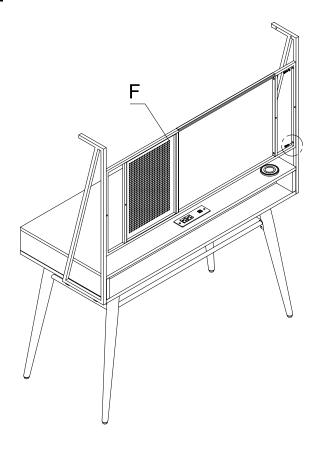




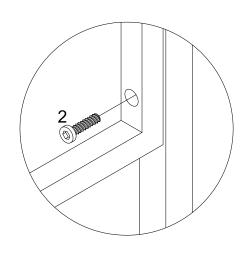


PAGE 05 OF 07

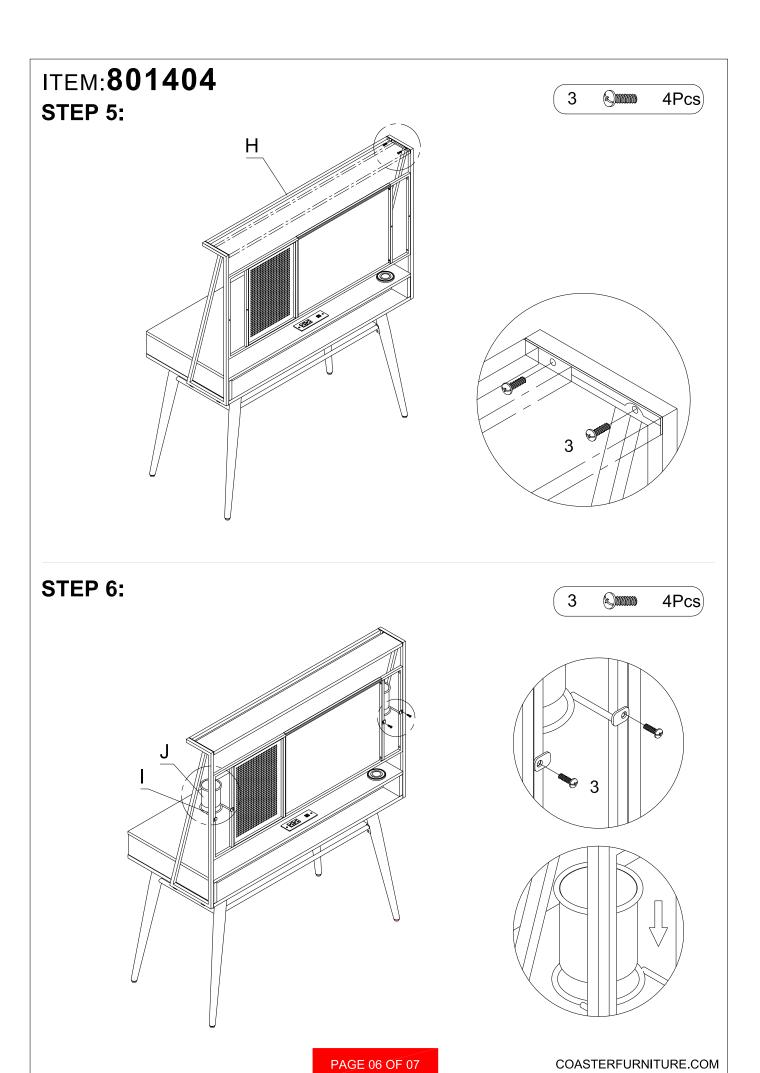


STEP 7:

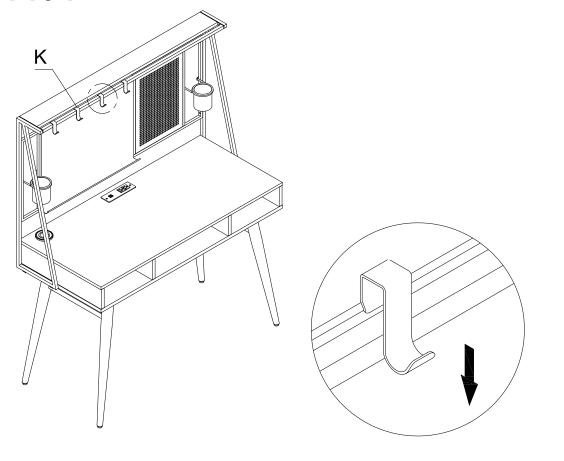

STEP 8:

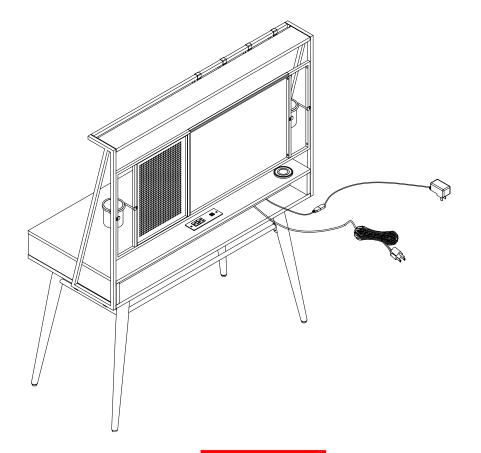



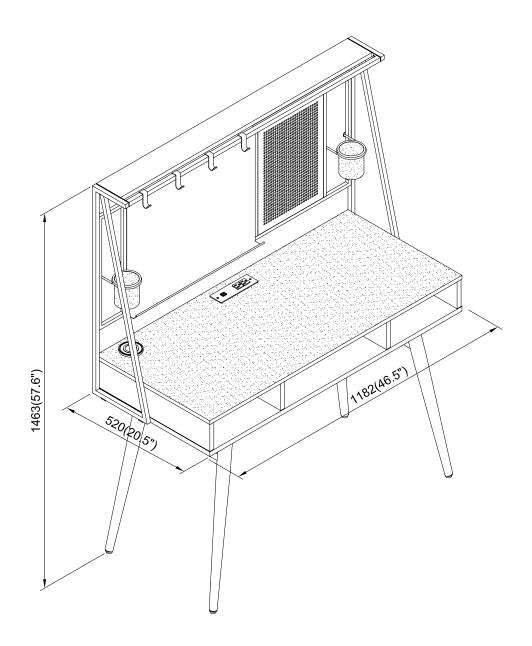

Note: Dimension tolerance ±5%