

ASSEMBLY INSTRUCTION

COUNTER HEIGHT CHAIR

1720S-24

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person, this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.
4. Please do not fully tighten any screws or bolts until last step.
5. Periodically check to ensure that all connectores (bolts,screw,etc) are tight.

PART LIST

No.	PART		Q'TY
A	CHAIR BACK		1
B	SEAT CUSHION		1
C	FRONT LEG		2
D	FRONT STRETCHER		1
E	RIGHT STRETCHER		1
F	LEFT STRETCHER		1

 
HARDWARE LIST

No.		PART	Q'TY
1		ALLEN BOLT Ø5/16"x83mm	4
2		ALLEN BOLT Ø5/16"x57mm	4
3		ALLEN BOLT Ø5/16"x45mm	2
4		SPRING WASHER (5/16 "x13mm)	10
5		FLAT WASHER (5/16 "x19mm)	10
6		SCREW 38mm	6
7		ALLEN KEY M5 x 65mm	1




Only tighten all bolts when all bolts aligned with bolt inserts.


TOOLS REQUIRED (NOT PROVIDED)

 Phillips Screw Driver


STEP 1

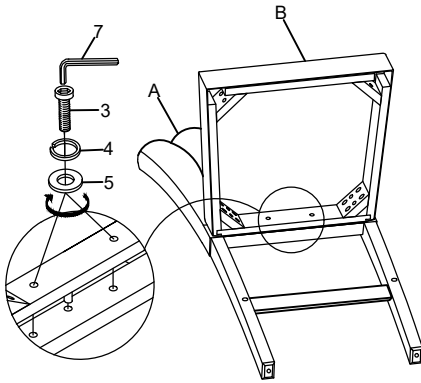


STEP 2

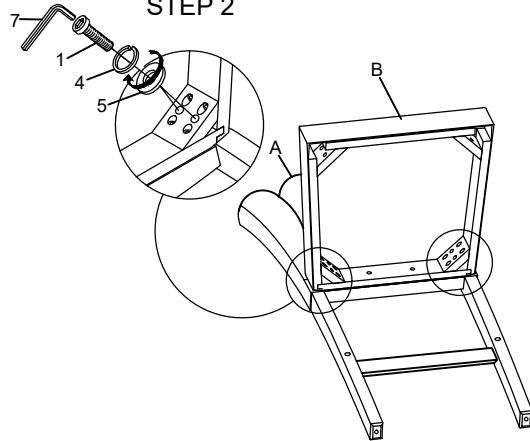

STEP 3

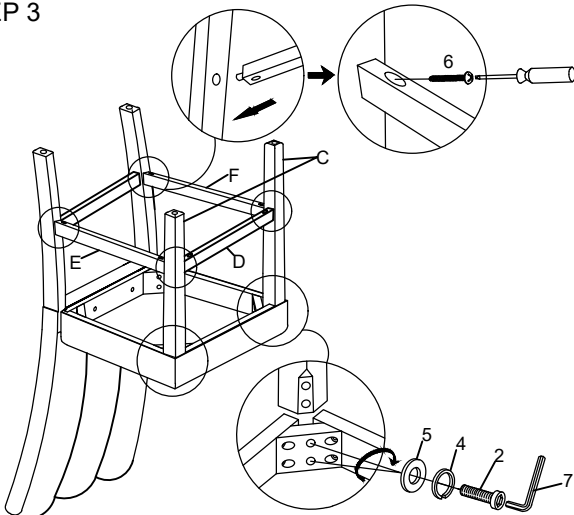

STEP 4: Completed

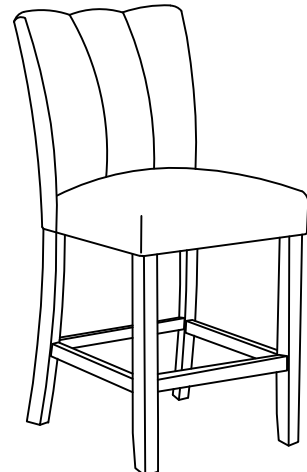

NOTE : Periodically check to ensure that all connectors (bolt, screws, etc.) are tight.