 


CROSLEY

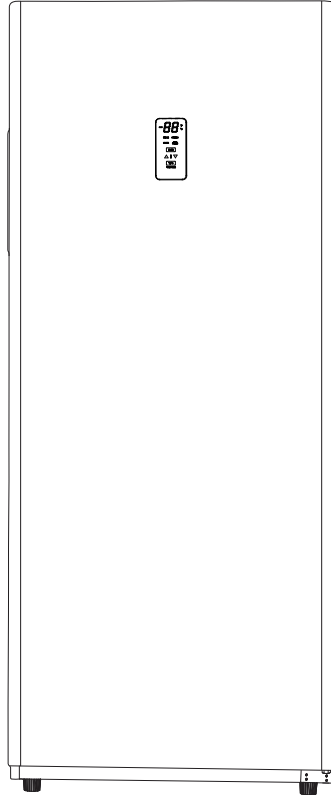

MODEL • MODÉLE • MODELO

UFX17AW/CUFX17AB

This product has been manufactured and sold under the responsibility of The Crosley Group, Inc.
Old Hwy 58,
Cedar Point, NC 28584
Crosley is a registered trademark of The Crosley Group, Inc.
© 2007-2025 The Crosley Group, Inc. All rights reserved.



Important Safety Information

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

SAFETY REQUIREMENTS

DANGER: Risk of fire or explosion. Flammable refrigerant used. Do not puncture refrigerant tubing.

- Do not use mechanical devices to defrost refrigerator.
- Ensure that servicing is done by factory authorized service personnel, to minimize product damage or safety issues.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

CAUTION: Risk of fire or explosion. Flammable refrigerant used.

- Consult repair manual or owner's guide before attempting to service this product. All safety precautions must be followed.
- Dispose of properly in accordance with federal or local regulations.
- Follow handling instructions carefully.

CAUTION: Children should be supervised to ensure that they do not play with the appliance.

DANGER: Risk of child entrapment. Before throwing away an old appliance:

- Remove the door or lid.
- Leave shelves in place so that children may not easily climb inside.

SAFETY REQUIREMENTS

This appliance is not intended for use by persons (including children) whose physical, sensory or mental capabilities may be different or reduced, or who lack experience or knowledge, unless such persons receive supervision or training to operate the appliance by a person responsible for their safety.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance

This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

NOTE If the manufacturer wants to limit the use of the appliance to less than the above, this has to be clearly stated in the instructions.

GROUNDING INSTRUCTIONS

This appliance must be grounded. Grounding reduces the risk of electrical shock by providing an escape wire for the electrical current.

This appliance has a cord that has a grounding wire with a 3-prong plug. The power cord must be plugged into an outlet that is properly grounded. If the outlet is a 2-prong wall outlet, it must be replaced with a properly grounded 3-prong wall outlet. The serial rating plate indicates the voltage and frequency the appliance is designed for.

WARNING - Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service agent if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

Do not connect your appliance to extension cords or together with another appliance in the same wall outlet. Do not splice the power cord. Do not under any circumstances cut or remove the third ground prong from the power cord. Do not use extension cords or ungrounded (two prongs) adapters.

If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified person in order to avoid hazard.

SAVE THESE INSTRUCTIONS!

INSTALLATION INSTRUCTIONS

 
LOCATION

- Two people should be used when moving the appliance.
- Remove interior and exterior packaging prior to installation. Wipe the outside of the appliance with a soft, dry cloth and the inside with a lukewarm wet cloth.
- Place the appliance on a floor that is strong enough to support it when it is fully loaded.
- Do not place the appliance in direct sunlight or near sources of heat, such as a stove or heater, as this can increase electrical consumption. Extreme cold ambient temperatures may also cause the appliance to perform improperly.
- Do not use the appliance near water, for example in a wet basement or near a sink.
- This appliance is intended for household use only. It is not designed for outside installation, including anywhere that is not temperature controlled (garages, porches, vehicles, etc.).
- Before connecting the appliance to a power source, let it stand upright for approximately 6 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Make sure that you leave the minimum amount of space between the appliance and all surrounding walls and vents. Do not cover any of the ventilation openings with any material as the appliance needs adequate space to breathe.
- Allow 5 inches (12.7 cm) of space between the back, sides and top of the appliance and all adjacent walls.
- This appliance is intended for free-standing installation only and is not intended to be built into a cabinet or counter. Building in this appliance can cause it to malfunction.

OPERATING INSTRUCTIONS

FEATURES


1. Display panel (FRONT)
2. Air Vents
3. Glass shelf1
4. Glass shelf2
5. Lower drawer
6. Adjustable Feet
7. Door shelf

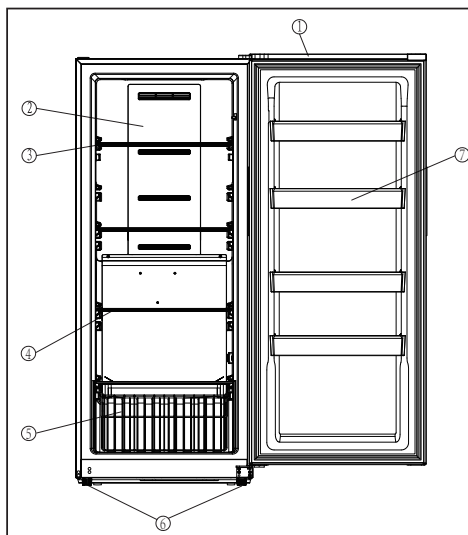

LEVELING INSTRUCTIONS


There are two adjustable legs on the bottom of the appliance that can be turned up or down to ensure that the appliance is level.

 1. Turn the leveling leg counter-clockwise as far as it will go, until the top of the foot is touching the bottom of the chassis.
2. Slowly turn the leveling leg clockwise until the appliance is level.

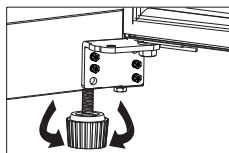

OPERATING INSTRUCTIONS

 CONTROL PANEL

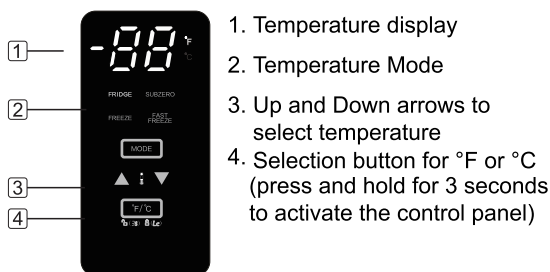

1. Temperature display
2. Temperature Mode
3. Up and Down arrows to select temperature
4. Selection button for °F or °C (press and hold for 3 seconds to activate the control panel)

LOCK ICON

The control panel default mode is unlocked. Press and hold the °F/ °C button for 3 seconds to lock or unlock the control panel manually.

TEMPERATURE SETTING

This appliance can be used as either a refrigerator or a freezer. The table below shows the MODE and temperature ranges. Select the MODE. Then set the desired temperature by pressing the Up and Down arrows on the Control Panel. The temperature increases or decreases in one degree increments. The display window will show the selection.

TEMPERATURE SCALE

"FRIDGE": 32°F ~ 46°F (0°C ~ 8°C)

"SUBZERO": 18°F ~ 25°F (-8°C ~ 4°C)

"FREEZE": -11°F ~ 7°F (-24°C ~ -14°C)

"FAST FREEZE": -18°F (-28°C)

OPEN DOOR ALARM

This appliance is equipped with a door alarm that will sound if the door is left open for more than 3 minutes. The alarm will beep and the display will flash continuously until the door is closed.

Sabbath Mode

 
To activate Sabbath Mode, press and hold the "MODE" button for 5 seconds, "SA" will be displayed and kept displayed in low brightness.

When the appliance is in Sabbath Mode, the appliance will continue to cool according to the mode and temperature previously set by user, the interior light will turn off and stay off, the buttons do not function, all error codes and alarm signals will not appear.

To deactivate Sabbath Mode, press and hold the "MODE" button again for 5 seconds.

NOTE

Once it is activated manually, the Sabbath Mode will be deactivated automatically after 80 hours. If the appliance powers off and restarts (for example, if there is a power failure), the Sabbath Mode remains active.

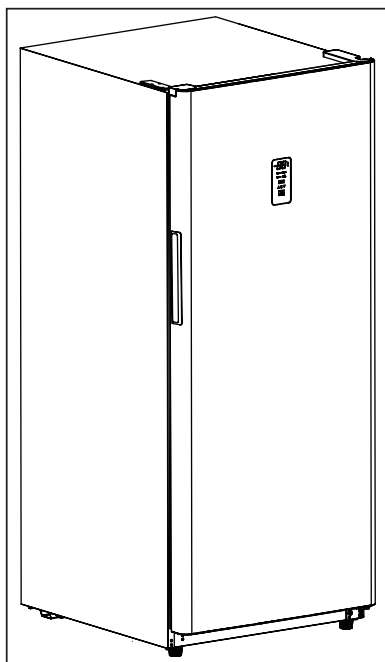


DOOR REVERSAL INSTRUCTIONS

If the appliance is placed on its back or side for any length of time during this process, it must be allowed to remain upright for 6 hours before plugging it in to avoid damage to the internal components.


WARNING: Before door reversal, make sure to unplug the unit and place the door face up. To avoid personal and property damage, replace the door with two persons. It is suggested to replace the door by authorized service personnel. Please keep the removed parts for the door reversal and close the door tightly.

STEP1 Replace upper door hinge

 
1. Remove the hinge cover and hinge on the top right. Remove the terminal of the wiring from cabinet. Remove the covers from the top left side of the cabinet.

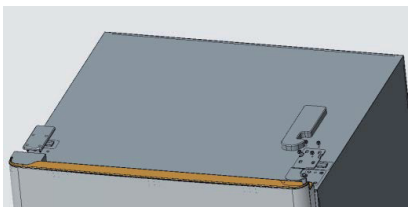

 2. Remove the wire cover and fixing box on left door top. Get out the cover and fixing box for right side from the accessory bag. Fix the wire in the box and then cover it. Fix the cover taking off from top left side of cabinet to right side.

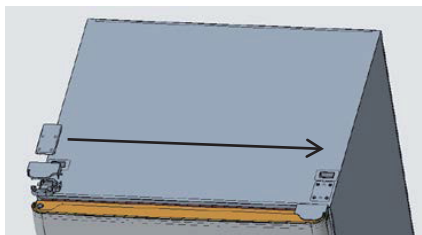


 3. Get out hinge cover and hinge of top left and fix them on the left of cabinet. Install the terminal of the wiring and cover the hinge cover.

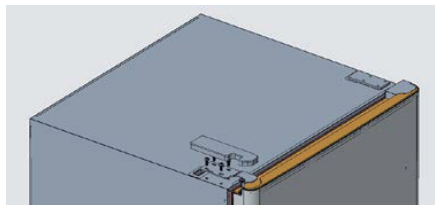


STEP2 Replace bottom door hinge

 
1. Remove four bolts and bottom hinge. Unscrew the door shaft nut, move the door shaft to the hinge left and tighten, and remove 4 cap nails of the other end.

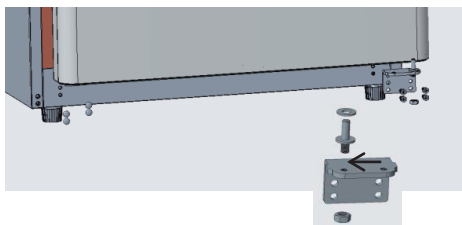

 2. Remove the door limit block on the right of the door and then install it to the left end of the door and fix it.

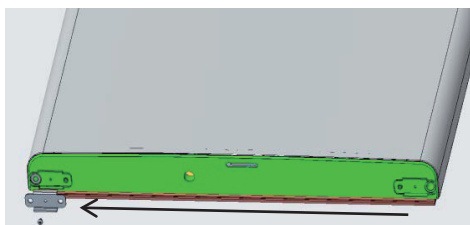

 3. Install the lower hinge where the hinge shaft has been replaced on the left of cabinet with four screws and tighten it. Plug the four holes at the right with cap nails.

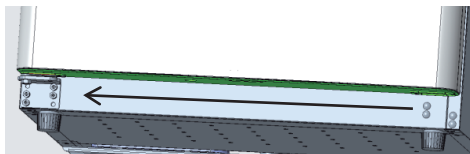

Finally, check whether the two sides of the door are in line with the cabinet. If necessary, adjust the adjusting foot in the front of the unit so that the product is completely horizontal. After replacing the door, place the unit vertically and let it stand for four hours before power on.

CARE & MAINTENANCE

CLEANING

Ensure the appliance is unplugged before cleaning.

- To clean the inside of the appliance, use a soft cloth and a solution of a tablespoon of baking soda to one quart of water or a mild soap solution or some mild detergent.
- Wash removable shelves in a mild detergent solution, then dry and wipe with a soft cloth.
- Clean the outside with a soft, damp cloth and some mild detergent.
- It is important to keep the area clean where the door seals against the cabinet. Clean this area with a soapy cloth. Rinse with a damp cloth and let dry.

Note: Do not use cleaners containing ammonia or alcohol on the appliance. Ammonia or alcohol can damage the appearance of the appliance. Never use any commercial or abrasive cleaners or sharp objects on any part of the appliance.

POWER FAILURE

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, take the proper steps to protect your contents.

Note: Wait 3 to 5 minutes before attempting to restart the refrigerator if operation has been interrupted.

DEFROST

This unit is equipped with an automatic defrost function and does not require manual defrosting. Defrost water from the appliance is channeled into a drip tray located above the compressor. Heat transfer from the compressor causes the defrost water to evaporate.

ERROR CODES

- E1: The freezer sensor failure
- E2: Freezer defrosting sensor failure
- E3: The freezer sensor failure and freezer defrosting sensor failure
- C0: Communication failure
- dr: Door opening alarm
- H1: The freezer heater failure

VACATION

- **Short vacations:** Leave the appliance operating during vacations of less than three weeks.
- **Long vacations:** If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly, blocking it open if necessary.

ENERGY SAVING TIP

The appliance should be located in the coolest area of the room, away from heat producing appliances, and out of direct sunlight. Do not overload the unit or block any ventilation openings.

MOVING

- Remove all items.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also protect the outside of the appliance with a blanket or similar item.
- If the appliance is placed on its back or side during transportation, upon reaching the destination, allow it to remain in its operating position for 6 hours to avoid damage to internal components.

DISPOSAL

This appliance may not be treated as regular household waste, it should be taken to the appropriate waste collection point for recycling of electrical components. For information on local waste collection points, contact your local waste removal agency or government office.

TROUBLESHOOTING

M E L B O R P					E S U A C				
No power					• A fuse may be blown or the circuit breaker tripped • Plug not fully inserted into the wall outlet				
Internal temperature not cold enough					• Temperature setting is too warm • Door is not shut properly or opened excessively • Exhaust vent is obstructed • Recently added a large quantity of warm food to the cabinet • Close proximity to heat source or direct sunlight • Ambient temperature or humidity is very high				
Appliance runs continuously					• Temperature setting is too cold • Door not shut properly or opened excessively • Exhaust vent is obstructed • Recently added a large quantity of warm food to the cabinet • Close proximity to heat source or direct sunlight • Ambient temperature or humidity is very high				
Internal temperature is too cold					• Temperature setting is too cold				
Noises					• Parts are expanding and/or the refrigerant is circulating; this is normal				

CROSLEY MAJOR APPLIANCE LIMITED WARRANTY

ATTACH YOUR RECEIPT HERE. PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you call:

- Name, address and telephone number
- Model number and serial number
- A clear, detailed description of the problem
- Proof of purchase/delivery including dealer/retailer name and address

IF YOU NEED SERVICE:

1. Before contacting us to arrange service, please determine whether your product requires repair. Some questions can be addressed without service. Please take a few minutes to review the Troubleshooting or Problem Solver section of the Use and Care Guide.
2. All warranty service is provided exclusively by our authorized CrosleyCare Service Providers. In the U.S. and Canada, direct all requests for warranty service to:

CROSLEYCARE

call 1-844-CROSLEY (276-7539)

If outside the 50 United States or Canada, contact your authorized Crosley dealer to determine whether another warranty applies.

ONE YEAR LIMITED WARRANTY

WHAT IS COVERED

For one year from the date of purchase/delivery, when this major appliance is installed, operated and maintained according to instructions attached to or furnished with the product.

The Crosley Group, Inc. will pay for Factory Specified Replacement Parts and repair labor to correct defects in materials or workmanship that existed when this major appliance was purchased, or at its sole discretion replace the product. In the event of product replacement, your appliance will be warranted for the remaining term of the original unit's warranty period.

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. Service must be provided by a Crosley designated service company. This limited warranty is valid only in the United States or Canada and applies only when the major appliance is used in the country in which it was purchased. This limited warranty is effective from the date of original consumer purchase/delivery. Proof of original purchase/delivery date is required to obtain service under this limited warranty.

Initially, the Crosley appliance will be protected by the manufacturer's limited warranty. If failure should occur during this period, repair will be by the manufacturer. If at any time after the expiration of the manufacturer's limited warranty, but NOT MORE THAN TEN (10) YEARS AFTER THE DATE OF PURCHASE/DELIVERY OF THIS CROSLEY APPLIANCE, the component should become defective, you will be entitled to receive free of charge a replacement component of the same or substantially the same quality as the original manufacturer would have furnished during their limited warranty period. This extended limited warranty is being furnished by Crosley Extended Warranty (CEW) and has no relation to the manufacturer's original limited warranty.

WHAT IS NOT COVERED

1. Commercial, non-residential, multiple-family use, or use inconsistent with published user, operator or installation instructions.
2. In-home instruction on how to use your product.
3. Service to correct improper product maintenance or installation, installation not in accordance with electrical or plumbing codes or correction of household electrical or plumbing (i.e. house wiring, fuses or water inlet hoses).
4. Consumable parts (i.e. light bulbs, batteries, air or water filters, preservation solutions, etc.).
5. Conversion of products from natural gas or L.P. gas.
6. Damage from accident, misuse, abuse, fire, floods, acts of God or use with products not approved by Crosley.
7. Repairs to parts or systems to correct product damage or defects caused by discontinued service, alteration or modification of the appliance.
8. Cosmetic damage including scratches, dents, chips, and other damage to the appliance finishes unless such damage results from defects in materials and workmanship and is reported to Crosley within 30 days.
9. Discoloration, rust or oxidation of surfaces resulting from caustic or corrosive environments including but not limited to high salt concentrations, high moisture or humidity or exposure to chemicals.
10. Food or medicine loss due to product failure.
11. Pick-up or delivery. This product is intended for in-home repair in most cases.
12. Travel or transportation expenses for service in remote locations where an authorized Crosley servicer is not available.
13. Removal or reinstallation of inaccessible appliances or built-in fixtures (i.e. trim, decorative panels, flooring, cabinetry, islands, countertops, drywall, etc.) that interfere with servicing, removal or replacement of the product.
14. Service or parts for appliances with original model/serial numbers removed, altered or not easily determined.

The cost of repair or replacement under these excluded circumstances shall be borne by the customer.

DISCLAIMER OF IMPLIED WARRANTIES

IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. Some states and provinces do not allow limitations on the duration of implied warranties of merchantability or fitness, so this limitation may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state or province to province.

DISCLAIMER OF REPRESENTATIONS OUTSIDE OF WARRANTY

Crosley makes no representations about the quality, durability, or need for service or repair of this major appliance other than the representations contained in this warranty. If you want a longer or more comprehensive warranty than the limited warranty that comes with this major appliance, you should ask your retailer about buying an extended warranty.

LIMITATION OF REMEDIES; EXCLUSION OF INCIDENTAL AND CONSEQUENTIAL DAMAGES

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. CROSLEY SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state or province to province.