

 
# ASSEMBLY INSTRUCTION FOR ACME FURNITURE

## MODEL# LV06221

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

\*\*\*Do not fully tighten screws until fully assembled\*\*\*


Parts List			
NO.	DESCRIPTION	SKETCH	QTY
A	Backrest		2 PC
B	Seat		1 PC
C	Middle backrest		1 PC

Parts List			
NO.	DESCRIPTION	SKETCH	Q'TY
D	Screws Bol t washer		2 PCS
E	Power pl ug		1 PC
F	Power adapter		1 PC

**Notes: DO NOT remove any black cable ties that hold wiring in place at the base of the piece**


### Step 1:

Take out the middle backrest (C) from the zippered compartment, the power plug (E) & power adapter (F) from the backside of the seat.

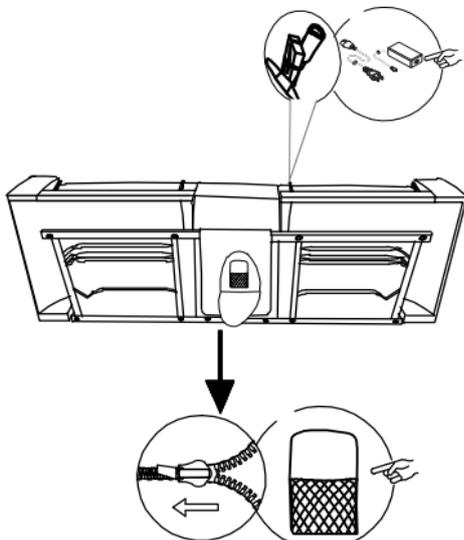

### Step 2:


Attach backrest (A) to Seat (B) until hearing a clicking sound.

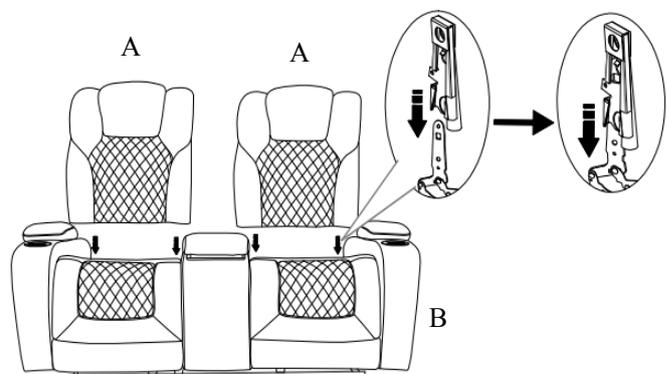

### Step 3:


Attach Middle backrest (C) with Screws and Bolt washer(D) to Seat(B)

Pls check the console storage compartment to find the bolts and washers if you don't find them screwed in the bottom of the middle backrest.

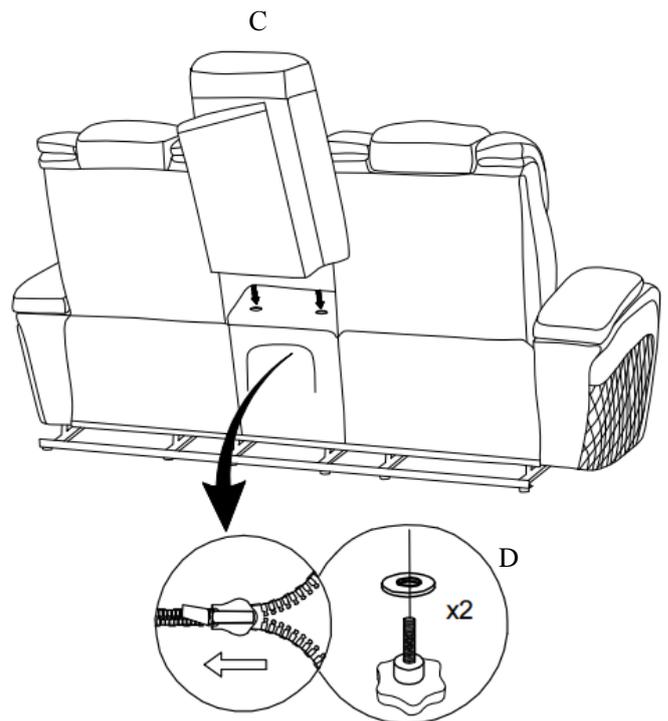

### Step 4:


Connect the Power adapter(F) to corresponding plug coming from the back of the loveseat, then connect one end of the Power Plug(E) into the Power adapter(F) and the other end into an electrical outlet near where the loveseat will be used.

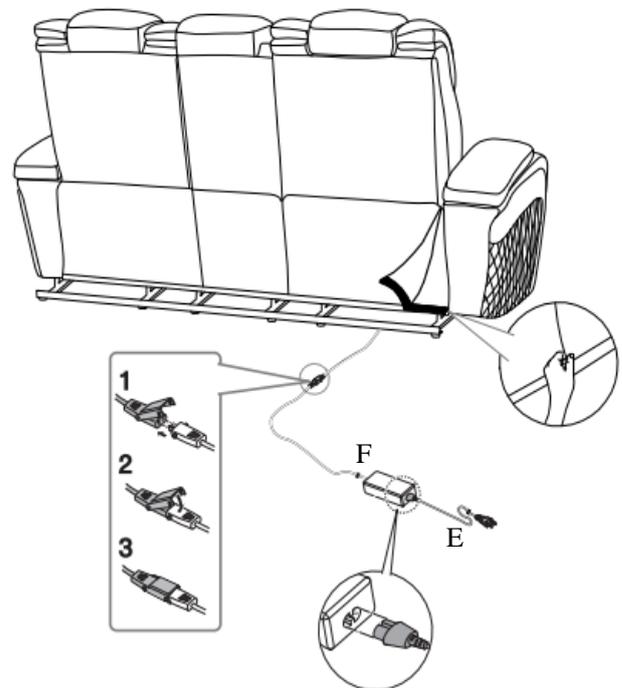

### Note:

The wireless power charging functions can be used directly, as the internal charging cable have already been connected. If you find that the wireless charging function is not working, please open the zippered dust cover at the lower back of the center console to check if charging cable is connected .

Step 5: Press control button to adjust the recliner to any position you want.

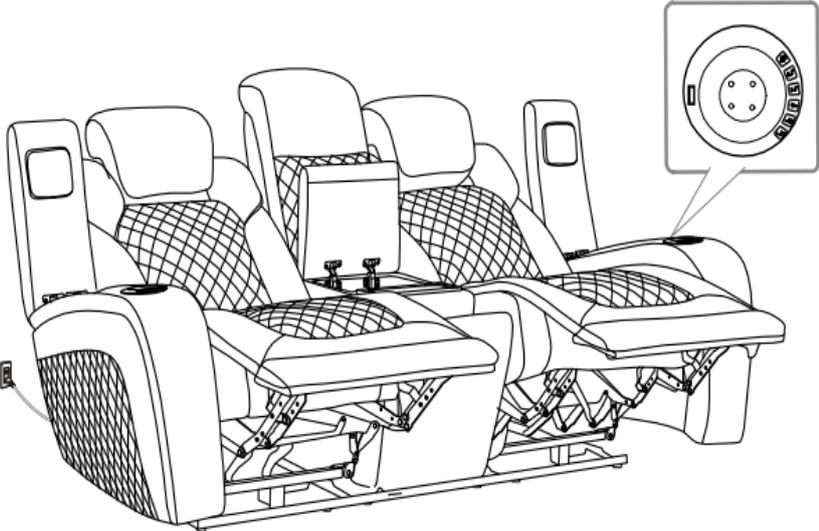

COMPLETED

