

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

706267
END TABLE

ITEM: 706267



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 20 MINUTES


PARTS IDENTIFICATION

A GLASS

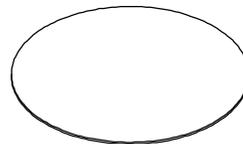

1PC

B TOP FRAME

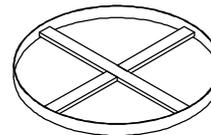


1PC

C DOUBLE LEG FRAME



1PC

 D SINGLE LEG FRAME



2PCS

Z

 
HARDWARE IDENTIFICATION

1 SHORT BOLT
(1/4" x 28mm BLK)



8PCS

4 LARGE CAP



4PCS

2 LONG BOLT
(1/4" x 45mm BLK)



2PCS

5 SMALL CAP
(20 x 20mm BLK)



5PCS

3 SUCTION CUP



4PCS

6 ALLEN WRENCH
(4mm)




1PC

ITEM:706267




ASSEMBLY INSTRUCTIONS

STEP 1 Do not tighten until each step is completed or instructed.

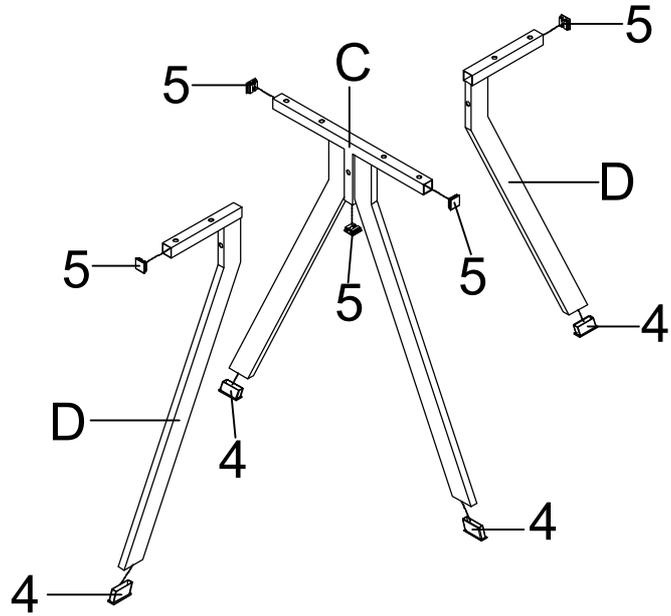


STEP 2

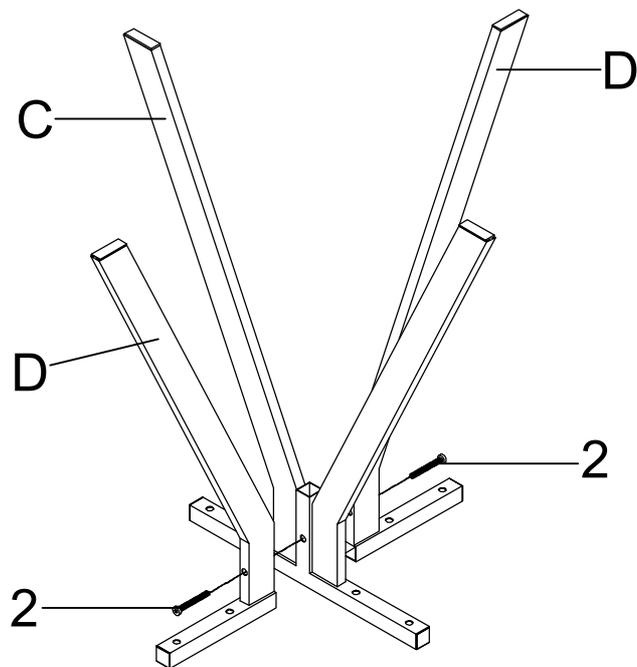


ITEM:706267

ASSEMBLY INSTRUCTIONS


STEP 3

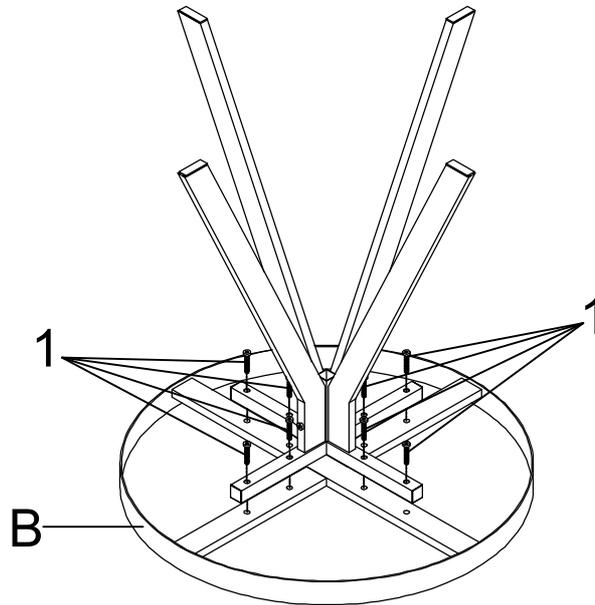

STEP 4

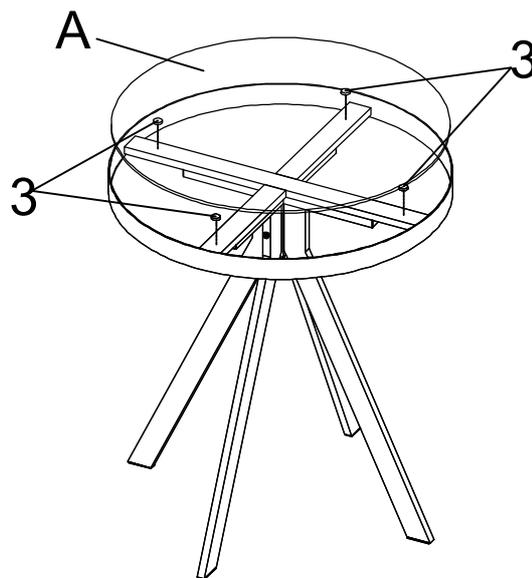


COMPLETE

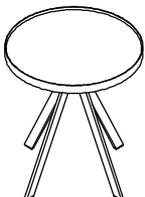

ITEM:706267 ASSEMBLY INSTRUCTIONS



Product Size : 546 DIA X 610H (MM)
Product Size : 21.5" DIA X 24"

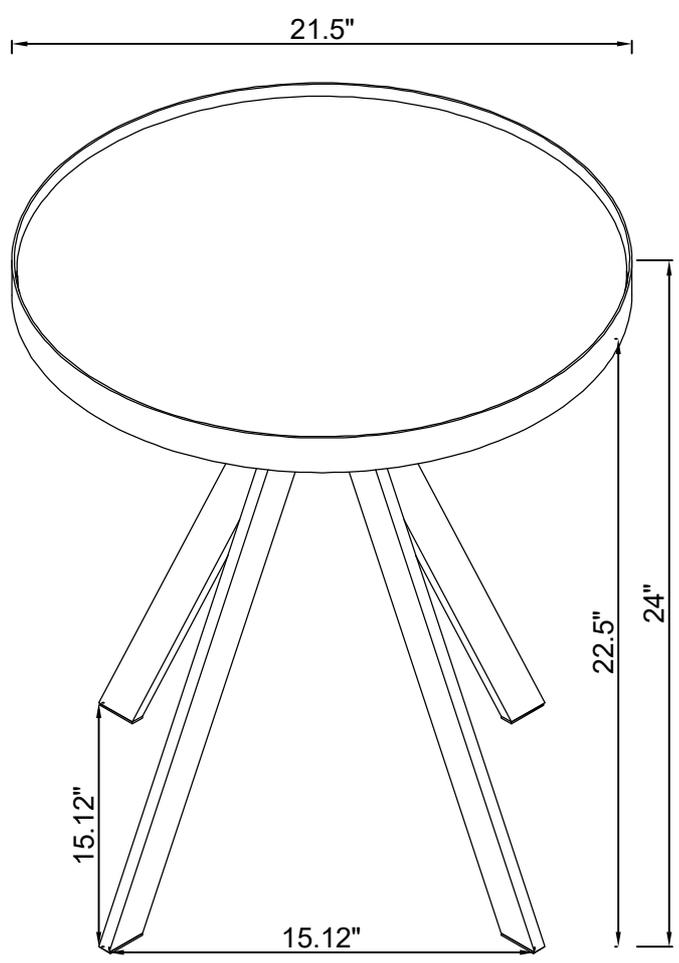

Note : Dimension tolerance $\pm 5\%$