

ASSEMBLY INSTRUCTION FOR

BOOKCASE

H-14600-307-BC

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST

| | Part Description | Code. | Q'ty |
|---|------------------|--|------|
| A | Bookcase | PH-14600-307-BCDORL PH-14600-307-BCDORR | 1 |
| B | Legs | PH-14640-LEG | 4 |


HARDWARE LIST

| No. | Hardware Description | Code. | Q'ty |
|-----|-----------------------------------|-------------|------|
| 1 | Hex Nut Ø5/16" | PH-14640-HW | 8 |
| 2 | Flat Washer Ø5/16" * Ø19 | | 8 |
| 3 | Spring Washer Ø5/16" *12 | | 8 |
| 4 | Hex Wrench / Cle 5/16" | | 1 |
| 5 | Anti-Tip Kit Hardware-Metal (Set) | P-ATKNMD-M | 2 |

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.

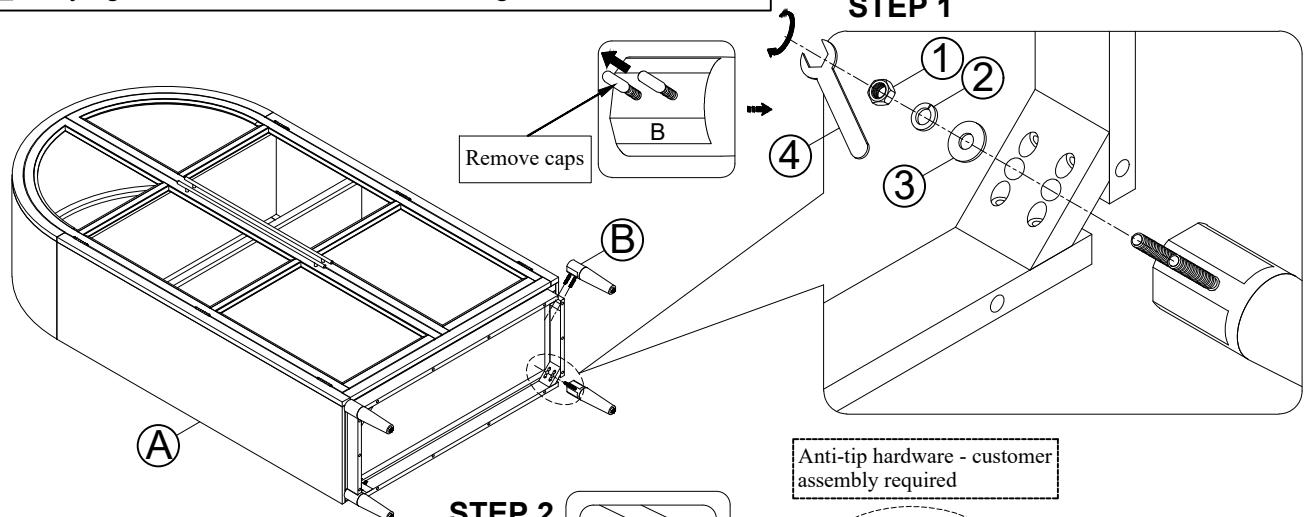

STEP 2

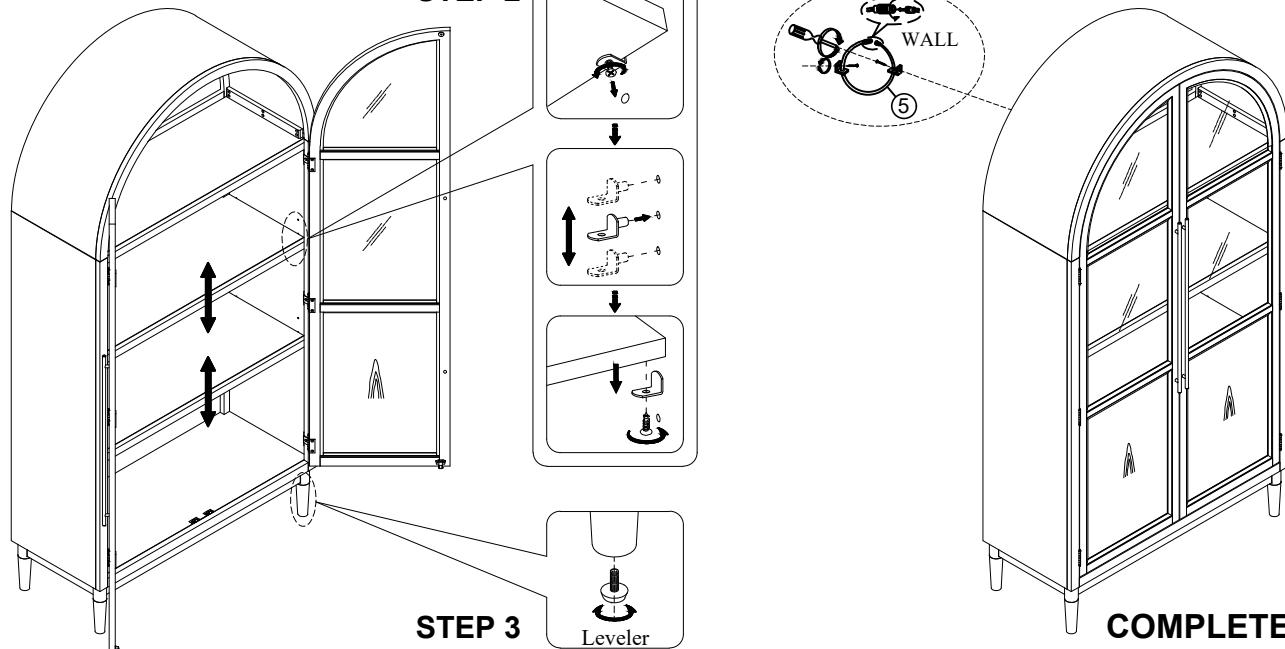

STEP 3

COMPLETE