

88 5523 432

Dresser

IMPORTANT NOTE








Carefully remove all the Parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occuring to the Parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

*Home
Styles*



Part List

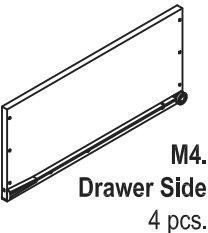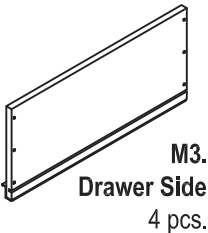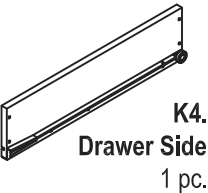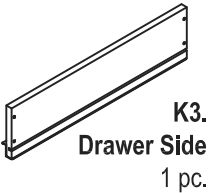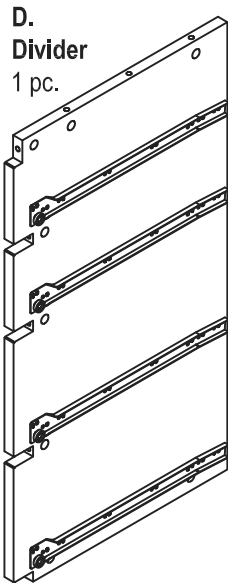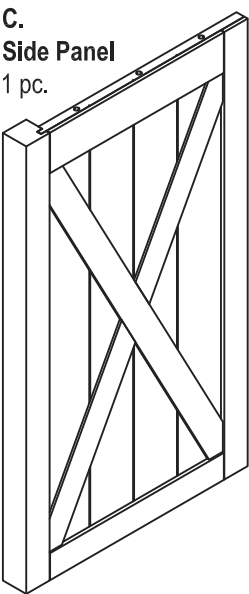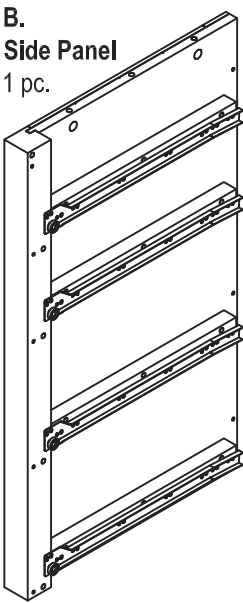

For assembly see instructions in carton 88 5523 431

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319