


# Wireless Speaker

## Enceinte sans fil

Reference Guide  
 Guide de référence  
 Guía de referencia

ULT FIELD 7

Model, Modèle: YY7858E

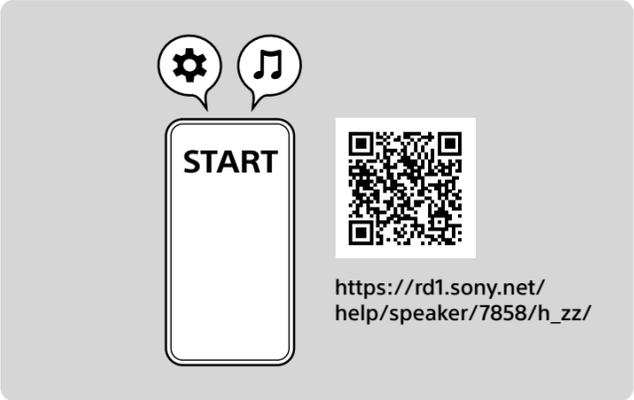

©2024 Sony Corporation  
 Printed in China / Imprimé en Chine  
<https://www.sony.net/>



FOR CUSTOMERS IN CANADA (INCLUDING IN THE PROVINCE OF QUEBEC)  
 ALL INSTRUCTIONS AND STATEMENTS WHICH ARE NECESSARY FOR CANADIAN CUSTOMERS ARE PROVIDED IN ENGLISH AND FRENCH. OTHER INSTRUCTIONS AND STATEMENTS NOT PROVIDED IN ENGLISH AND FRENCH ARE NOT FOR CANADIAN CUSTOMERS (INCLUDING IN THE PROVINCE OF QUEBEC). POUR LES CLIENTS AU CANADA (Y COMPRIS DANS LA PROVINCE DE QUÉBEC)  
 TOUTES LES INSTRUCTIONS ET DÉCLARATIONS NÉCESSAIRES POUR LES CLIENTS CANADIENS SONT FOURNIES EN ANGLAIS ET EN FRANÇAIS. LES AUTRES INSTRUCTIONS ET ÉNONCÉS NON FOURNIS EN ANGLAIS ET EN FRANÇAIS NE SONT PAS DESTINÉS AUX CLIENTS CANADIENS (Y COMPRIS AU QUÉBEC). PARA CLIENTES EN CANADÁ (INCLUIDA LA PROVINCIA DE QUEBEC)  
 TODAS LAS INSTRUCCIONES Y DECLARACIONES NECESARIAS PARA LOS CLIENTES CANADIENSES SE PROPORCIONAN EN INGLÉS Y FRANCÉS. OTRAS INSTRUCCIONES Y DECLARACIONES NO PROPORCIONADAS EN INGLÉS Y FRANCÉS NO ESTÁN DESTINADAS A CLIENTES CANADIENSES (INCLUIDA LA PROVINCIA DE QUEBEC).

### English Wireless Speaker

Model: YY7858E

The term "product" in this document refers to the unit or its accessories.

#### Owner's Record

Record the model and serial numbers in the spaces provided below and store them safely. Refer to them whenever you call your Sony dealer regarding this product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

The model and serial numbers to be recorded are located in the following places.

- the inner surface of the cap on the rear side of the unit



**CAUTION:** To avoid deterioration of the water-resistant performance, make sure that the cap is closed completely when using the unit.

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

Install the unit so that the power cord can be unplugged from the wall socket immediately in the event of trouble.

Do not expose the batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like, for a long time.

Do not subject the batteries to extreme low temperature conditions that may result in overheating and thermal runaway.

Do not dismantle, open, or shred secondary batteries.

In the event of a secondary battery leakage, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary batteries need to be charged before use. Always refer to the manufacturer's instructions or product manual for proper charging instructions. After extended periods of storage, it may be necessary to charge and discharge the secondary batteries several times to obtain maximum performance.

Dispose of properly.

#### DISPOSAL OF RECHARGEABLE BATTERIES

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, visit [www.sony.com/ecotrade](http://www.sony.com/ecotrade)

Caution: Do not handle damaged or leaking rechargeable batteries.

#### For customers in the U.S.A.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this unit.

**NOTE:**  
 This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.  
 However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This unit must not be co-located or operated in conjunction with any other antenna or transmitter.

#### If you have any questions about this product:

**Visit:** <https://www.sony.com/electronics/support>

**Contact:** Sony Customer Information Service Center at 1-800-222-7669

Supplier's Declaration of Conformity  
 Trade Name: SONY  
 Model: YY7858E  
 Responsible Party: Sony Electronics Inc.  
 Address: 16535 Via Esprillo, San Diego, CA 92127 U.S.A.  
 Telephone Number: 858-942-2230

#### For customers in Canada

This unit contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This unit may not cause interference; and
- (2) This unit must accept any interference, including interference that may cause undesired operation of the unit.

This unit complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF) Exposure rules. This unit should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

Inserting the USB plug or AC plug while it is wet may cause a short circuit due to foreign matter or liquid (tap water, seawater, soft drinks, etc.) getting on the main unit or charging cable. This may cause malfunctions or abnormal overheating.

Never insert the USB plug or AC plug while the main unit or charging cable is wet.

## About the Voice Guidance

### IMPORTANT

The voice guidance for this unit is only available in English.

The voice guidance can be heard from the unit in the following situations:

- When entering pairing mode: "Pairing"
- When pressing the BATTERY button to check the battery power while the unit is turned on: "Battery fully charged/Battery care mode, Fully charged, Battery about 90%/Battery about 80%/Battery about 60%/Battery about 40%/Low battery"
- When the rechargeable battery is running out of power while the unit is powered: "Low Battery"
- When the remaining battery power falls to the level where the unit is unable to start: "Battery is empty" is output and then the unit turns off.
- When pressing and holding the BATTERY button to change the charge mode while the unit is powered: "Battery care mode, ON/Battery care mode, OFF"
- When a stereo pair connection is established by the application (Sony | Music Center): "Left/Right"

### Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license. <https://rd1.sony.net/help/speaker/sl/24/>
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.



## Notes on waterproof and dustproof features (Read before using the unit)

The supplied accessories are neither waterproof nor dustproof.

### On waterproof and dustproof performance of the unit

The unit, with the cap fastened securely, has a waterproof specification of IPX7 as specified in "Degree of protection against water immersion" of the IEC60529 "Ingress Protection Rating (IP Code)", and a dustproof specification of IP6X as specified in "Degrees of protection against solid foreign objects".


- The supplied accessories and the connectors of this unit (AC IN, USB, AUDIO IN, MIC) are neither waterproof nor dustproof. To reduce the risk of fires or electric shocks, do not expose the unit to water or droplets while using any connectors (AC IN, USB, AUDIO IN, MIC).

Note that malfunctions as a result of water immersion or dust intrusion caused by misuse by the customer are not covered by the warranty.

### To maintain waterproof and dustproof performance

- Carefully note the precautions below to ensure proper use of the unit.
- This unit does not have a design that is resistant to water pressure. Use of the unit in a location where high water pressure is applied, such as in the shower, may cause a malfunction.
  - Do not pour high-temperature water or blow hot air from a hair dryer or any other appliance on the unit directly. Also never use the unit in a place subject to high temperatures, such as in a sauna or near a heat source.

- **CAUTION:** Handle the cap with care. The cap plays a very important role in maintenance of the waterproof and dustproof performance. When using the unit, make sure that the cap is closed completely. When closing the cap, be careful not to allow foreign objects inside. If the cap is not closed completely the waterproof and dustproof performance may deteriorate and may cause a malfunction of the unit as a result of water or dust particles entering the unit.

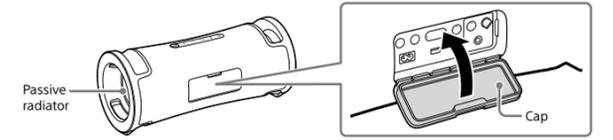

## Precautions

### On the power cord

- The supplied AC power cord (mains lead) is designed exclusively for this unit. It should not be used in combination with any other devices.
- Completely disconnect the AC power cord (mains lead) from the AC outlet (mains) if it is not going to be used for an extended period of time. When unplugging the AC power cord (mains lead), always grip the plug. Never pull the cord itself.
- AC power cord (mains lead) must be changed only at a qualified service shop.

### On placement

- To eliminate the risk of malfunctions, avoid the following locations when placing or leaving this unit.
  - A place subject to high temperatures, such as under direct sunlight or lighting equipment, near a heat source, or in a sauna
  - Inside a vehicle with the windows closed (especially in summertime)
  - A place exposed to hot air, such as from a hair dryer
- Place this unit on a flat, level surface. When placed on a sloped surface, the unit may fall over or fall off the surface due to its own vibration, resulting in injuries, malfunctions, or performance degradation.
- This unit is not anti-magnetic. Keep objects susceptible to magnetism (recorded tapes, watches, cash cards and credit cards with magnetic coding, etc.) away from the unit. When you carry around the unit, keep this in mind as well.

### How to care for the unit

- Although the fabric part of the unit has water repellent treatment applied, you can use the unit more comfortably and for a longer period of time by following the maintenance procedure below.
- If the surface of the unit gets dirty in the following cases, wash the unit with fresh water (tap water, etc.) promptly to remove the dirt. Leaving dirt on its surface may cause the fabric part or the passive radiator section to discolor or deteriorate, or the unit to malfunction.
    - Ex.
      - When the unit has sand, salt (chlorine), or other residue on it after having been used in a mountain area, by a swimming pool, etc.
      - When the unit is stained with foreign substances (sunscreen, suntan oil, etc.)

### Note

- If the surface of the unit gets dirty, do not use detergent, thinner, benzene, alcohol, etc. to clean the unit if because it will affect the water repellent function of the fabric part of the unit.
- If sand grains, etc. enter the fabric or other part of the unit, remove them carefully. Never use a vacuum cleaner, etc. on the unit. It may cause damage of the speaker section or other part of the unit.

### Other notes

- Do not use or leave the unit in an extremely cold or hot environment (temperature outside the range of 5 °C – 35 °C (41 °F – 95 °F)). If the unit is used or left in outside the above range, the unit may automatically stop to protect internal circuitry.
- Even if you do not intend to use the unit for a long time, charge the battery to its full capacity once every 6 months to maintain its performance.
- If your skin remains in contact with the handle for a long time while the light is turned on, there is a risk of low-temperature burns. To carry a speaker while it is powered on, turn the light (lighting function) off.
- If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

## Trademarks

- Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.
- LDAC and LDAC logo are trademarks of Sony Group Corporation or its affiliates.

All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

## Specifications

### Amplifier section

Power output and total harmonic distortion:  
 With 4 Ω loads, both channels driven, from 100 Hz – 10 000 Hz: rated 20 W per channel minimum  
 RMS power in stereo mode, with no more than 1% total harmonic distortion from 250 mW to rated output.

### BLUETOOTH®

Frequency band  
 2.4 GHz band (2.400 0 GHz - 2.483 5 GHz)

### General

- Inputs
- Type A USB port: Supported USB Device (Mass Storage Class)
  - AUDIO IN jack (Φ 3.5 mm)
  - MIC/GUITAR jack (Φ 6.3 mm)

### DC OUT

Type A USB port (for charging the battery of a connected device) (DC 5 V/MAX. 1.5 A)

### Power

AC 120 V, 60 Hz or, using built-in lithium-ion battery

### Power consumption

Approx. 45 W

### Standby power consumption

When BLUETOOTH standby mode is set to on: 2 W or less  
 When BLUETOOTH standby mode is set to off: 0.5 W or less

### Lithium-ion battery life (while Battery Care mode<sup>1</sup> is not activated)

With playback via a BLUETOOTH connection  
 Approx. 30 hours\*<sup>2</sup>

- Volume level: 16
- Sound: ULTI/2 on
- Lighting: off

Approx. 25 hours\*<sup>2</sup>

- Volume level: 16
- Sound: ULTI/2 on
- Lighting: on

Approx. 3 hours\*<sup>2</sup>

- Volume level: 50 (MAX.)
- Sound: ULTI/2 on
- Lighting: on

Time required for charging the built-in rechargeable battery (while Battery Care mode<sup>1</sup> is not activated)

- Approx. 5 hours\*<sup>3</sup>
- 10 minutes of charging provide approximately 3 hours\*<sup>2</sup> of music playback. (Volume level: 16 / Sound: ULTI/2 on / Lighting: off)

### Operating temperatures

5 °C – 35 °C (41 °F – 95 °F)

### Dimensions (including projecting parts and controls)

Approx. 512 mm × 224 mm × 222 mm (20.2 in × 8.9 in × 8.8 in) (w/h/d)

### Mass (including battery)

Approx. 6.3 kg (13 lb 15 oz)

### Included items

- Wireless Speaker (1)
- AC power cord (mains lead) (1)
- Documents (1 set)

- \*1 Mode for prolonging the durability life of the built-in rechargeable battery by limiting the charging capacity up to approximately 90%. The unit in this mode is capable of playing for a shorter period of time than stated.
- \*2 The built-in battery life above is measured using our specified music source. Actual performance time may vary from the listed time due to the volume, songs played, surrounding temperature, and usage conditions.
- \*3 Time required for the empty battery to be fully charged (100%) while the unit is powered off.

Design and specifications are subject to change without notice.

## Français

## Enceinte sans fil

Modèle: YY7858E

Le terme « produit » dans ce document désigne l'appareil ou ses accessoires.

### Fiche du propriétaire

Inscrivez les numéros de modèle et de série dans les espaces prévus ci-dessous et rangez-les en toute sécurité.

Donnez cette référence chaque fois que vous appelez votre revendeur Sony concernant ce produit.

N° de modèle \_\_\_\_\_

N° de série \_\_\_\_\_

Les numéros de modèle et de série se trouvent aux emplacements suivants.

- à l'intérieur du capuchon à l'arrière de l'appareil



**ATTENTION :** pour éviter la détérioration des performances de résistance à l'eau, assurez-vous que le capuchon est complètement fermé lorsque vous utilisez l'appareil.

N'installez pas le produit dans un espace clos, comme une bibliothèque ou une armoire encastrée.

Installez l'appareil de sorte que le cordon d'alimentation puisse être débranché de la prise murale de façon immédiate en cas de problème.

N'exposez pas les piles (bloc-batterie ou piles installées) à une chaleur excessive, telle que le soleil, un feu ou autre, pendant une longue période. Ne soumettez pas les batteries à des conditions de température extrêmement basses qui pourraient entraîner une surchauffe et un emballage thermique.

Ne démontez pas, n'ouvrez pas et ne détruisez pas les batteries rechargeables.

En cas de fuite d'une batterie rechargeable, ne laissez pas le liquide entrer en contact avec la peau ou les yeux. Si un contact a été établi, lavez la zone touchée avec de grandes quantités d'eau et consultez un médecin.

Les batteries rechargeables doivent être chargées avant d'être utilisées. Reportez-vous toujours aux instructions du fabricant ou au manuel du produit pour obtenir des instructions de chargement pertinentes.

Après de longues périodes de stockage, il peut être nécessaire de charger et de décharger les batteries rechargeables plusieurs fois pour obtenir une performance maximale. Mettez au rebut correctement.

### MISE AU REBUT DES ACCUMULATEURS RECHARGEABLES

Vous pouvez aider à préserver l'environnement en rapportant les accumulateurs usagées dans un point de collection et recyclage le plus proche de chez vous.

Pour plus d'informations sur le recyclage des accumulateurs, visitez

[www.sony.com/ecotrade](http://www.sony.com/ecotrade)

Avertissement: Ne pas utiliser des accumulateurs rechargeables qui sont endommagées ou qui fuient.

### Pour les clients aux États-Unis

Vous êtes prévenu que tout changement ou modification non approuvés expressément dans ce manuel pourrait annuler votre droit d'utilisation de cet appareil.

### REMARQUE :

Cet appareil a été testé et déclaré comme conforme aux limitations d'un appareil numérique de classe B, conformément à la section 15 des règles de la FCC. Ces limitations sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet appareil génère, utilise et peut diffuser une énergie sous forme de fréquence radio et, s'il n'est pas installé et utilisé conformément aux instructions, pourrait provoquer des interférences nuisibles pour les communications radio.

Cependant, il n'existe aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet appareil provoque des interférences nuisibles pour la réception radio ou télévision, qui peuvent être détectées en mettant sous et hors tension l'appareil, l'utilisateur est encouragé à essayer de corriger ces interférences par l'une ou plusieurs des mesures suivantes :

- Réorienter ou repositionner l'antenne de réception.
- Augmenter la distance entre l'appareil et le récepteur.
- Brancher l'appareil sur une prise murale d'un circuit différent de celui sur lequel le récepteur est branché.
- Consulter le revendeur ou un technicien radio/télévision qualifié pour obtenir de l'aide.

Cet appareil ne doit pas être installé au même endroit ni fonctionner en association avec une autre antenne ou un autre émetteur.

### Pour tout renseignement sur ce produit :

**Consultez :** <https://www.sony.com/electronics/support>

**Contactez :** Centre d'information et de service après-vente Sony au 1-800-222-7669

Déclaration de conformité du fabricant

Dénomination commerciale : SONY

Modèle : YY7858E

Partie responsable : Sony Electronics Inc.

Adresse : 16535 Via Esprillo, San Diego, CA 92127 États-Unis

Numéro de téléphone : 858-942-2230

### Pour les clients au Canada

L'émetteur/récepteur exempt de licence contenu dans la présente unité est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux deux conditions suivantes :

- 1) l'unité ne doit pas produire de brouillage ;
- 2) l'utilisateur de l'unité doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Cet appareil est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles les radioélectriques (RF) de la FCC lignes directrices d'exposition et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'ISDE. Cet appareil doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.

Ce produit comporte un ou des aimants qui peuvent perturber les stimulateurs cardiaques, les valves de dérivation programmables pour le traitement de l'hydrocéphalie ou d'autres appareils médicaux. Ne placez pas ce produit près de personnes utilisant ce type d'appareil médical. Consultez votre médecin avant d'utiliser ce produit si vous utilisez ce type d'appareil médical.

L'insertion de la fiche USB ou de la fiche CA alors qu'elle est humide peut provoquer un court-circuit à cause de la présence de corps étrangers ou de liquide (eau du robinet, eau de mer, soda, etc.) sur l'appareil principal ou le câble de charge.

Ceci peut provoquer des dysfonctionnements ou une surchauffe anormale. N'insérez jamais la fiche USB ou la fiche CA alors que l'appareil principal ou le câble de charge est humide.

## À propos du guidage vocal

### IMPORTANT

Le guidage vocal pour cet appareil est uniquement disponible en anglais.

Le guidage vocal peut se faire entendre en provenance de l'appareil dans les situations suivantes :

- Lorsque l'appareil passe en mode de jumelage : « Pairing » (jumelage)
- Lorsque vous appuyez sur le bouton BATTERY pour vérifier la puissance de la batterie alors que l'appareil est allumé : « Battery fully charged/Battery care mode, Fully charged, Battery about 90%/Battery about 80%/Battery about 60%/Battery about 40%/Low battery » (Batterie entièrement chargée/Mode maintenance de la batterie, Entièrement chargée, Batterie à environ 90%/Batterie à environ 80%/Batterie à environ 60%/Batterie à environ 40%/Batterie faible)
- Lorsque la batterie rechargeable s'épuise sous tension : « Low Battery » (Batterie faible)
- Lorsque la puissance restante de la batterie atteint un niveau tel que l'appareil ne peut pas démarrer : « Battery is empty » (Batterie vide) est émis, puis l'appareil s'éteint.
- Lorsque vous appuyez et maintenez le bouton BATTERY pour changer de mode de charge alors que l'appareil est sous tension : « Battery care mode, ON/Battery care mode, OFF » (Mode maintenance de la batterie, ON/Mode maintenance de la batterie, OFF)
- Lorsqu'une connexion de couplage stéréo est établie par l'application (Sony | Music Center) : « Left/Right » (Ga

