

ASSEMBLY INSTRUCTIONS


Item #:U7127-18 POWER SOFA W/ USB POWER OUTLET

Thank you for purchasing this quality product .Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.


Before you Assemble: Please read all instruction carefully before beginning the assembly process. It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

CAUTION:For your safety,this product requires two people to lift.


PART LIST

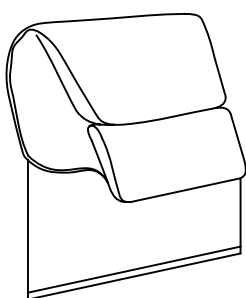

A

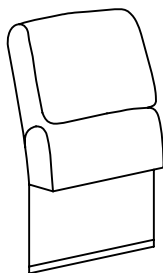

B

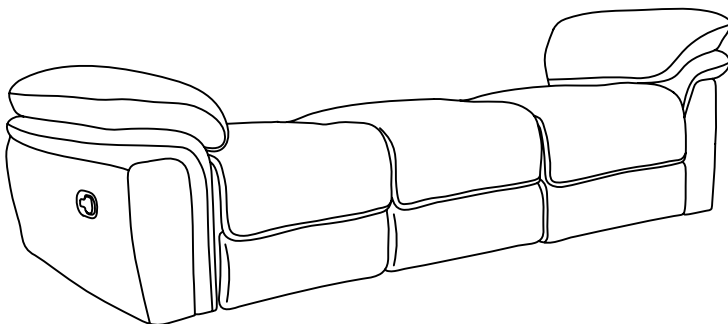


C


A	BACKREST	2 PCS
B	BACKREST	1 PC
C	CHAIR BASE	1 PC

Need Assistance? Call us at 1-855-343-7378 from 8:00am to 5:00pm PST Monday – Friday

STEP 1 Insert the KD brackets on SEAT BACK/CONSOLE BACK into KD brackets on the BASE. Lower slowly until fully secured on base.

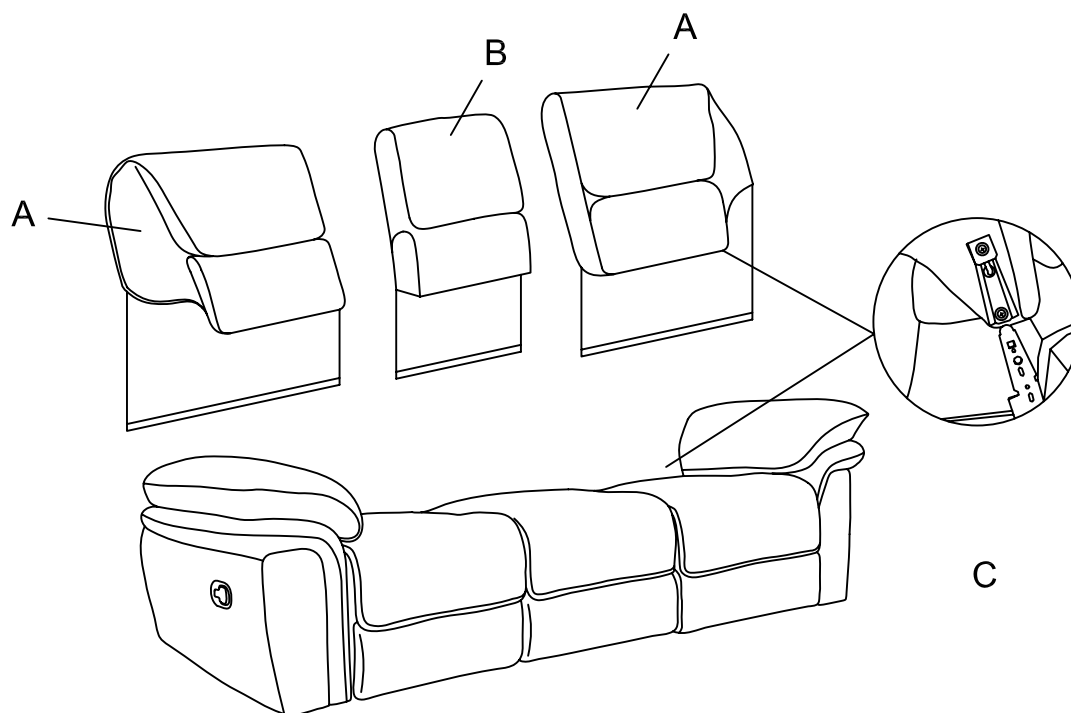

STEP 2 Remove power cord from stored location, insert matching end into back of sofa, then plug into wall.

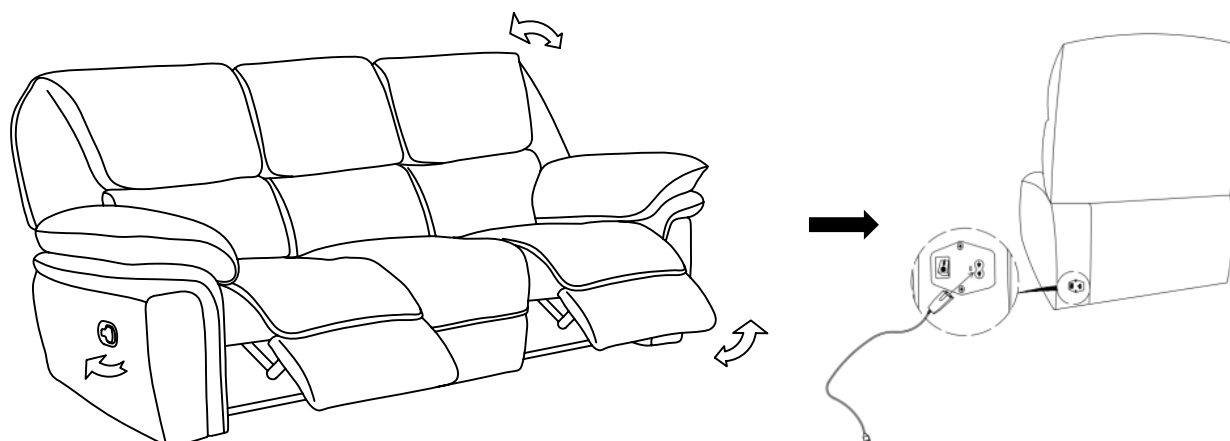

Need Assistance? Call us at 1-855-343-7378 from 8:00am to 5:00pm PST Monday – Friday