

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

PAGE 1 OF 6

509656 *Chair*

REVISION 0 : 10/24/2023

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A FRONT PANEL	1PC	E SEAT CUSHION	1PC
B SEAT DECK	1PC	F LEFT ARM	1PC
C BACKREST	1PC	G RIGHT ARM	1PC
D BACK CUSHION	1PC	H LEG	4PCS


HARDWARE IDENTIFICATION

1	BOLT (5/16" x 25mm - RBW)	4PCS	3 LOCK WASHER (D12mm - RBW)	4PCS
2	ALLEN WRENCH (60mm x 4mm - RBW)	1PC	4 FLAT WASHER (D19mm - RBW)	4PCS


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

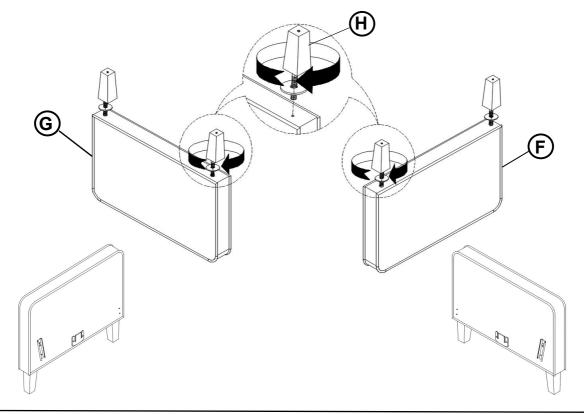



STEP 2

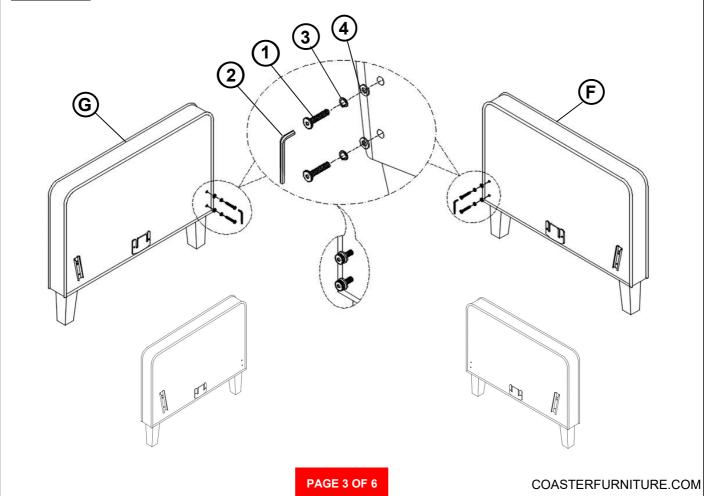


COASTER

ASSEMBLY INSTRUCTIONS STEP 3

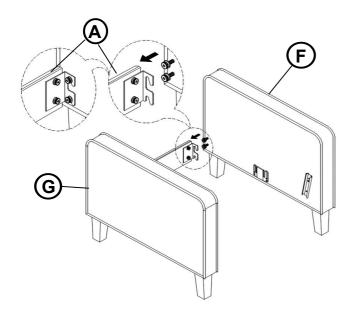

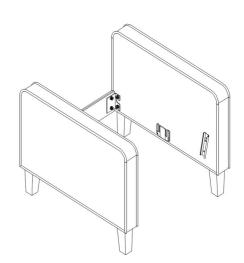


STEP 4

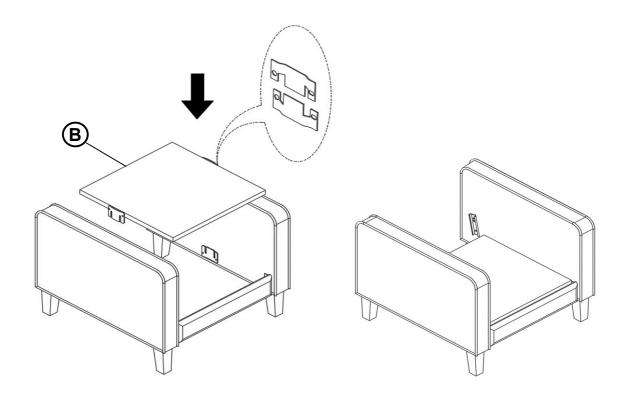



COASTER

ASSEMBLY INSTRUCTIONS STEP 5

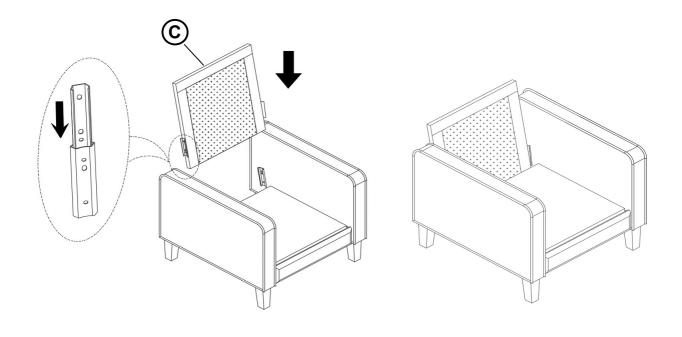


STEP 6

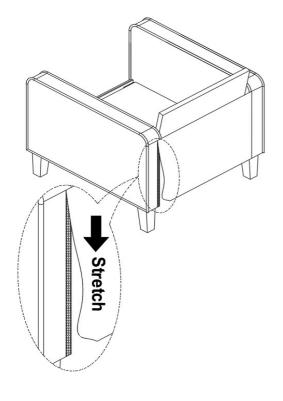

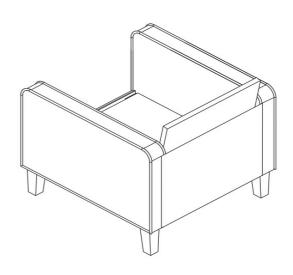


COASTER

ASSEMBLY INSTRUCTIONS STEP 7

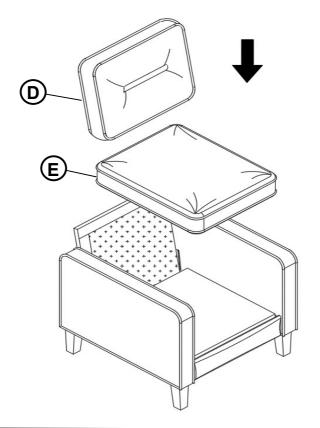


STEP 8 COMPLETE

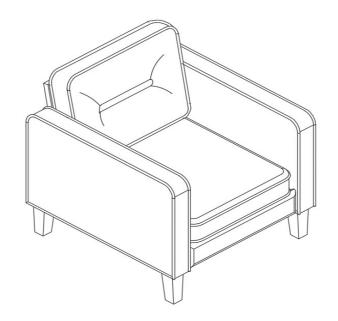





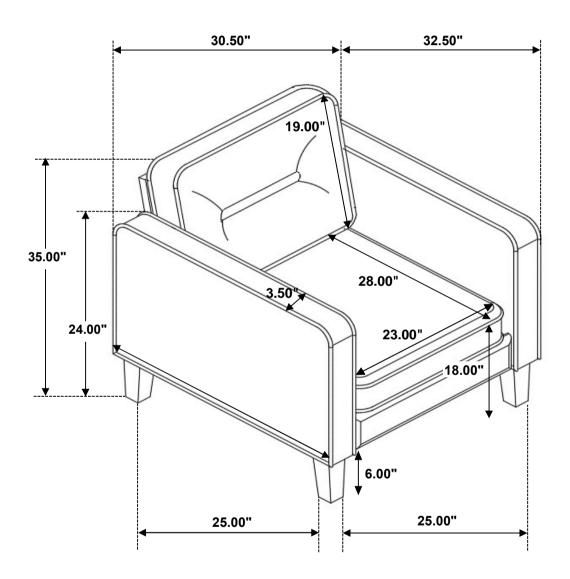

Note: Dimension tolerance ±5%