## **88 5561 30**Dining Table

## **IMPORTANT NOTE**


This product is made from sturdy, high quality aluminum and will provide years of enjoyment. Do not use power tools to assemble and only tighten bolts until they are snug.

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.





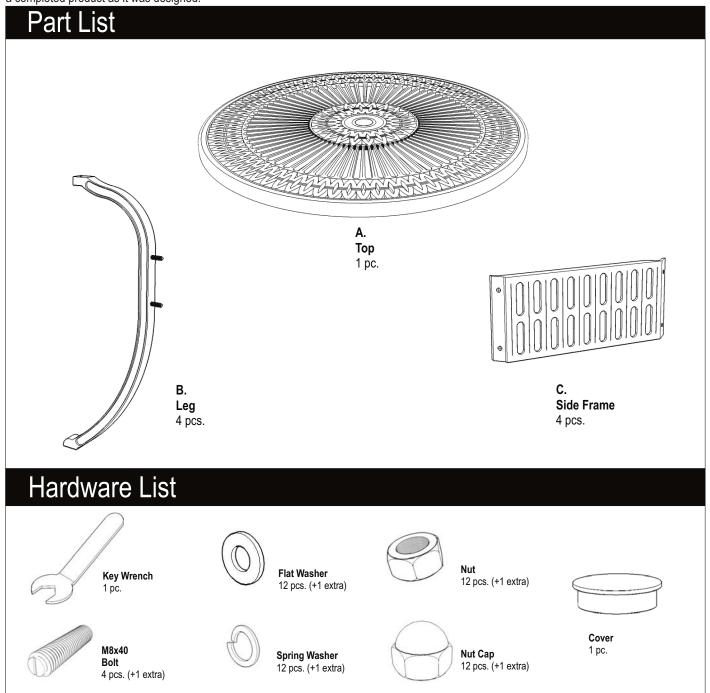

Tools required for assembly: Slotted screwdriver

Tools recommended for assembly: Level

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

## Assembly Instructions 2/2

## **IMPORTANT**

(See Figure 4)

- \* Please keep Key Wrench in a safe place as you may need to tighten up the Nuts in the future.
- \* Use a soft cloth between these parts and the floor.
- \* Do not use power tools to assembly and do not tightening the bolts and nuts.
- \* Do not tighten up all the bolts and nuts until each part is properly assembled.
- \* After assembly item must be level to work properly. Use the included adjustable levelers to level.

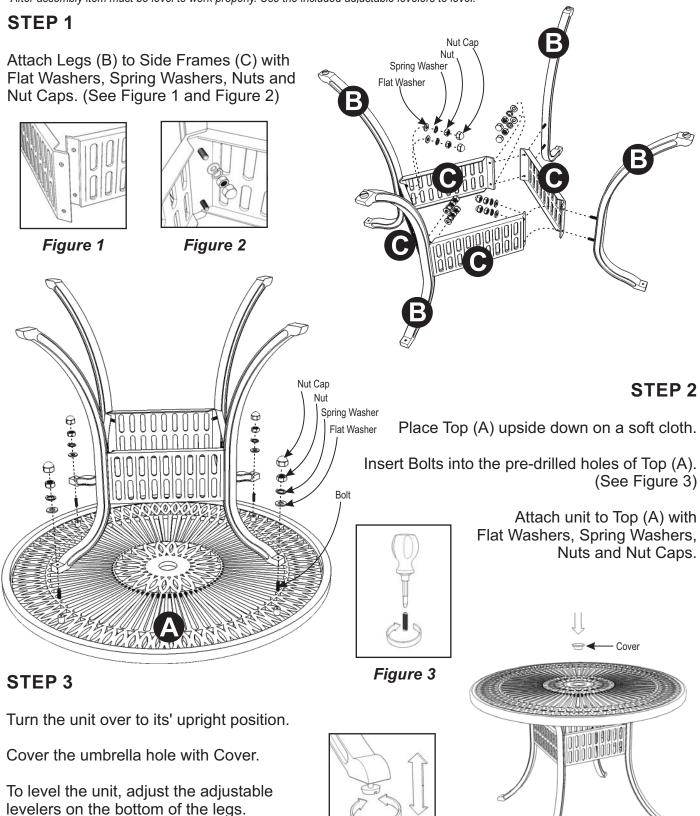


Figure 4