



Google TV

User's Guide

LIFeSTUDIO FLEX Plus **EF-72**

LIFeSTUDIO FLEX **EF-71**

LIFeSTUDIO POP Plus **EF-62N/EF-62B**

LIFeSTUDIO POP **EF-61R/EF-61W/EF-61G**

Notations Used in This Guide	5
Using the Manual to Search for Information	7
Searching by Keyword	7
Jumping Directly from Bookmarks	7
Printing Only the Pages You Need	7
Getting the Latest Version of the Documents	8
Introduction to Your Projector	9
Projector Parts and Functions	10
Projector Parts - Front/Side	10
Projector Parts - Rear/Side	11
Projector Parts - Base	13
Projector Parts - Remote Control	15
Setting Up the Projector	18
Projector Placement	19
Projector Setup and Installation Options	21
Precautions on Installation	22
Projection Distance	22
Mounting the Projector on a Tripod or Projector Stand (Floor-stand or Ceiling-mount) (EF-62/EF-61)	23
Attaching Safety Wire (EF-72/EF-71)	24
Projector Connections	25
Connecting to an HDMI Video Source	25
Connecting to a Computer for HDMI Video and Audio	25
Connecting to External USB Devices	26
Connecting Headphones	27
Connecting to an eARC/ARC Compatible AV System	27
Installing Batteries in the Remote Control	29
Remote Control Operation	29
Setting Up the Projector OS	31
Projector's Home Screen	32
About Epson Projector Update	33
Installing Epson Projector Update	33
Using Basic Projector Features	34
Turning On the Projector	35
AC Adapter Safety Instructions	36
Turning On the Projector Using the USB-C Port (EF-72)	37
Turning Off the Projector (Suspended Mode)	39
Turning Off the Projector (Deep Standby Mode)	39
Projection Modes	40
Changing the Projection Mode Using the Menus	40
Adjusting the Image Height (EF-62/EF-61)	41
Adjusting the Position of the Image (EF-72/EF-71)	42
Image Shape	44
Correcting the Image Shape and Focus Automatically	44
Adjusting the Size and Position of the Image	45
Automatically Correcting the Image Shape with Screen Fit	45
Correcting the Image Shape with Quick Corner	46
Focusing the Image Using the Projector Menus	48
Selecting an Image Source	49
Image Aspect Ratio	50
Changing the Image Aspect Ratio	50
Available Image Aspect Ratios	50
Adjusting Image Quality (Color Mode)	51
Changing the Color Mode	51
Available Color Modes	51

Adjusting Image Quality in Detail	52
Turning On Automatic Luminance Adjustment	53
Adjusting the Light Source Brightness	54
Controlling the Volume with the Volume Buttons	55
Changing the Sound Mode	56
Available Sound Modes	56

Adjusting Projector Features 57

Using the Projector's Lighting Function (Ambient Light) (EF-72)	58
Using Ambient Light in Standby Mode	58
Using the Projector as a Bluetooth® Speaker	59
Shutting Off the Image Temporarily	60
Using Google Cast™	61
HDMI CEC Features	62
Operating Connected Devices Using the HDMI CEC Features	62
Updating Projector Firmware Using Epson Projector Update	63
Initializing the Projector	64

Adjusting the Menu Settings 65

Using the Projector's Menus	66
Projector Feature Settings - Channels & Inputs Menu	67
Projector Feature Settings - Projector Menu	68
Image Quality Settings - Display & Sound Menu	69
Other Menus	71
Network & Internet Menu	71

Accounts & Profiles Menu	71
Privacy Menu	71
Apps Menu	71
System Menu	71
Accessibility Menu	71
Remotes & Accessories Menu	72
Help & Feedback Menu	72

Maintaining the Projector 73

Projector Maintenance	74
Cleaning the Lens	75
Cleaning the Projector Case	76
Air Filter and Vent Maintenance	77
Cleaning the Air Filters and Intake Vents	77

Solving Problems 79

Projection Problems	80
Projector Indicator Status	81
Solving Projector Power-On or Power-Off Problems	83
Solving Projector Power Problems	83
Solving Projector Shutdown Problems	83
Solving Image Problems	84
Solving Missing Image Problems	84
Adjusting an Image that is not Rectangular	85
Adjusting a Fuzzy or Blurry Image	85
Fixing Partial Image Problems	86
Adjusting an Image that Contains Noise or Static	86
Adjusting an Image with Incorrect Brightness or Colors	86
Adjusting an Upside-down Image	87
Solving Auto Shape Correction Problems	87

Solving Sound Problems	89	Copyright Attribution	113
Solving Missing or Low Audio Problems	89		
Solving Bluetooth Speaker Mode Problems	89		
Solving Remote Control Operation Problems	91		
Solving HDMI CEC Problems	92		
Solving Wi-Fi Network Problems	93		
Solving Projector's OS Problems	94		
 Appendix	 95		
Optional Accessories	96		
Mounts	96		
Screen Size and Projection Distance	97		
Supported Monitor Display Resolutions	100		
Projector Specifications	101		
AC Adapter Specifications	102		
Connector Specifications	103		
Bluetooth Specifications	104		
External Dimensions	105		
List of Safety Symbols and Instructions	107		
Warning Labels	109		
Glossary	110		
Notices	111		
FCC Compliance Statement	111		
Innovation, Science and Economic Development Canada (ISED) Notices	111		
Wireless LAN with Bluetooth Safety and Specifications	112		
Restriction of Use	112		
Trademarks	112		
Copyright Notice	113		

Notations Used in This Guide

Safety Symbols

The projector and its manuals use graphical symbols and labels to indicate content that tells you how to use the projector safely.

Read and carefully follow the instructions that are marked with these symbols and labels to avoid injury to persons or damage to property.

 Warning	This symbol indicates information that, if ignored, could possibly result in personal injury or even death.
 Caution	This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.

General Information Notations

 Attention	This label indicates procedures that may result in damage or injury if sufficient care is not taken.
 	This label indicates additional information that may be useful to know.
 button	Indicates the buttons on the remote control or the control panel. Example:  Enter button
Menu/Setting name	Indicates projector menu and setting names. Example: Select the Projector menu.  Projector > Keystone > Auto Shape Correction
 	This label indicates links to the related pages.
 	This label indicates the projector's current menu level.

► Related Links

- "Using the Manual to Search for Information" [p.7](#)

- "Getting the Latest Version of the Documents" [p.8](#)


The PDF manual allows you to search for information you are looking for by keyword, or jump directly to specific sections using the bookmarks. You can also print only the pages you need. This section explains how to use a PDF manual that has been opened in Adobe Reader X on your computer.

► Related Links

- "Searching by Keyword" [p.7](#)
- "Jumping Directly from Bookmarks" [p.7](#)
- "Printing Only the Pages You Need" [p.7](#)

Searching by Keyword


Click **Edit > Advanced Search**. Enter the keyword (text) for information you want to find in the search window, and then click **Search**. Hits are displayed as a list. Click one of the displayed hits to jump to that page.

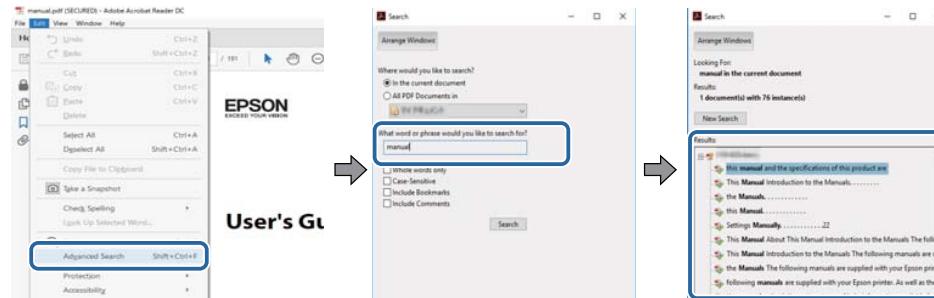

Jumping Directly from Bookmarks

Click a title to jump to that page. Click + or > to view the lower level titles in that section. To return to the previous page, perform the following operation on your keyboard.

- Windows: Hold down Alt, and then press <.
- Mac OS: Hold down the command key, and then press <.

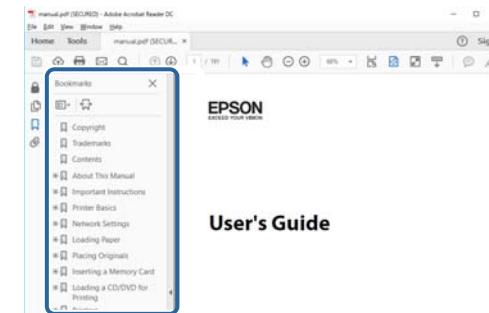


User's Guide

Printing Only the Pages You Need

You can extract and print only the pages you need. Click **Print** in the **File** menu, and then specify the pages you want to print in **Pages to Print**.

- To specify a series of pages, enter a hyphen between the start page and the end page.
Example: 20-25
- To specify pages that are not in series, divide the pages with commas.
Example: 5, 10, 15

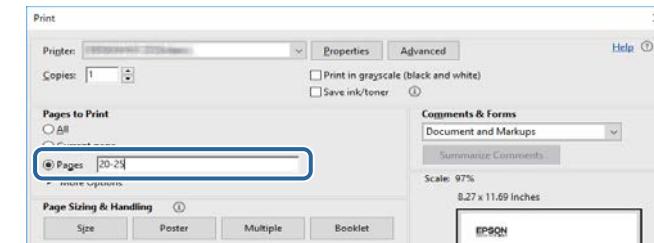

You can get the latest version of the manuals and specifications on the Epson website.

Visit support.epson.com, and enter your model name.

Introduction to Your Projector

See these sections to learn more about your projector.



The availability of products varies by country.

► Related Links

- "Projector Parts and Functions" [p.10](#)

The following sections explain the projector parts and their functions.


The illustrations shown and the features described are of the EF-62 but the steps are the same for the EF-72, EF-71, and EF-61, unless otherwise specified.

► Related Links


- "Projector Parts - Front/Side" [p.10](#)
- "Projector Parts - Rear/Side" [p.11](#)
- "Projector Parts - Base" [p.13](#)
- "Projector Parts - Remote Control" [p.15](#)

Projector Parts - Front/Side

EF-72/EF-71 (model with stand)

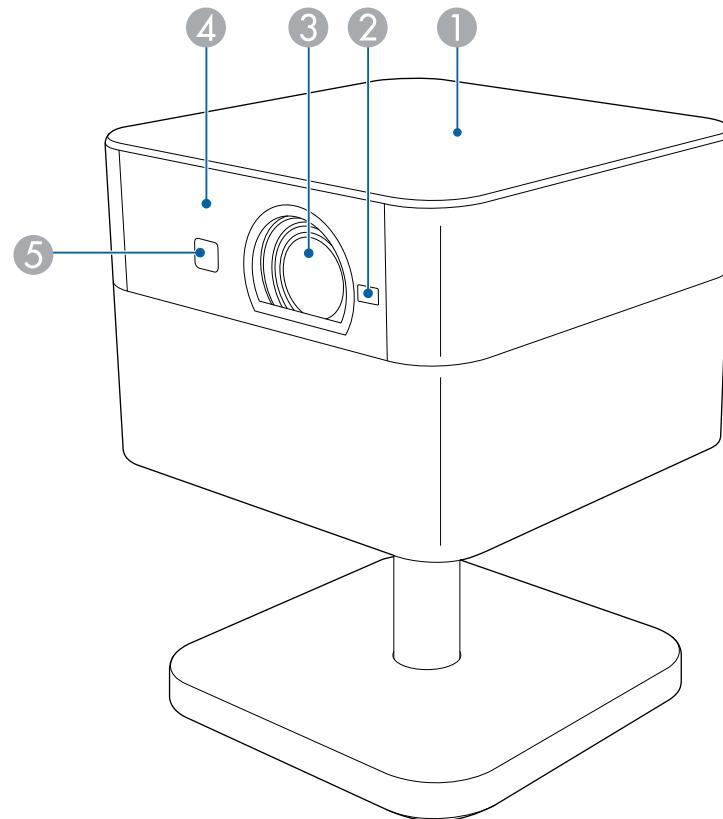

EF-62/EF-61

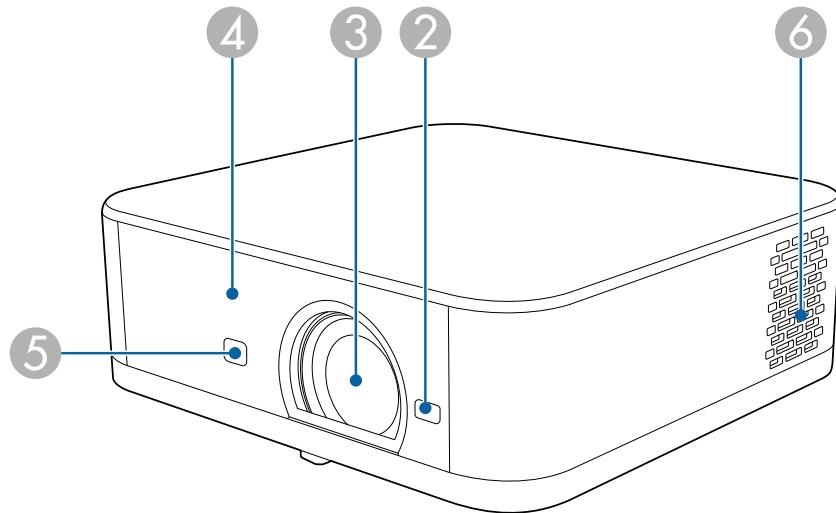

Name	Function
⑥ Speaker (EF-62/EF-61)	Outputs audio.



► Related Links

- "Remote Control Operation" [p.29](#)

Projector Parts - Rear/Side

EF-72/EF-71 (model with stand)

Name	Function
① Touch sensor (EF-72)	<p>Touch the center of the projector's top panel to turn on the light at the bottom of the projector (Ambient Light). Each time you touch here, the brightness of the light changes.</p> <p>Press and hold here to switch the light modes (color and brightness).</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> Attention <p>Do not press too hard on the projector's top panel, or you may damage the touch sensor.</p> </div>
② Sensor	Measures the distance to the projection surface and corrects the shape of the projected image.
③ Lens	Images are projected from here.
④ Remote receiver	Receives signals from the remote control.
⑤ Camera	Automatically adjusts the shape and focus of the projected image.

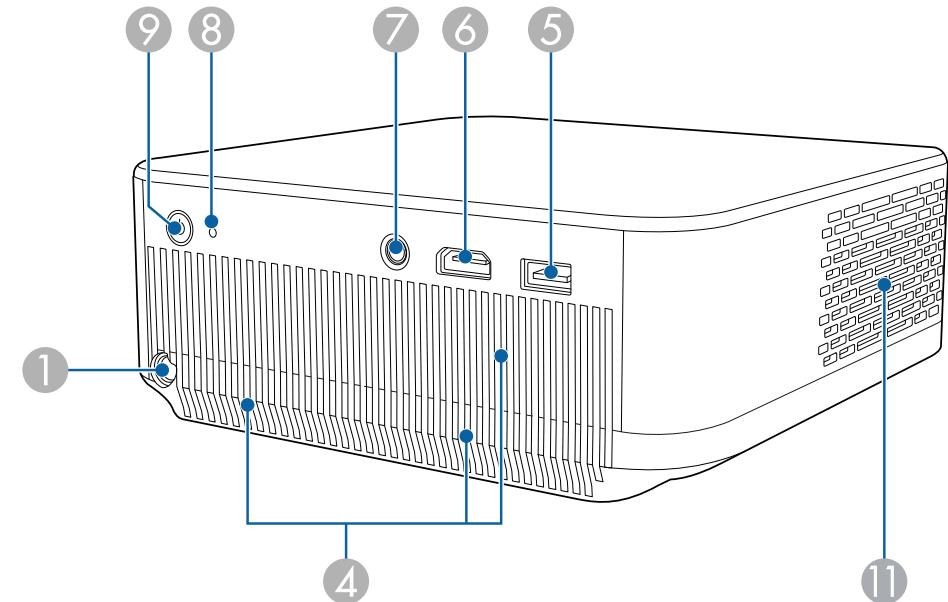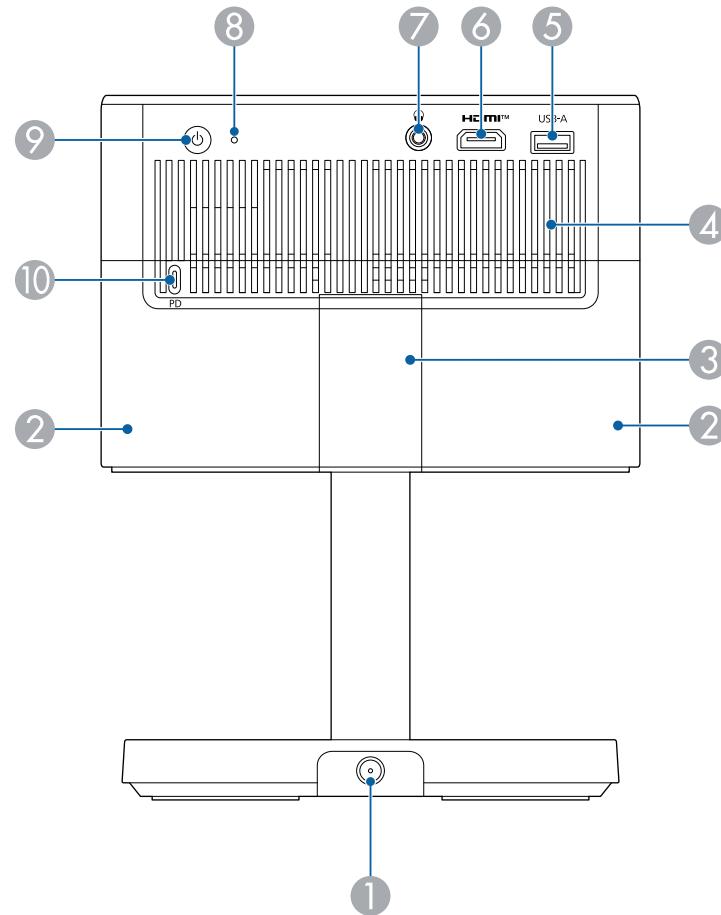

Name		Function
①	AC adapter port	Connects the AC adapter.
②	Speaker (EF-72/ EF-71)	Outputs audio.
③	Fabric cover (EF-72/ EF-71)	Removable fabric cover.

Attention

When tilting the projector more than 60 degrees upwards, remove this cover. Otherwise, the projector or the fabric cover may be damaged.

EF-62/EF-61

Name	Function
④ Air exhaust vents	Exhaust vents for air used to cool the projector internally. Caution While projecting, do not put your face or hands near the air exhaust vent, and do not place objects that may become warped or damaged by heat near the vent. Hot air from the air exhaust vent could cause burns, warping, or accidents to occur.
⑤ USB-A port	Connects a commercially available USB device such as a webcam, external HDD, or keyboard.  This port is not guaranteed to operate for all devices that support USB.
⑥ HDMI port	Inputs video signals from HDMI compatible video equipment and computers. This port is compatible with HDMI eARC and ARC. This projector is compatible with HDCP 1.4/2.3. (EF-72/EF-62) This projector is compatible with HDCP 1.4. (EF-71/EF-61)
⑦ Audio Out port	Outputs audio from the current input source to headphones.
⑧ Status indicator	Indicates the projector's status.
⑨ Power button	Turns the projector on or off.


Name	Function
⑩ USB-C port (EF-72)	Supplies power from a portable charger when an AC adapter is not available.  You cannot use the USB-C port for anything other than supplying power from a portable charger.
⑪ Speaker (EF-62/EF-61)	Outputs audio.

► Related Links

- "Projector Connections" [p.25](#)
- "Attaching Safety Wire (EF-72/EF-71)" [p.24](#)
- "Projector Indicator Status" [p.81](#)

Projector Parts - Base


EF-72/EF-71 (model with stand)

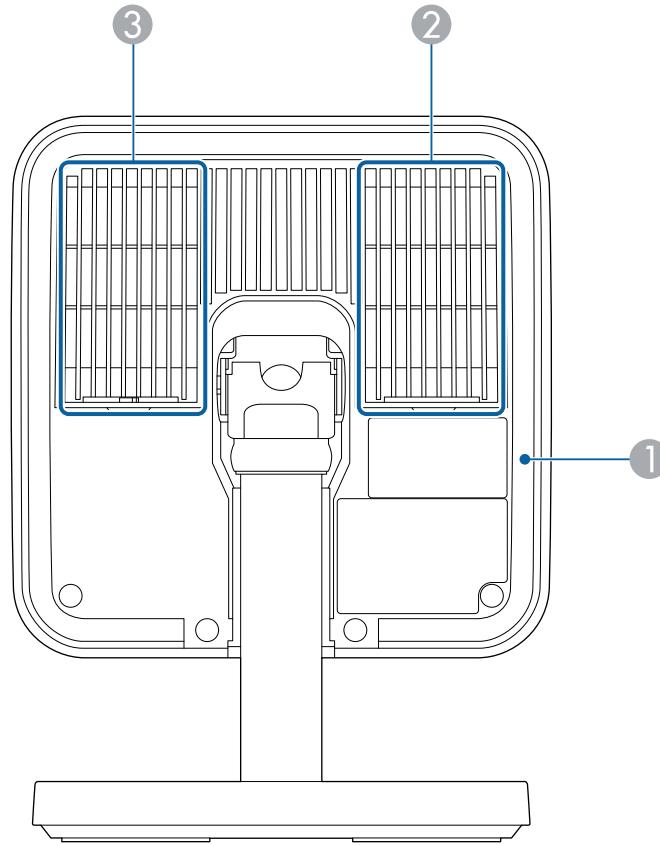

Name	Function
① Light (ambient light) (EF-72)	Lights up when you touch the projector's top panel.
② Air intake vent (air filter)	Takes in air to cool the projector internally. Attention Do not apply strong pressure to this part. The non-replaceable internal filter may come off.

Name	Function
③ Air intake vent	Takes in air to cool the projector internally.

EF-62/EF-61

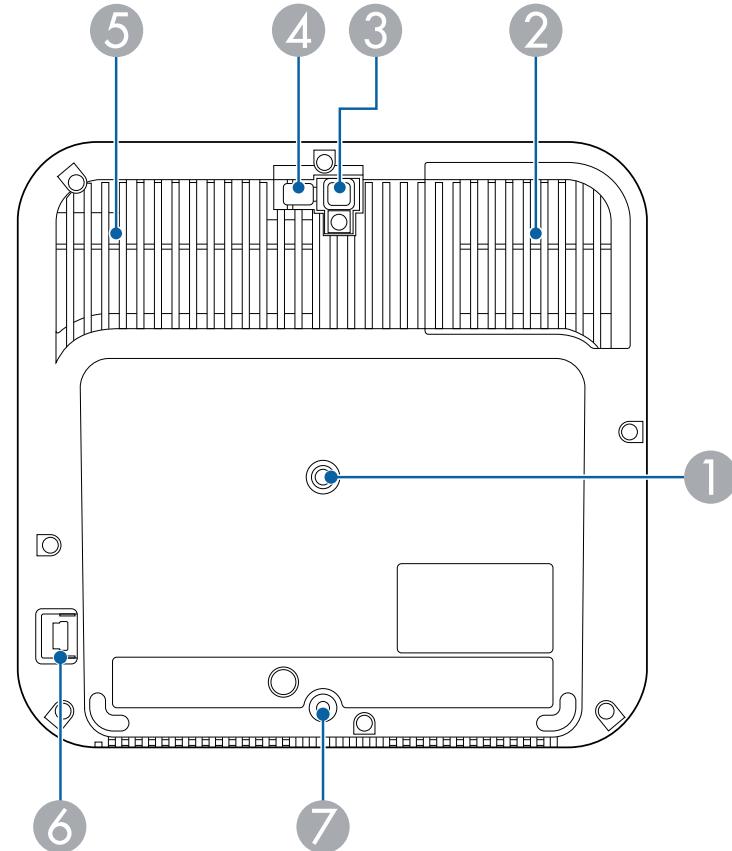


Name	Function
① Mounting hole for tripod	Use when mounting the projector on a commercially available tripod.



Name	Function
② Air intake vent (air filter)	Takes in air to cool the projector internally. Attention Do not apply strong pressure to this part. The non-replaceable internal filter may come off.
③ Front adjustable foot	When set up on a surface such as a desk, extend the foot to adjust the position of the image.
④ Foot release lever	Press the foot release lever to extend or retract the front adjustable foot.
⑤ Air intake vent	Takes in air to cool the projector internally.
⑥ Service port	This port is not normally used.
⑦ Safety wire attachment point	Attach the optional safety wire here to prevent the projector from falling from the ceiling or wall.

► Related Links

- "Mounting the Projector on a Tripod or Projector Stand (Floor-stand or Ceiling-mount) (EF-62/EF-61)" [p.23](#)
- "Adjusting the Image Height (EF-62/EF-61)" [p.41](#)
- "Air Filter and Vent Maintenance" [p.77](#)

Projector Parts - Remote Control

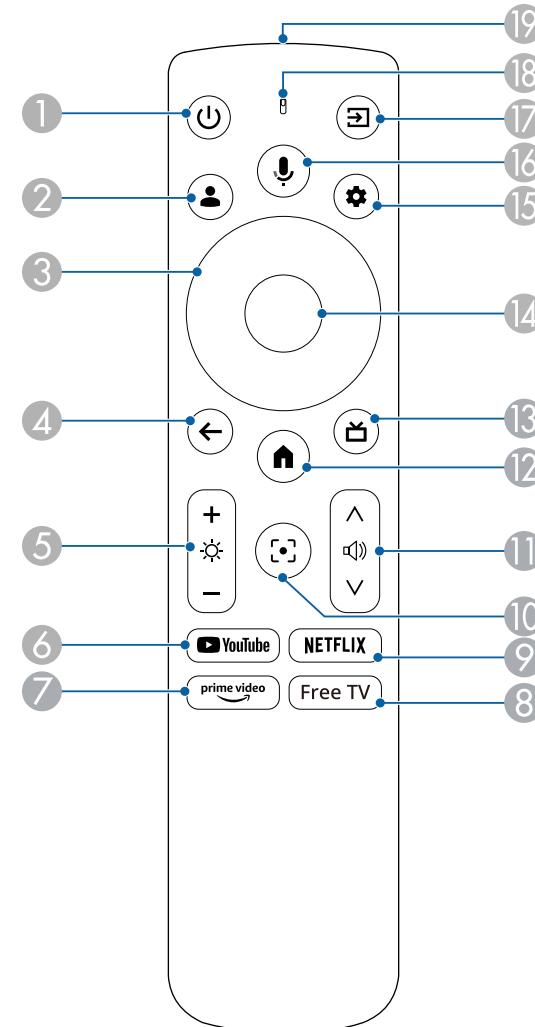

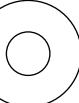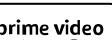Name	Function
① Power button 	Turns the projector on or off.
② User Profile button 	Displays the user profile.
③ Arrow buttons 	Selects items on the home screen to play online content. Selects menu items while displaying the projector's menu.
④ Esc button 	Stops the current function. Moves back to the previous menu level while displaying the projector's menu.
⑤ Brightness button 	Lightens or darkens the projected image.
⑥ YouTube button 	Starts the YouTube application.
⑦ Prime Video button 	Starts the Amazon Prime Video application.

Name	Function
⑧ Free TV button 	Starts the Free TV application.  Depending on your region, this button may appear as the Live TV button. Live TV is not available in certain languages and countries. Availability of services varies by country and language.
⑨ Netflix button 	Starts the Netflix application.
⑩ Focus button 	Displays the focus adjustment screen. Press the left and right arrow buttons to adjust the focus setting.
⑪ Volume up/down buttons 	Adjusts the volume for the speaker and headphones.
⑫ Home button 	Displays the home screen.
⑬ HDMI button 	Switches to the HDMI source.
⑭ [Enter] button 	Enters the current selection and moves to the next level while displaying the projector's menu.

Name	Function
⑯ Settings button 	Opens the dashboard.
⑰ Google Assistant button 	Press the Google Assistant button on the remote, and say, "Hey Google" to get started.  Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.
⑯ Source Search button 	Displays a list of available input sources.
⑰ Indicator/Microphone	Turns on when outputting signals from the remote control. Detects your voice when you press the Google Assistant button.
⑯ Remote control light emitting area	Outputs remote control signals.

► Related Links

- "Turning On the Projector" [p.35](#)
- "Adjusting the Light Source Brightness" [p.54](#)
- "Controlling the Volume with the Volume Buttons" [p.55](#)
- "Focusing the Image Using the Projector Menus" [p.48](#)
- "Using the Projector's Menus" [p.66](#)
- "Selecting an Image Source" [p.49](#)

Setting Up the Projector

Follow the instructions in these sections to set up your projector.



► Related Links

- "Projector Placement" [p.19](#)
- "Projector Connections" [p.25](#)
- "Installing Batteries in the Remote Control" [p.29](#)
- "Setting Up the Projector OS" [p.31](#)
- "About Epson Projector Update" [p.33](#)

You can place the projector on almost any flat surface to project an image.

You can also mount the projector on a commercially available tripod or on a commercially available projector stand. (EF-62/EF-61)


The projector can be installed at various angles. There is no vertical or horizontal limit to how the projector can be installed. (EF-62/EF-61)

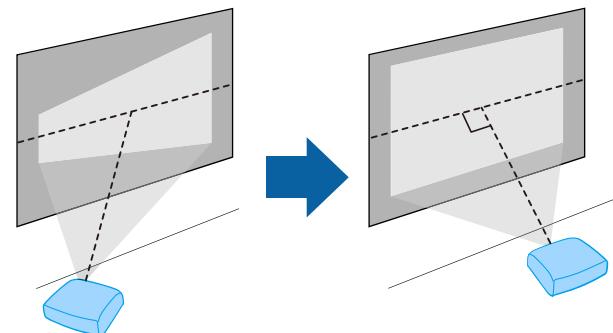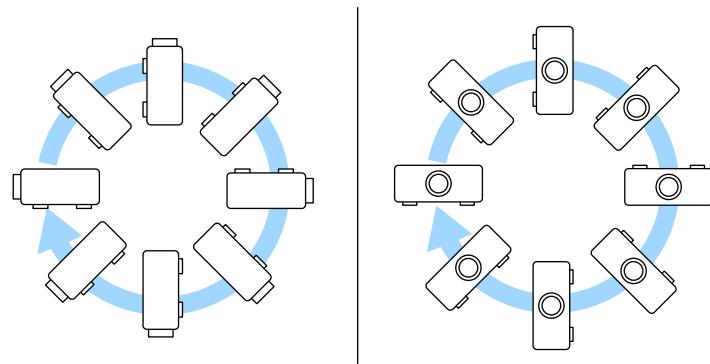

If you cannot install the projector squarely facing the screen, correct any resulting keystone distortion using the projector controls. For the best quality images, we recommend adjusting the installation position of the projector to achieve the correct image size and shape.

Note the following points when selecting a projector location:

- Place the projector on a sturdy, level surface or install it using a compatible mount.

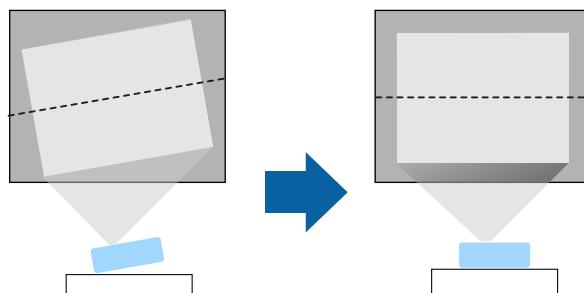

- Leave plenty of space around and under the projector for ventilation, and do not place it on top of or next to anything that could block the vents.
- Place the projector so it squarely faces the screen, not at an angle.

Warning

- You must install a ceiling mount when suspending the projector from a ceiling. If you do not install the projector correctly, it could fall and cause damage or injury. (EF-62/EF-61)
- Do not use adhesives on the mounting hole to prevent the screws from loosening, or use lubricants, oils, or similar substances on the projector; the projector case may crack causing it to fall. This could cause serious injury to anyone under the ceiling mount and could damage the projector. (EF-62/EF-61)
- Do not install the projector in a location subject to high levels of dust or humidity, or in a location subject to smoke or steam. Otherwise, it could cause a fire or electric shock to occur. The projector's case could also deteriorate and be damaged causing the projector to fall from the mount.

Examples of environments that could cause the projector to fall due to case deterioration


- Locations subject to excessive smoke or airborne oil particles, such as factories or kitchens
- Locations containing volatile solvents or chemicals, such as factories or laboratories
- Locations where the projector could be subjected to detergents or chemicals, such as factories or kitchens
- Locations in which aroma oils are often used, such as relaxation rooms
- Near devices that produce excessive smoke, airborne oil particles, or foam at events
- Locations near humidifiers

Warning

- Do not cover the projector's air intake or air exhaust vents. If the vents are covered, the internal temperature could rise and cause a fire.
- Do not use or store the projector in locations where it will be subject to dust or dirt. Otherwise, the quality of the projected image may decline, or the air filter may become clogged, resulting in a malfunction or fire.
- Do not install the projector on an unstable surface or in a location beyond the weight specifications of the projector. Otherwise, it could fall or topple causing an accident and injury.
- When installing the projector in a high position, take measures to prevent falling by using wires to ensure safety in an emergency, such as an earthquake, and to prevent accidents. If it is not installed correctly, it could fall causing an accident and injury.
- Do not install in locations where salt damage could occur, or in locations subject to corrosive gas such as sulphuric gas from hot springs. Otherwise, corrosion could cause the projector to fall. It could also cause the projector to malfunction.


⚠ Caution

When carrying the projector, be sure to hold the stand in both hands. Otherwise, the projector could fall causing damage or injury. (EF-72/EF-71)

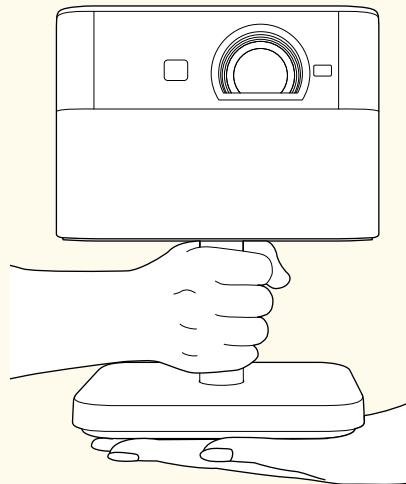


Make sure you select the correct **Projection** option in the projector's menu according to the installation method being used.


Front/Rear

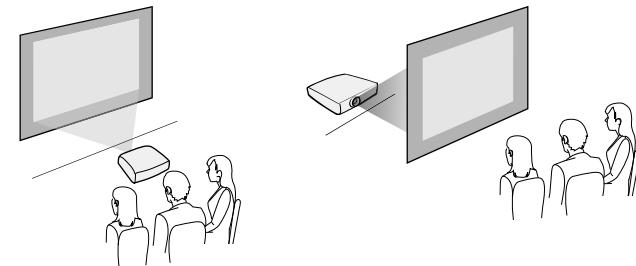

Front Ceiling/Rear Ceiling (EF-62/EF-61)

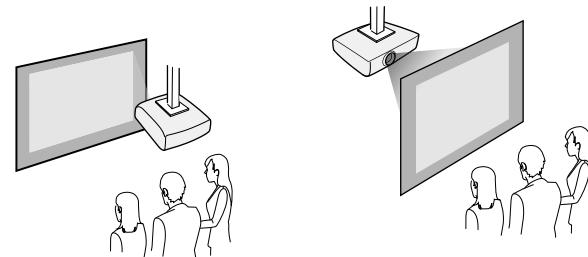

Projecting Images onto a Ceiling (EF-72/EF-71)

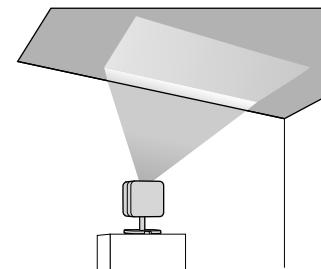

► Related Links

- "Projector Setup and Installation Options" [p.21](#)
- "Projection Distance" [p.22](#)
- "Mounting the Projector on a Tripod or Projector Stand (Floor-stand or Ceiling-mount) (EF-62/EF-61)" [p.23](#)
- "Attaching Safety Wire (EF-72/EF-71)" [p.24](#)
- "Adjusting the Image Height (EF-62/EF-61)" [p.41](#)
- "Adjusting the Position of the Image (EF-72/EF-71)" [p.42](#)
- "Focusing the Image Using the Projector Menus" [p.48](#)
- "Image Shape" [p.44](#)
- "Focusing the Image Using the Projector Menus" [p.48](#)

Projector Setup and Installation Options

You can set up or install your projector in the following ways:

⚠ Caution

Do not cover the projector's lens. If the lens is covered, the internal temperature could rise and it could result in a malfunction.

Attention

If you tilt the projector toward the ceiling while cables are connected to the projector's ports, you may damage the cables or ports. (EF-72/EF-71)

► Related Links

- "Precautions on Installation" [p.22](#)
- "Projection Modes" [p.40](#)


Precautions on Installation

Note the following precautions when installing the projector.

Installation space

Attention

Be sure to leave the following amount of space around the projector so as not to block the air exhaust and intake vents.

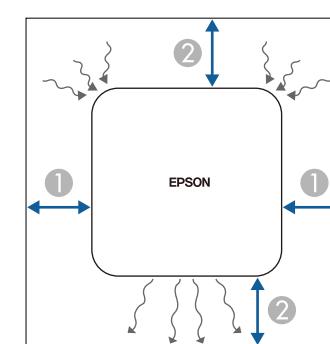

① 4" (10 cm)

② 8" (20 cm)

⚠ Caution

Install the supplied AC adapter more than 11.8" (30 cm) away from the projector. If the temperature of the AC adapter rises due to heat from the projector, the projector may not operate properly.


Projection Distance

The distance at which you place the projector from the screen determines the approximate size of the image. The image size increases the farther the projector is from the screen, but can vary depending on the aspect ratio and other settings.

See the Appendix for details about how far to place the projector from the screen based on the size of the projected image.



When correcting keystone distortion, your image is slightly smaller.

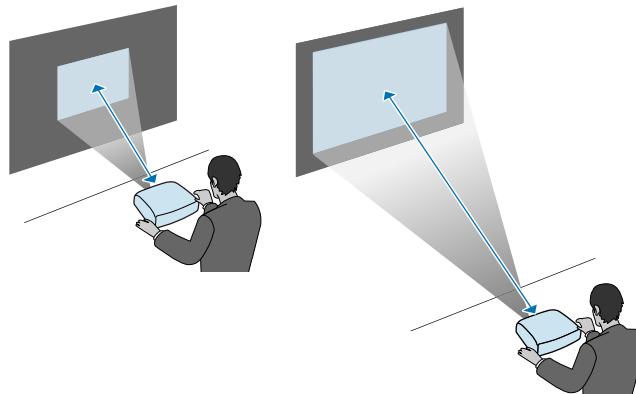

► Related Links


- "Screen Size and Projection Distance" [p.97](#)

Mounting the Projector on a Tripod or Projector Stand (Floor-stand or Ceiling-mount) (EF-62/EF-61)

You can mount the projector on a commercially available tripod or projector stand.



- Use 1/4-20 UNC size (6.35 mm outer diameter) fixing screws (minimum depth 8.4 mm) to fix the projector's mounting hole for the tripod to the mounting hardware at one point.

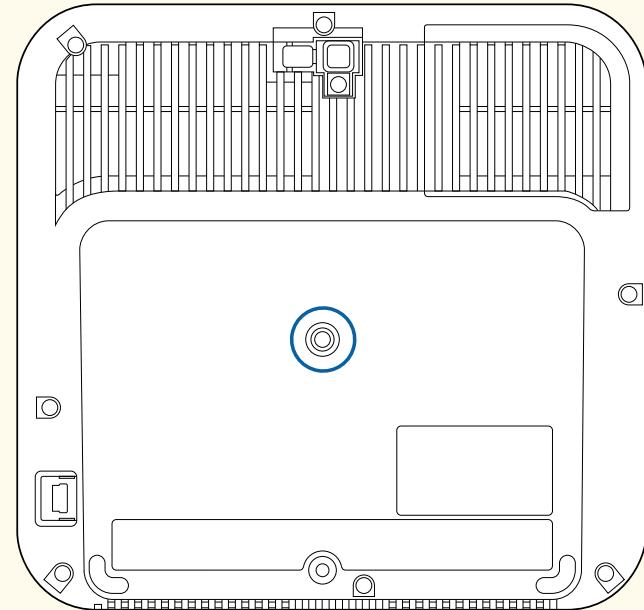


- When installing the projector in a high place, be sure to attach the optional safety wire set (ELPWR01) for safety purposes.

1

Turn the projector upside down.

- 2** When installing the projector in a high place, attach the optional safety wire set (ELPWR01) to the safety wire attachment point.

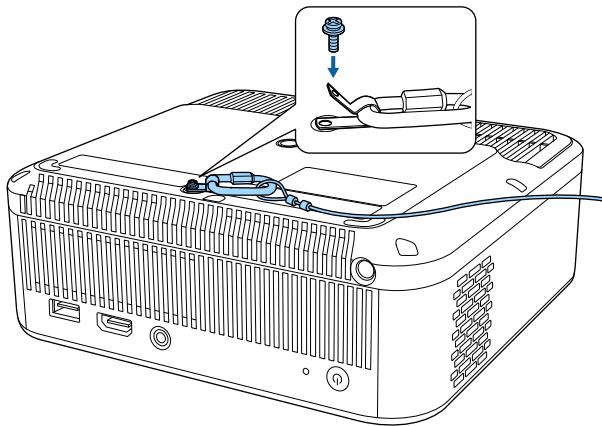

- 3** Mount the projector on a tripod or a projector stand. For details, see the documentation supplied with the tripod or projector stand.

⚠ Warning

When mounting the projector on the tripod, note the following points:


- Use a tripod that is strong enough to support the weight of the projector.
- Securely tighten the tripod's screw into the projector's mounting hole. If the screw loosens, the projector could fall or topple causing an accident and injury.
- Do not carry the projector while it is mounted on a tripod. Doing so will put too much pressure on the tripod fixing point and the projector could fall or topple causing an accident and injury.
- Place the tripod on a flat and stable surface. Otherwise, the tripod could topple causing an accident and injury.
- For details on how to use the tripod, see the documentation supplied with the tripod.

When installing the projector in a high place such as a ceiling, make sure you hook the carabiner of the optional safety wire set (ELPWR01) to a point that is strong enough to hold the weight of the projector and the mounting hardware.

Attaching Safety Wire (EF-72/EF-71)

When you install the projector in a high place, make sure you attach the optional safety wire set (ELPWR01) to prevent the projector from falling.

- 1** Wind the safety wire around the pole of the projector stand and pass it through the loop.

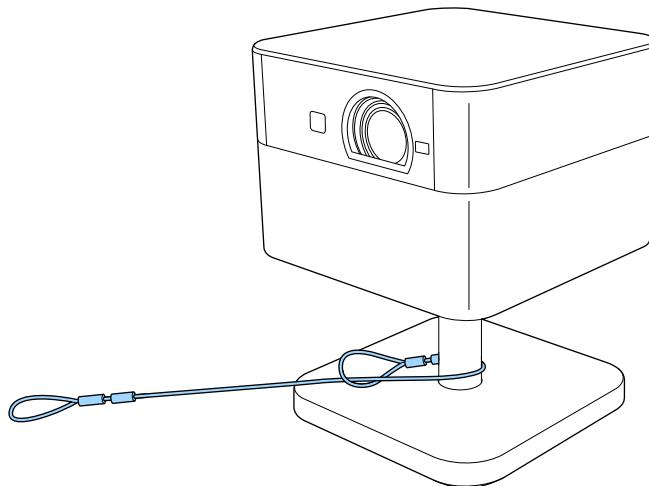

- 2** Attach the other loop to a location that is strong enough to support the weight of the projector.

► Related Links

- "Projector Parts - Rear/Side" [p.11](#)

See these sections to connect the projector to a variety of projection sources.

Attention

- Check the shape and orientation of the connectors on any cable you plan to connect. Do not force a connector into a port if it does not fit. The device or your projector could be damaged or could malfunction.
- Make sure you connect the projector and video devices first, and then connect the power cord to the projector's power inlet and plug it into an electrical outlet.
- If you tilt the projector toward the ceiling while cables are connected to the projector's ports, you may damage the cables or ports. (EF-72/EF-71)



- If the port on the device you connect has an unusual shape, use the cable supplied with the device or an optional cable to connect to the projector.
- Some video devices are capable of outputting different types of signals. See your video device manual to confirm what type of signals can be output.
- When sending 18 Gbps images such as 4K 60Hz 4:4:4, use an HDMI cable (premium-high speed). If you use an incompatible cable, images may not be displayed correctly.

► Related Links

- "Connecting to an HDMI Video Source" [p.25](#)
- "Connecting to a Computer for HDMI Video and Audio" [p.25](#)
- "Connecting to External USB Devices" [p.26](#)
- "Connecting Headphones" [p.27](#)
- "Connecting to an eARC/ARC Compatible AV System" [p.27](#)

Connecting to an HDMI Video Source


If your video source has an HDMI port, you can connect it to the projector using an HDMI cable.

Attention

Do not turn on the video source before connecting it to the projector. Doing so could damage the projector.

1 Connect the HDMI cable to your video source's HDMI output port.

2 Connect the other end to the projector's HDMI port.

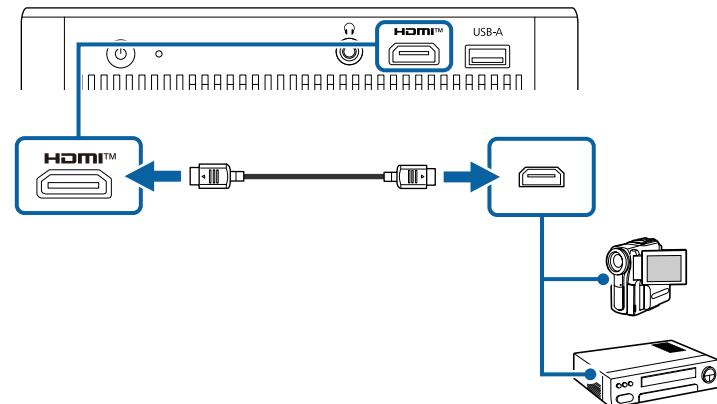


Connecting to a Computer for HDMI Video and Audio

If your computer has an HDMI port, you can connect it to the projector using an HDMI cable.


1 Connect the HDMI cable to your computer's HDMI output port.

- 2** Connect the other end to the projector's HDMI port.

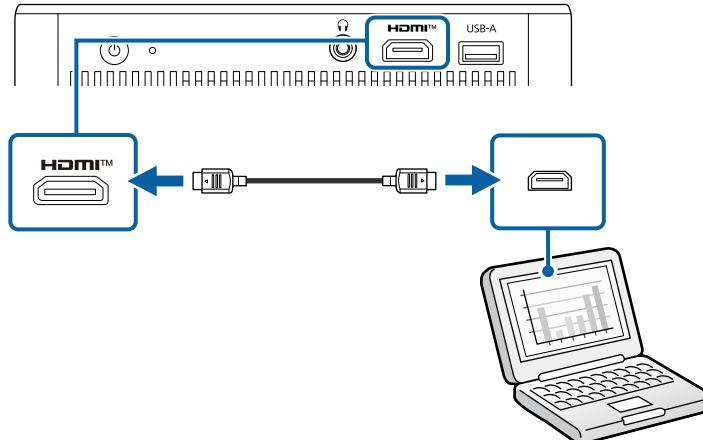

- The USB-A port is not guaranteed to operate all devices that support USB.
- You may need an app to project content from your USB device.
- USB hard drives must meet these requirements:
 - USB Mass Storage Class-compliant (not all USB Mass Storage Class devices are supported)
 - Formatted in FAT16/32
 - Self-powered by their own AC power supplies (bus-powered hard drives are not recommended)
 - Avoid using hard drives with multiple partitions

- 1** If your USB device came with a power adapter, plug the device into an electrical outlet.
- 2** Connect the USB device to the projector's USB-A port as shown.

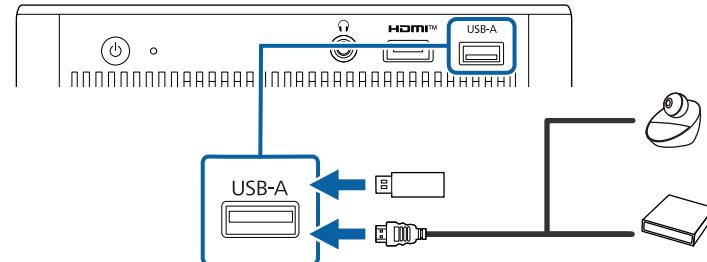

Attention

- Use the USB cable supplied with or specified for use with the device.
- If the USB cable is too long, the device may not operate correctly. We recommend using a USB cable that is three meters or less.
- If you use a USB hub, the device may not operate correctly. We recommend checking the operation in advance.

- 3 Connect the other end to your device, if necessary.


Connecting Headphones

You can connect headphones to the projector's Audio Out port. You can control the volume using the projector's remote control.

Attention

The projector's Audio Out port only supports 3-pin headphones. If you use any other headphones, audio may not be output normally.

- 1 Connect the stereo headphone's mini-jack cable to the projector's Audio Out port.

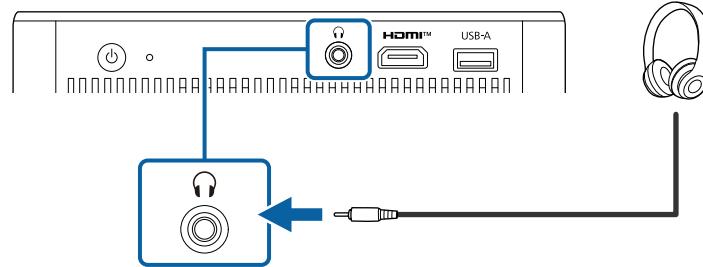

Caution


Do not start a playback at a high volume setting. Sudden loud noises may cause hearing loss.

Always lower the volume before powering off, so that you can power on and then gradually increase the volume.

Connecting to an eARC/ARC Compatible AV System

If your AV system or speakers, such as a sound bar, has an HDMI port, you can connect them to the projector using an HDMI cable (with Ethernet) to output audio to these devices.

- 1 Connect the HDMI cable to your AV system's HDMI output port (eARC or ARC compatible).
- 2 Connect the other end to the projector's HDMI port.

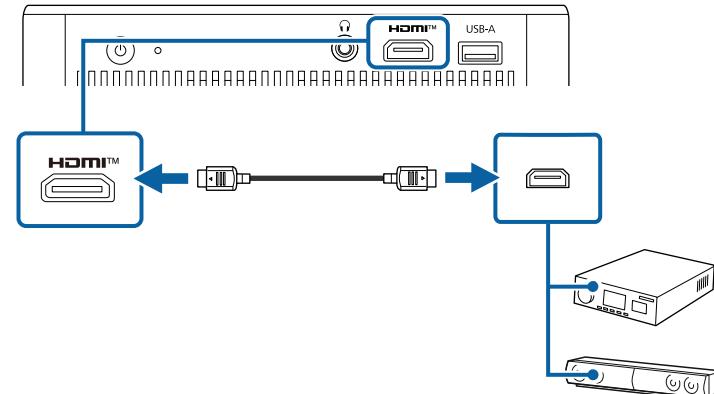

- 3 Make any necessary settings on the connected AV system. See your device's documentation for more information.




- To output audio from the projector's HDMI port when using an ARC connection, set **Global CEC control** to **On** in the projector's menu.
 👉 **Channels & Inputs > Inputs > Global CEC control**
- If audio is not output properly, try changing **Auto** to **PCM** as the **Digital Output** setting in the projector's menu.
 👉 **Display & Sound > Audio Output > Digital Output**
- See the *Supplemental A/V Support Specification* for eARC/ARC audio supported formats.

The remote control uses the two AAA batteries that came with the projector.

Attention

Make sure you read the safety instructions in the online *Notices* guide before handling the batteries.

- 1 Remove the battery cover as shown.

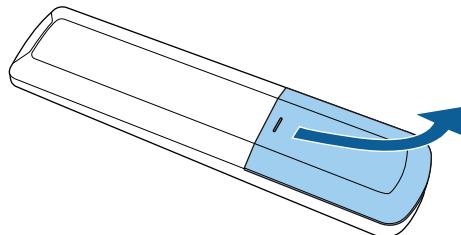


- 2 Remove the old batteries, if necessary.



Dispose of used batteries according to local regulations.


- 3 Insert the batteries with the + and – ends facing as shown.

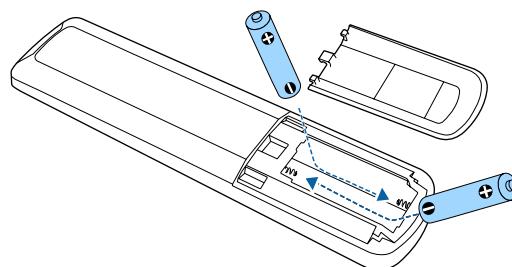

Warning

Check the positions of the (+) and (-) marks inside the battery holder to ensure the batteries are inserted the correct way. If the batteries are not used correctly, they could explode or leak causing a fire, injury, or damage to the product.

- 4 Replace the battery cover and press it down until it clicks into place.

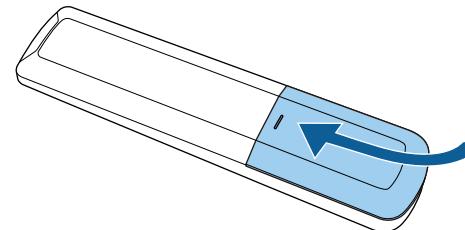


► Related Links

- "Remote Control Operation" [p.29](#)

Remote Control Operation

The remote control lets you control the projector from almost anywhere in the room.

It is recommended that you aim the remote control at the projector's receivers within the distance and angles listed here.

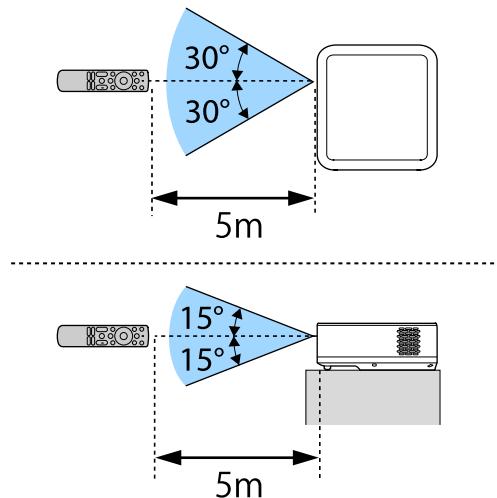

Avoid using the remote control in conditions with bright fluorescent lights or in direct sunlight, or the projector may not respond to commands. If you are not going to use the remote control for a long time, remove the batteries.


When you turn on the projector for the first time, you need to set up the projector's OS using the initial setup wizard.



You can change each of the settings even after completing the initial setup.

1 Turn on the projector.

2 When the pairing screen is displayed, hold down the button and button on the remote control at the same time to pair the remote control and the projector.

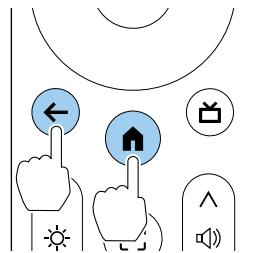

When pairing starts, the indicator on the remote control flashes.
When pairing is complete, the indicator turns off.

3 When the language selection screen is displayed, select the language you want to use, and then follow the on-screen instructions to select your country or region.

4 When the setting screen is displayed, follow the on-screen instructions to make the initial settings for the projector's OS.



- We recommend logging in with your Google Account to make more detailed settings.
- For instructions on how to create a Google Account, contact Google or see the following website.
[Google Account Help](#)

5 When the Wi-Fi setting screen is displayed, select the wireless network you want to use, and then follow the on-screen instructions to make necessary settings.

- An internet connection is required to view online content. Make sure you can use the Wi-Fi service.
- The customer is responsible for any communication charges incurred when downloading the app or watching online content.

6 Follow the on-screen instructions to make other necessary settings.

7 When you agree to the EPSON license terms, the initial setup wizard closes.

When you have finished the initial setup, the home screen is displayed.


► Related Links

- "Projector's Home Screen" [p.32](#)

Projector's Home Screen

When you turn on the projector or press the  button on the remote control, the home screen is displayed.

You can easily access recommended online content and applications from the home screen.

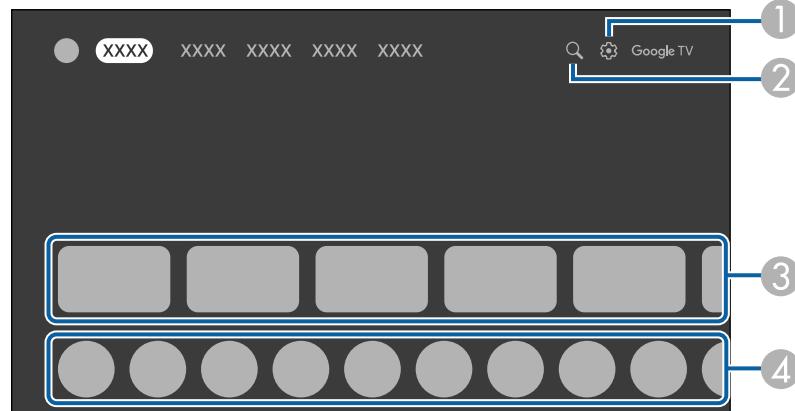

	Description
①	Displays the dashboard menu.
②	Searches for online content.
③	Displays the online content recommended by the applications.
④	Displays the applications downloaded on the projector.



The content of the home screen may change depending on the version of the projector's OS.

The Epson Projector Update app allows you to check the projector firmware and update it to the latest version. This is necessary to keep the projector up to date. Install the app, launch the app, and check for the latest firmware.



The Epson Projector Update app is automatically installed by the projector's initial setting wizard. To install it automatically, make sure you log in with your Google Account, make the necessary Wi-Fi settings, and connect the projector to the internet.


► Related Links

- "Installing Epson Projector Update" [p.33](#)

Installing Epson Projector Update

Follow the steps below to manually install the Epson Projector Update app.

- 1 Select the Apps icon at the top of the home screen and select the search field.

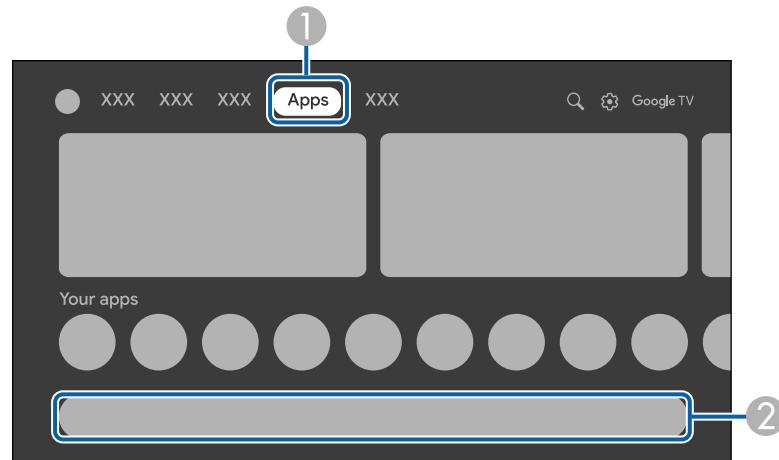

- 2 Search for "Epson Projector Update" to install it on the projector.



Epson Projector Update 

- 3 Start the Epson Projector Update app and confirm the latest projector firmware is installed on the projector.

► Related Links

- "Updating Projector Firmware Using Epson Projector Update" [p.63](#)

Using Basic Projector Features

Follow the instructions in these sections to use your projector's basic features.


► Related Links

- "Turning On the Projector" [p.35](#)
- "Turning Off the Projector (Suspended Mode)" [p.39](#)
- "Projection Modes" [p.40](#)
- "Adjusting the Image Height (EF-62/EF-61)" [p.41](#)
- "Adjusting the Position of the Image (EF-72/EF-71)" [p.42](#)
- "Image Shape" [p.44](#)
- "Focusing the Image Using the Projector Menus" [p.48](#)
- "Selecting an Image Source" [p.49](#)
- "Image Aspect Ratio" [p.50](#)
- "Adjusting Image Quality (Color Mode)" [p.51](#)
- "Adjusting Image Quality in Detail" [p.52](#)
- "Turning On Automatic Luminance Adjustment" [p.53](#)
- "Adjusting the Light Source Brightness" [p.54](#)
- "Controlling the Volume with the Volume Buttons" [p.55](#)
- "Changing the Sound Mode" [p.56](#)


When you connect the video equipment to the projector, turn on the video equipment you want to use after you turn on the projector.

- 1** Connect the AC adapter to the projector's AC adapter port.
- 2** Connect the power cord to the AC adapter.
- 3** Plug the power cord into an electrical outlet.

EF-72/EF-71

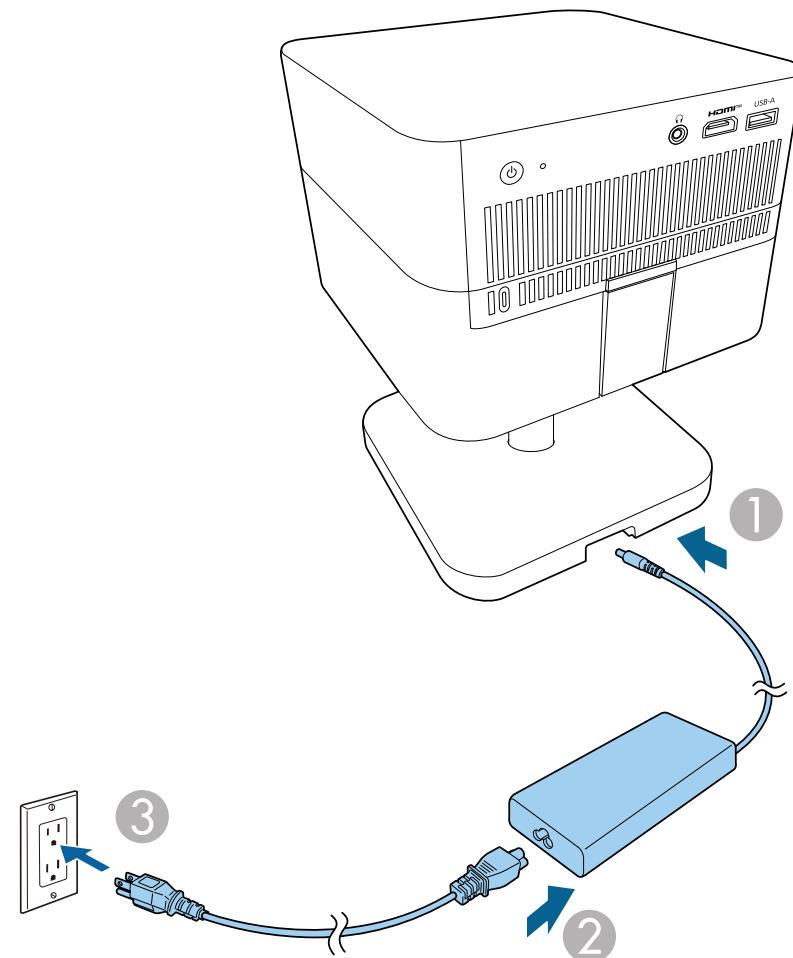

EF-62/EF-61

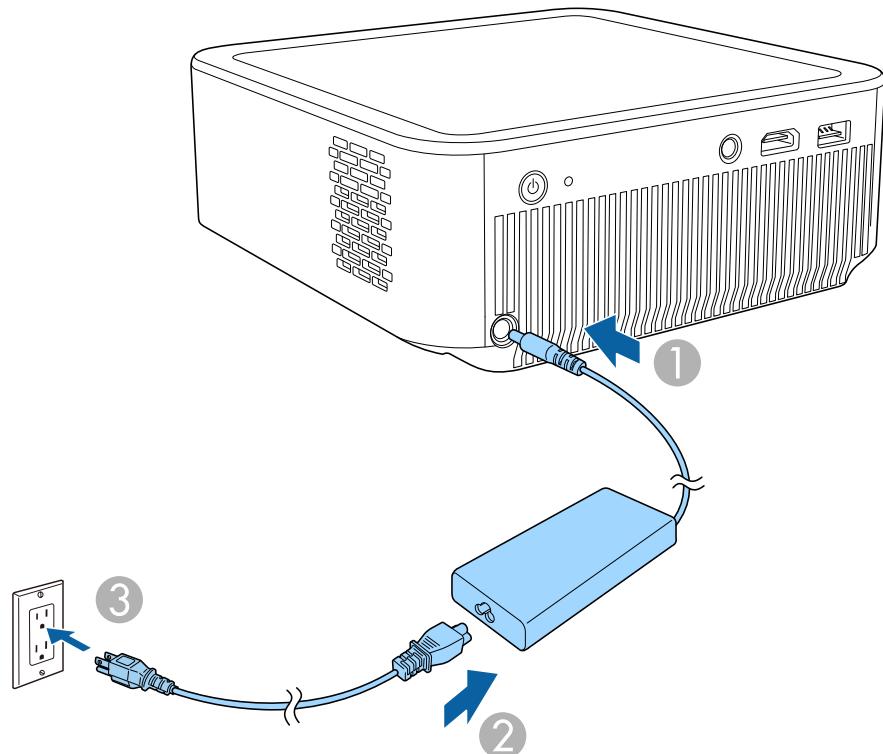

The projector enters standby mode. This indicates that the projector is receiving power, but is not yet turned on.

- 4** Press the power button on the projector or remote control to turn on the projector.

The status indicator turns white.

Auto Shape Correction automatically corrects the focus and any distortion of the projected image.

⚠ Warning

- Never look into the projector lens when the light source is on. This can damage your eyes and is especially dangerous for children.
- When turning on the projector at a distance using the remote control, make sure there is no one looking into the lens.
- During projection, do not block the light from the projector with a book or other objects. If the light from the projector is blocked, the area on which the light shines becomes hot which could cause it to melt, burn, or start a fire. Also, the lens may get hot due to the reflected light which could cause the projector to malfunction. To stop projection, turn off the projector.
- Even when the projector is turned off, do not place any flammable objects such as a book or cloth in front of the lens. If the projector is unexpectedly turned on for some reason, it could result in a fire.

► Related Links

- "AC Adapter Safety Instructions" [p.36](#)
- "Turning On the Projector Using the USB-C Port (EF-72)" [p.37](#)

AC Adapter Safety Instructions

Follow these safety instructions when using the supplied AC adapter.

⚠ Warning

- Under the following conditions, unplug the projector from the outlet and refer all repairs to qualified service personnel. Continuing to use under these conditions may result in fire or electric shock.
 - If smoke comes from the AC adapter.
 - If strange odors or strange noises come from the AC adapter.
 - If the AC adapter has been damaged.
 - If liquid or foreign objects get inside the AC adapter.

⚠ Warning

- Incorrect use of the AC adapter may cause malfunction, fire, or electric shock. Take the following precautions when using the AC adapter.
 - Do not use any AC adapter other than the one supplied with the projector.
 - The supplied AC adapter is designed specifically for this projector model. Do not use it with any other models.
 - Do not apply strong pressure or shocks to the AC adapter.
 - Do not hold the AC adapter with wet hands.
 - Do not install the AC adapter in a narrow space and do not cover it with cloth.
 - Do not touch the AC adapter for a long time while it is energized. It may cause a low-temperature burn.
 - Do not spray flammable gas such as insecticide on the AC adapter.
 - Do not put the AC adapter in a high-pressure container or a cooking appliance such as a microwave oven.
 - Do not place the AC adapter near the projector's air exhaust vent.
 - Do not wind the power cord around the AC adapter.

Turning On the Projector Using the USB-C Port (EF-72)

By connecting a portable charger to the projector's USB-C port, you can supply power to the projector. Even in environments where securing power is difficult, you can use the projector with a portable charger.



Use a commercially available portable charger that meets the following specifications:


- Output: 100 W or higher
- Capacity: 24,000 mAh or greater

1

Connect the projector to the portable charger using a USB-C cable.



Use a commercially available USB-C cable that supports 100 W output.

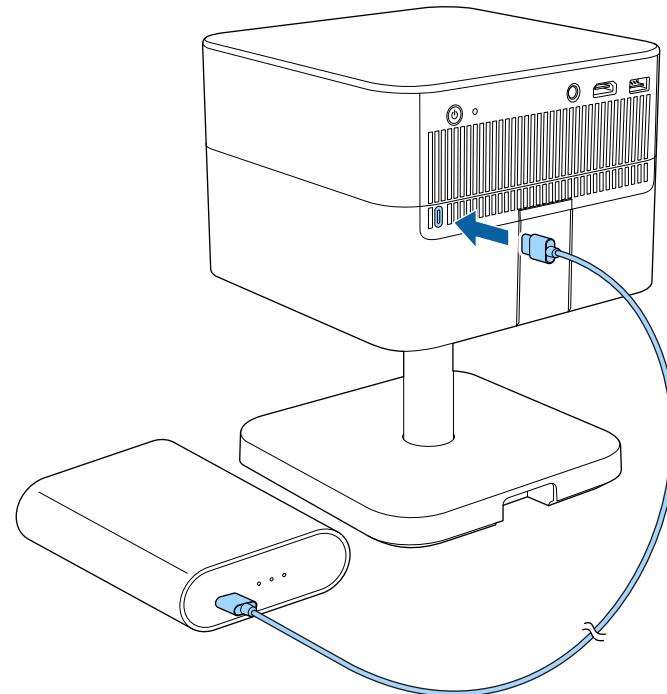

The projector enters standby mode. This indicates that the projector is receiving power, but is not yet turned on.

2

Press the power button on the projector or remote control to turn on the projector.

The status indicator turns white.

Caution

Do not place the portable charger on the projector. The portable charger may slip off and cause damage or injury.



- When using a fully charged portable charger with a capacity of 24,000 mAh, you can project for approximately 60 minutes under normal temperature conditions (77 °F [25 °C]).
- When using a portable charger, the following limitations apply to reduce power consumption:
 - The image will be dimmed.
 - You cannot use the USB-C port for anything other than supplying power from a portable charger.

Turn off the projector after use.



Turn off this product when it is not in use to prolong the life of the projector. Light source life varies depending on the environmental conditions and usage. Brightness decreases over time.

- 1 Press the power button on the projector or remote control.

The light source turns off, and the status indicator turns off. The projector enters suspended mode.

- 2 To transport or store the projector, make sure the status indicator on the projector is off, and then unplug the power cord.

► Related Links

- "Turning Off the Projector (Deep Standby Mode)" [p.39](#)

Turning Off the Projector (Deep Standby Mode)

To reduce power consumption when the projector is not in use, turn off the projector completely using the remote control.



- In deep standby mode, the projector consumes less power than in suspended mode.
- It takes longer for the projector to start up the next time you turn it on than when it is in suspended mode.

- 1 Hold down the power button on the remote control.

- 2 Select OK on the shutdown confirmation screen.

The light source turns off, and the status indicator turns off. The projector enters deep standby mode, reducing power consumption.

- 3 To transport or store the projector, make sure the status indicator on the projector is off, and then unplug the power cord.

Depending on how you positioned the projector, you may need to change the projection mode so your images project correctly.

- **Front** lets you project from in front of the screen.
- **Front/Ceiling** flips the image over top-to-bottom to project upside-down from a ceiling. (EF-62/EF-61)
- **Rear** flips the image horizontally to project from behind a translucent screen.
- **Rear/Ceiling** flips the image over top-to-bottom and horizontally to project from a ceiling and behind a translucent screen. (EF-62/EF-61)

► Related Links

- "Changing the Projection Mode Using the Menus" [p.40](#)
- "Projector Setup and Installation Options" [p.21](#)

Changing the Projection Mode Using the Menus


You can change the projection mode to flip the image over top-to-bottom using the projector menus.

- 1 Turn on the projector and display an image.
- 2 Press the  button on the remote control to open the dashboard.
- 3 Select  on the dashboard.
- 4 Select the menus in the following order:
 **Projector** > **Advanced Settings** > **Projection**
- 5 Select a projection mode and press [Enter].
- 6 Press  to exit the menus.

If you are projecting from a table or other flat surface and the image is too high or low, you can adjust the image height using the projector's adjustable foot.

The larger the angle of tilt, the harder it becomes to focus. Locate the projector so that it only needs to be tilted at a small angle.

- 1 Turn on the projector and display an image.
- 2 Press the foot release lever to extend and retract the front adjustable foot.

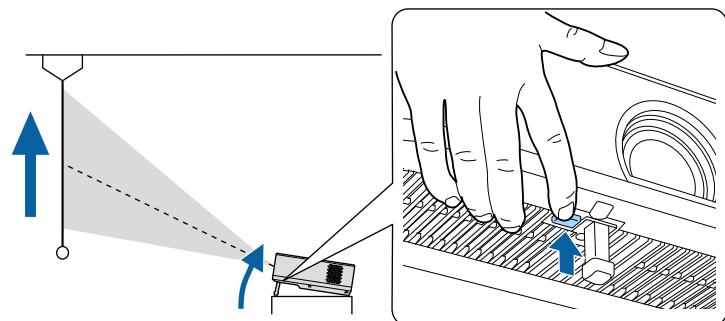

The foot extends from the projector.

You can adjust the position up to 8 degrees.

- 3 Release the lever to lock the foot.

If the projected image is unevenly rectangular, you need to adjust the image shape.

► Related Links

- "Image Shape" p.44

If you are projecting from a table or other flat surface, you can adjust the image position by tilting or moving the projector on the stand.

The larger the angle of tilt, the harder it becomes to focus. Locate the projector so that it only needs to be tilted at a small angle.


Attention

When tilting or moving the projector, note the following points to avoid injury:

- Do not get your fingers caught in the movable or rotating parts of the projector stand.
- Tilt or move the projector slowly.

1 Turn on the projector and display an image.

2 Adjust the image height by tilting the projector up or down.

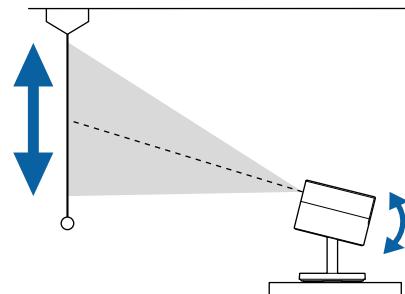


Attention

- Use both hands to tilt the projector, as shown.




- You can adjust the position from -15 to +90 degrees vertically.
- When tilting the projector more than 60 degrees upwards, remove the fabric cover. Otherwise, the projector or the fabric cover may be damaged.

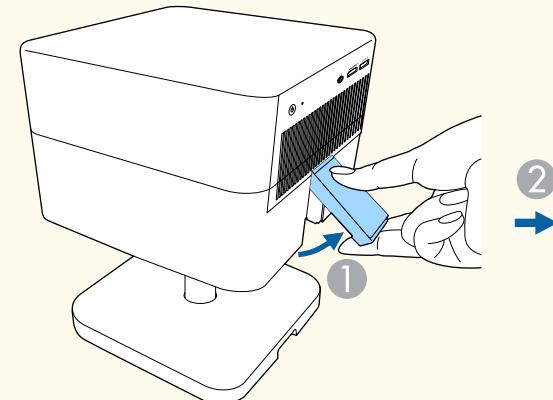

- Do not tilt the projector up or down beyond its range of movement. Doing so may cause a malfunction.

- 3** To adjust the horizontal position of the projected image, turn the projector left or right as shown below.

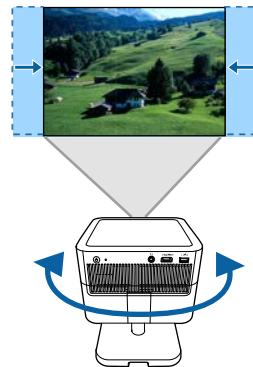

Attention

- Turn the projector slowly. Turning it with too much force may cause a malfunction.
- Do not turn the projector left or right beyond its range of movement. Doing so may cause a malfunction.
- Do not turn the projector by holding the cables connected to the projector's ports. Doing so may damage the cables or ports.

If the projected image is unevenly rectangular, you need to adjust the image shape.

► Related Links

- "Image Shape" [p.44](#)

You can project an even, rectangular image by placing the projector directly in front of the center of the screen and keeping it level. If you place the projector at an angle to the screen, or tilt it up or down, or off to the side, you may need to correct the image shape.

After correction, your image is slightly smaller.

For the best quality images, we recommend adjusting the installation position of the projector to achieve the correct image size and shape.

► Related Links

- "Correcting the Image Shape and Focus Automatically" [p.44](#)
- "Adjusting the Size and Position of the Image" [p.45](#)
- "Automatically Correcting the Image Shape with Screen Fit" [p.45](#)
- "Correcting the Image Shape with Quick Corner" [p.46](#)

Correcting the Image Shape and Focus Automatically

When the projector is moved or tilted, Auto Shape Correction automatically corrects focus and any keystone distortion of the projected image.

Auto Shape Correction operates under the following conditions:

- When the size of the projected image (diagonal length) before correcting the focus and keystone distortion is from 30 to 100 inches.
- When the projection distance is about 195.6 to 105 inches (77 to 267 cm).
- When the installation angle of the projector toward the projection surface is within 20° right, left, up, or down.




- Auto Shape Correction operates even if the size of the projected image exceeds 100 inches. However, the adjustment may fail depending on the installation angle of the projector, the brightness of the room, and the material of the projection surface. If necessary, adjust the keystone distortion and focus settings manually using the projector menu.
- When an image is being projected at an angle and has been reduced using the Zoom & Shift function, keystone distortion may not be corrected. If the correction fails, adjust the reduction ratio of the image so that it is closer to 100%.

► Projector > Keystone > Zoom & Shift



- If you set While Moving to Off, Auto Shape Correction does not automatically correct focus or keystone distortion of the projected image when the projector is moved or tilted.
- To manually perform Auto Shape Correction, select Start Corrections from the Projector menu.
► Projector > Keystone > Auto Shape Correction > While Moving
- If you set Obstacle Avoidance to On, the image is projected so that it avoids any obstacles in front of the projection surface. Your image is slightly smaller.
► Projector > Keystone > Auto Shape Correction > Obstacle Avoidance

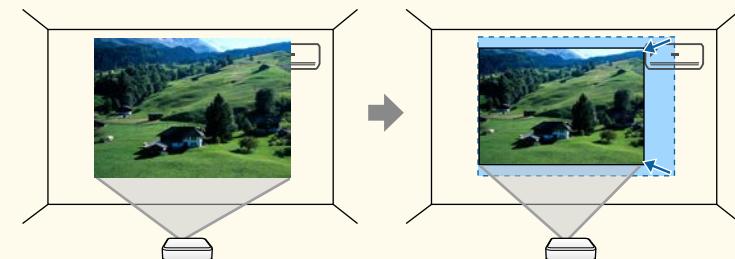

► Related Links

- "Projector Feature Settings - Projector Menu" [p.68](#)

Adjusting the Size and Position of the Image

You can use the **Zoom & Shift** feature to adjust the size and position of the projected image.

- 1 Turn on the projector and display an image.
- 2 Press the  button on the remote control to open the dashboard.
- 3 Select  on the dashboard.
- 4 Select the menus in the following order:
 **Projector** > **Keystone** > **Zoom & Shift**
The zoom adjustment screen is displayed.



- 5 Use the left and right arrow buttons to adjust the image size.

- 6 Press the [Enter] button.

The screen switches to **Shift mode** and the shift adjustment screen is displayed.



- 7 Use the arrow buttons to adjust the image position.


- 8 Press  to exit the menus.

► Related Links

- "Projector Feature Settings - Projector Menu" [p.68](#)

Automatically Correcting the Image Shape with Screen Fit

You can use the projector's **Screen Fit** feature to automatically correct the shape and position of images to fit on your screen.

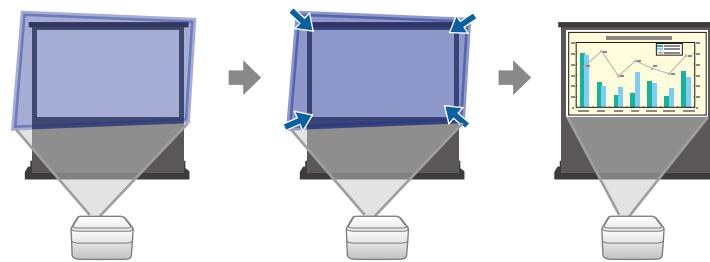

Screen Fit operates under the following conditions:

- Screen size is from 30 to 100 inches.
- Projection distance is about 195.6 to 105 inches (77 to 267 cm).
- Projection angle is within about 15° right, left, up, or down.
- The room is not too dark.
- The projection surface is not patterned and does not deflect the projector's camera in some way.



When using Screen Fit, we recommend setting While Moving to Off to prevent Auto Shape Correction from unintentionally correcting the shape of the projected image.

▶ Projector > Keystone > Auto Shape Correction > While Moving

1 Turn on the projector and display an image.

2 Press the button on the remote control to open the dashboard.

3 Select on the dashboard.

4 Select the menus in the following order:

▶ Projector > Keystone > Screen Fit

You see a message on the screen.

5 Move the projector as necessary to display the message in the middle of the screen.

6 Expand the projection area so that it extends beyond the edges of the screen.



- Move the projector farther away from the screen as necessary.
- For example, when you project onto a wide screen in a small room and you cannot extend the projection area beyond the screen frame, the projection area must include at least the top and bottom two sides of the screen so that Screen Fit detects the screen height and adjusts the image to fit the screen.



7 Select START.


When the adjustment screen is displayed, do not move the projector or block the image. The projected image is corrected according to the aspect ratio of the image being input and the completion message is displayed.

▶ Related Links

- "Projector Feature Settings - Projector Menu" [p.68](#)

Correcting the Image Shape with Quick Corner

You can use the projector's Quick Corner setting to correct the shape and size of an image that is unevenly rectangular.

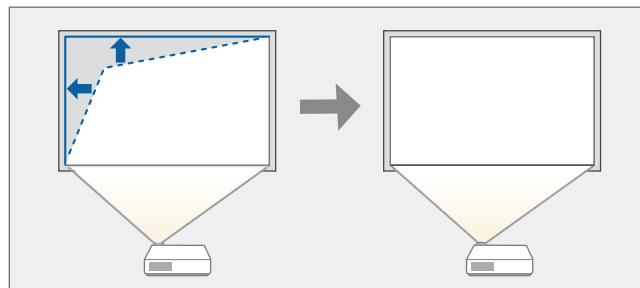


- If the direction key on the screen turns gray, you cannot make further adjustments in that direction.
- To reset the corrections, press and hold the [Enter] button.

6 Press  to exit the menus.

► Related Links

- "Projector Feature Settings - Projector Menu" [p.68](#)

- 1 Turn on the projector and display an image.
- 2 Press the  button on the remote control to open the dashboard.
- 3 Select  on the dashboard.
- 4 Select the menus in the following order:
 **Projector** > **Keystone** > **Quick Corner**
You see the **Quick Corner** screen.
- 5 Use the [Enter] button to select the point on the image you want to adjust, and adjust the image shape using the arrow buttons.

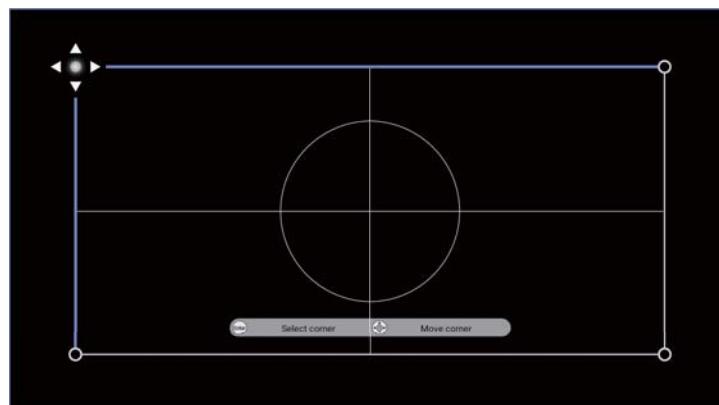


You can correct the focus using the projector menus.

1 Turn on the projector and display an image.

2 Press the  button on the remote control.

The focus adjustment screen is displayed.

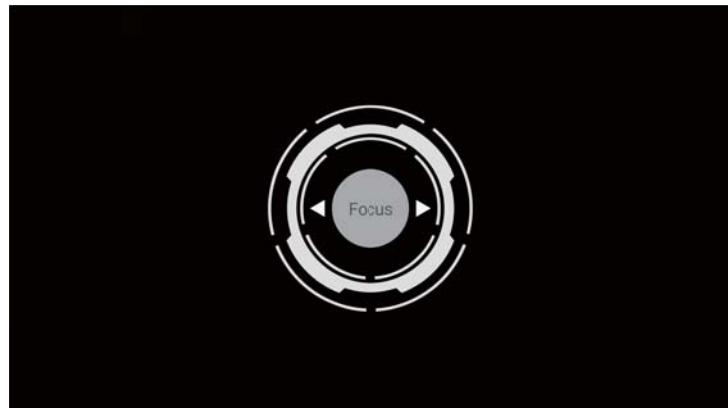

3 Press the left and right arrow buttons on the remote control to adjust the focus setting.

4 Press  to exit the menus.

When multiple image sources are connected to the projector, such as a computer and DVD player, you can switch from one image source to the other.

- 1** Make sure the connected image source you want to use is turned on.
- 2** For video image sources, insert a DVD or other video media and press play.
- 3** Press the  button on the remote control.
- 4** Press the up or down arrow button to select the image source you want.



When no image signal is detected, check the cable connections between the projector and the image source.

The projector can display images in different width-to-height ratios called aspect ratios. Normally, the input signal from your video source determines the image's aspect ratio. However, you can change the aspect ratio for certain images to fit your screen.

If you always want to use a particular aspect ratio for a certain video input source, you can select it using the projector's **Screen** menu.



You can select this setting only when the current input source is HDMI 1.

► Related Links

- "Changing the Image Aspect Ratio" [p.50](#)
- "Available Image Aspect Ratios" [p.50](#)

Changing the Image Aspect Ratio

You can change the aspect ratio of the displayed image.

- 1 Turn on the projector and display an image.
- 2 Press the  button on the remote control to open the dashboard.
- 3 Select  on the dashboard.
- 4 Select the menus in the following order:
 **Display & Sound > Screen**
- 5 Select one of the available aspect ratios for your input signal.
- 6 Press  to exit the menus.

Available Image Aspect Ratios

You can select the following image aspect ratios.



Note that using the aspect ratio function of the projector to reduce, enlarge, or split the projected image for commercial purposes or for public viewing may infringe upon the rights of the copyright holder of that image based on copyright law.

Aspect mode	Description
Super zoom	Zooms into images. The right, left, top, and bottom edges are missing.
4:3	Scales images to 4:3.
Movie expand 14:9	Scales images to 14:9.
Movie expand 16:9	Scales images to 16:9.
Full	Displays images using the full size of the projection area.
Unscaled	Displays images as they are.

The projector offers different color modes to provide optimum brightness, contrast, and color for a variety of viewing environments and image types. You can select the mode designed to match your image and environment, or experiment with the available modes.

► Related Links

- "Changing the Color Mode" [p.51](#)
- "Available Color Modes" [p.51](#)

Color mode	Description
Standard	This is a standard mode that balances brightness and color saturation. Standard mode is generally recommended.
Cinema	Best for enjoying content such as movies.
Vivid	Best for enjoying content with bright colors.
Natural	Reproduces natural colors. This is the best option when you want to adjust the image color.

Changing the Color Mode

You can change the projector's color mode to optimize the image for your viewing environment.

- 1 Turn on the projector and display an image.
- 2 Press the  button on the remote control to open the dashboard.
- 3 Select  on the dashboard.
- 4 Select the menus in the following order:
 **Display & Sound > Display > Picture Mode**
- 5 Select the color mode you want to use from the list.
- 6 Press  to exit the menus.

Available Color Modes

You can set the projector to use these color modes, depending on your environment and image types.

The projector's **Display** menu provides several options for adjusting the quality of your image based on the input source you are currently using. You can fine-tune various aspects of how quality and colors are displayed in your projected images.

Display & Sound > Display

See "Display & Sound Menu" for details on adjusting the image quality.

Related Links

- "Image Quality Settings - Display & Sound Menu" [p.69](#)

You can turn on **Dynamic Contrast** to automatically optimize the image luminance. This improves the image contrast based on the brightness of the content you project.

- 1** Turn on the projector and display an image.
- 2** Press the  button on the remote control to open the dashboard.
- 3** Select  on the dashboard.
- 4** Select the menus in the following order:
 **Display & Sound > Display > Advanced Settings > Dynamic Contrast**
- 5** Select one of the following options:
 - **Off** if you do not want to adjust the brightness.
 - **Normal** for standard brightness adjustment.
 - **High Speed** to adjust brightness as soon as the scene changes.
- 6** Press  to exit the menus.

► Related Links

- "Projector Feature Settings - Projector Menu" [p.68](#)

You can adjust the brightness of your projector's light source.

- 1 Turn on the projector and display an image.
- 2 Press the  up/down buttons on the remote control.
The Light Output adjustment gauge is displayed.
- 3 Press the  up/down buttons to adjust the brightness.
- 4 Press  to exit the menus.

The volume buttons control the projector's internal speaker system.

You can also control the volume of any external speakers you connected to the projector.

You must adjust the volume separately for each connected input source.



To adjust the volume for the connected audio/video system, set the **Global CEC control** setting to **On** in the projector's menu.

👉 **Channels & Inputs > Inputs > Global CEC control**

1 Turn on the projector and start a video.

2 To lower or raise the volume, press the  up/down buttons on the remote control.

A volume gauge appears on the screen.



Caution

Do not start a playback at a high volume setting. Sudden loud noises may cause hearing loss.

Always lower the volume before powering off, so that you can power on and then gradually increase the volume.

The projector offers different sound modes to provide optimum sound for a variety of image types.

You can select the mode designed to match your image, or experiment with the available modes.

- 1** Turn on the projector and start a video.
- 2** Press the  button on the remote control to open the dashboard.
- 3** Select  on the dashboard.
- 4** Select the menus in the following order:
 **Display & Sound > Sound > Sound Mode**
- 5** Select your sound mode.
- 6** Press  to exit the menus.

► Related Links

- "Available Sound Modes" [p.56](#)

Sound mode	Description
Standard	Outputs the audio using normal sound quality.

Available Sound Modes

You can set the projector to use these sound modes, depending on the input source you are using:

Sound mode	Description
Cinema	Best for audio from videos or movies. Low and high pitch sounds are emphasized.
Dialogue	Best for hearing voices and spoken lines.
Music	Best for music. Low and high pitch sounds are clearer.

Adjusting Projector Features


Follow the instructions in these sections to use your projector's adjustment features.

► Related Links

- "Using the Projector's Lighting Function (Ambient Light) (EF-72)" [p.58](#)
- "Using the Projector as a Bluetooth® Speaker" [p.59](#)
- "Shutting Off the Image Temporarily" [p.60](#)
- "Using Google Cast™" [p.61](#)
- "HDMI CEC Features" [p.62](#)
- "Updating Projector Firmware Using Epson Projector Update" [p.63](#)
- "Initializing the Projector" [p.64](#)

You can use the projector to provide ambient lighting. You can adjust the color and brightness of the lighting to suit the atmosphere and situation of the room.

- 1 Turn on the projector and display an image.
- 2 Touch the center of the projector's top panel.

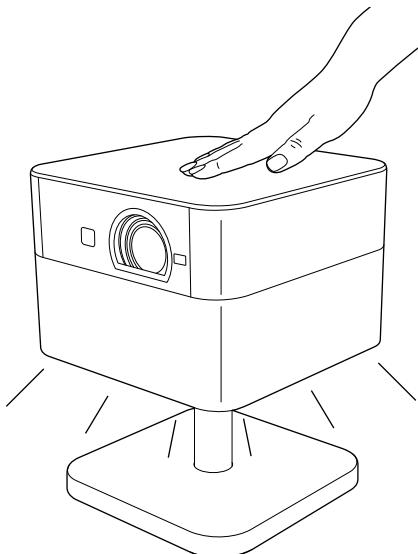

The light at the bottom of the projector turns on.

- 3 The brightness of the light changes each time you touch the top panel.
- 4 Press and hold the top panel to switch the light modes, such as the color and how it lights up.



- You can change the lighting settings from the projector's menu.
 → Projector > Ambient Light

► Related Links

- "Using Ambient Light in Standby Mode" [p.58](#)

Using Ambient Light in Standby Mode

You can use the projector's light feature even when the projector is not in use (in standby mode).


- 1 Turn on the projector and display an image.
- 2 Press the  button on the remote control to open the dashboard.
- 3 Select  on the dashboard.
- 4 Select the menus in the following order:
 → System > Power & Energy
- 5 Set Energy Modes to Optimized or Increased and press [Enter].



The Energy Modes setting is only displayed when you are signed in with a Google Account.

- 6 Press  to exit the menus.

You can use the projector's speaker to output audio from a video/audio device connected by Bluetooth.

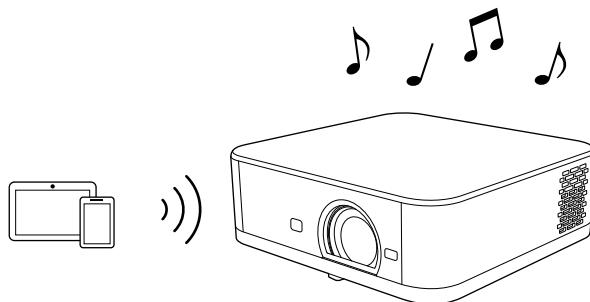

- 1 Turn on the projector and display an image.
- 2 Press the button on the remote control to open the dashboard.
- 3 Select on the dashboard.
- 4 Select the menus in the following order:
 Projector > Bluetooth Speaker Mode
The Bluetooth Speaker Mode screen is displayed.
- 5 Enable the Bluetooth function on the device you want to connect and select the projector name (this projector) from the available device list. See the documentation supplied with the device for more information.



- You can check and change the projector name from the projector's **Device name** menu.
 System > About > Device name
- To cancel a Bluetooth connection, disconnect from the connected device.

The projected image turns off 10 seconds after the Bluetooth connection is established.

- 6 Press to exit Bluetooth Speaker Mode.



- There is a delay in the audio output from any Bluetooth audio device.
- You cannot connect multiple video/audio devices by Bluetooth at the same time.
- You can also connect the projector to Bluetooth audio devices, such as speakers or headphones, to output the projector's audio from these devices. Select the menus in the following order to perform pairing from the menu displayed.
 Remotes & Accessories > Pair Accessory
- Bluetooth audio devices are not supported in some countries and regions.

You can temporarily turn off the projected image.



- 1** Press the button on the remote control to open the dashboard.
- 2** Select on the dashboard.
- 3** Select the menus in the following order:
 Display & Sound > Display > Advanced Settings
- 4** Select Picture off to turn off the projected image.
- 5** To turn the image back on, press .

► Related Links

- "Image Quality Settings - Display & Sound Menu" [p.69](#)

With Google Cast, you can stream entertainment from your favorite apps on your phone, tablet or laptop to Epson projectors.

1 Connect your device or computer to the same wireless network as the projector.

2 Open the Google Cast-enabled app and press .

3 Select your projector from the list of devices.



You can check and change the projector name from the projector's **Device name** menu.

 **System > About > Device name**

The app connects and starts casting to the projector.

4 To stop casting, press  in the app and choose the disconnect option.

When an audio/video source that meets the HDMI CEC standard is connected to the projector's HDMI port, you can use the projector's remote control to control certain features of the linked device.

► Related Links

- "Operating Connected Devices Using the HDMI CEC Features" [p.62](#)

Operating Connected Devices Using the HDMI CEC Features

You can control connected audio/video devices using the HDMI CEC features.



- You must also configure the connected device. See the documentation supplied with the device for more information.
- Some connected devices or functions of those devices may not operate properly even if they meet the HDMI CEC standard. See the documentation supplied with the device for more information.
- Use a cable that supports the HDMI standard.

- To automatically turn on the projector when you turn on the connected device, set **Allow connected devices to turn on TV** to on.

6 Press to exit the menus.

You can use the projector's remote control to control the linked device such as playback, stop, or adjust the volume.

► Related Links

- "Projector Feature Settings - Channels & Inputs Menu" [p.67](#)

1 Press the button on the remote control to open the dashboard.

2 Select on the dashboard.

3 Select the menus in the following order:

Channels & Inputs > Inputs > Global CEC control

4 Set **Global CEC control** to on.

5 Adjust the following HDMI CEC settings as necessary.

- To automatically turn off the connected device when you turn off the projector, set **Allow TV to turn off connected devices** to on.


You can get the latest version of the projector firmware by using Epson Projector Update.



- If the Epson Projector Update app is not installed, install it from the home screen. Be sure to install the app to keep the projector up to date.
- When the latest projector firmware is available, a notification is automatically displayed on the screen. Follow the on-screen instructions to update the firmware.
- If there is not enough space in the internal storage, the update may fail. Free up space by deleting unnecessary apps and caches, then try updating again.

1 Press the  button on the remote control.

2 Select Apps and start Epson Projector Update by selecting it from the apps list.

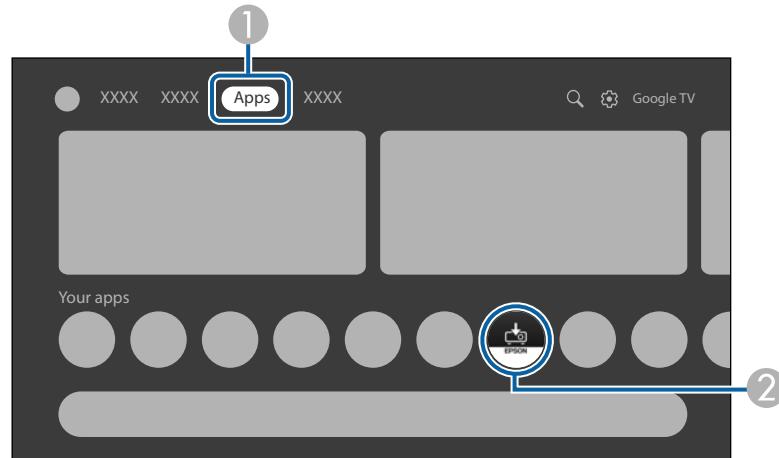

3 Follow the on-screen instructions to update the firmware.

Attention

While updating the firmware, do not operate or turn off the projector.

► Related Links

- "Installing Epson Projector Update" [p.33](#)

You can reset all of the projector settings to their default values.



If you initialize the projector, all the information such as installed apps, Google Account login information, and the projector's menu settings are deleted. Write down the settings you do not want to lose before performing initialization.

- 1** Turn on the projector and display an image.
- 2** Press the  button on the remote control to open the dashboard.
- 3** Select  on the dashboard.
- 4** Select the menus in the following order:
 **System** > **About** > **Reset** > **Factory reset**
- 5** Follow the on-screen instructions to start initializing the projector.

► Related Links

- "System Menu" [p.71](#)

Adjusting the Menu Settings

Follow the instructions in these sections to access the projector menu system and change projector settings.

► Related Links

- "Using the Projector's Menus" [p.66](#)
- "Projector Feature Settings - Channels & Inputs Menu" [p.67](#)
- "Projector Feature Settings - Projector Menu" [p.68](#)
- "Image Quality Settings - Display & Sound Menu" [p.69](#)
- "Other Menus" [p.71](#)

You can use the projector's menus to adjust the settings that control how your projector works. The projector displays the menus on the screen.

- 1 Press the  button on the remote control to open the dashboard.
- 2 Select  on the dashboard.
- 3 Press the up or down arrow buttons to move through the menus listed on the screen.
- 4 To change settings in the displayed menu, press the [Enter] button.
- 5 Press the arrow buttons to move through the settings.
- 6 Change the settings using the buttons as necessary.
- 7 When you finish changing settings on a menu, press .
- 8 Press  to exit the menus.

Settings on the **Channels & Inputs** menu let you control the audio/video device you are currently using.

Setting	Options	Description
Channels & Inputs	Switch input	Switches the input source between Home and HDMI 1 .
	HDMI 1	Show this input: Specifies whether to show HDMI 1 in the list of input sources. PIN lock: When enabling this setting, the PIN code of the device that is connected to the projector's HDMI port is required when you switch the input source to HDMI 1 . Edit name: Selects a name you want to display as the name of the audio/video device that is connected to the projector's HDMI port. No signal standby timeout: Sets the time before the projector enters standby mode when no signal is detected from the HDMI 1 source. HDMI EDID Version: Displays the EDID version. (EF-72/EF-62)
	Global CEC control	Select On to control the connected audio/video device using the projector's remote control.
	Allow TV to turn off connected devices	Select On to automatically turn off the connected audio/video device when you turn off the projector.
	Allow connected devices to turn on TV	Select On to automatically turn on the projector when you turn on the connected device, or when you start playback on the connected device.

► Related Links

- "Operating Connected Devices Using the HDMI CEC Features" [p.62](#)

Settings on the Projector menu provide correction methods to properly project your image.

Setting	Options	Description
Focus	—	Adjusts the focus of the projected image.
Keystone	Auto Shape Correction	Automatically adjusts any horizontal/vertical distortion of the projected image.
	Screen Fit	Automatically corrects the shape and position of the projected image to fit on your screen.
	Quick Corner	Corrects the shape and alignment of the projected image using an on-screen display.
	Zoom & Shift	Resizes the projected image and adjusts the image position.
	Reset to Defaults	Resets all adjustment values on the Keystone menu to their default settings.
Ambient Light (EF-72)	Light	Select On to turn on the projector's light.
	Welcome Lighting	When set to On , the projector's light turns on when you turn on the projector.
	Touch Sensor	When set to On , the projector's light turns on when you touch the projector's top panel.
	Reset to Defaults	Resets all adjustment values on the Ambient Light menu to their default settings.

Setting	Options	Description
Advanced Settings	Smart Eye Protection	Select On to enable the Smart Eye Protection function. When the projector's sensor detects obstacles that are interfering with the projection area, the brightness of the light source is automatically reduced to minimize glare.
	Projection	Selects the way the projector faces the screen so the image is oriented correctly.
	Wall Color Correction	Start Corrections: Adjusts the color of the projected image so that it matches the color of the projection surface. Enable: Select On to enable the Wall Color Correction function.
	Bluetooth Speaker Mode	— Opens the Bluetooth device connection screen to switch to Bluetooth Speaker Mode .

► Related Links

- "Correcting the Image Shape and Focus Automatically" [p.44](#)
- "Adjusting the Size and Position of the Image" [p.45](#)
- "Automatically Correcting the Image Shape with Screen Fit" [p.45](#)
- "Correcting the Image Shape with Quick Corner" [p.46](#)

Settings on the **Display & Sound** menu let you adjust the quality of your image and optimize the sound for the input source you are currently using.

Setting	Options	Description
Display	Picture Mode	Select your favorite color mode from the list.
	Light Output	Adjusts the brightness of the light source. You cannot adjust the brightness if the brightness of the light source dims because the surrounding temperature is too high or for other factors.
	Brightness	Lightens or darkens the overall image.
	Contrast	Adjusts the difference between light and dark areas of the image.
	Saturation	Adjusts the overall vividness of the color.
	Tint	Adjusts the balance of green to magenta tones in the image.
	Sharpness	Adjusts the sharpness or softness of the image.
	Advanced Settings	See the table below for details.
	Reset to Default	Resets all adjustment values on the Display menu to their default settings.
Screen	See the list of available aspect ratios.	Sets the aspect ratio (width-to-height ratio) for the input source. (This setting is available only when the current input source is HDMI.)
Sound	Sound Mode	Select your favorite mode for sound output from the projector's speaker system according to the playback contents.
	Reset to Default	Resets all adjustment values on the Sound menu to their default settings.

Setting	Options	Description
Audio Output	Digital Output	Selects the sound output format when you output audio to an external audio device.
	Digital Output Delay	Adjusts the audio latency. If the audio is fast, select a higher value.

Advanced Settings

Setting	Description
Picture off	Turns off the projected image.
Color Temperature	Sets the color temperature according to the color mode you selected.
DNR	Reduces flickering in images.
Projection Preferences	Selects whether to prioritize brightness or color tone when projecting an image. <ul style="list-style-type: none"> Fine: Prioritizes color tone. Bright: Prioritizes brightness.
Dynamic Contrast	Adjusts the projected luminance based on the image brightness.
Scene Adaptive Gamma	Adjusts the coloring according to the scene, and obtains a more vivid image. Higher values enhance the more the contrast.
Dynamic Color Booster	Automatically adjusts saturation according to the scene and makes the projected image colorful.
Gamma	Selects the gamma to adjust the coloring.
Game Mode	Improves the response speed for images projected at high speed, such as games. This setting is displayed only when: <ul style="list-style-type: none"> ALLM is set to Off. Frame Interpolation is set to Off.

Setting	Description
ALLM	Automatically adjusts the response speed according to your projected content. This setting is available only when the current input source is HDMI.
HDMI RGB Range	Sets the video range to match the setting of the device connected to the HDMI port.
MPEG NR	Reduces the noise or artifacts seen in MPEG video.
Local Contrast Control	Enhances the contrast of the projected image.
Flesh Tone	Lightens the skin tone of the image.
PC Mode	Select On to project the image while preserving the color information of the input image signal. This setting is available only when the current input source is HDMI.
Frame Interpolation	Adjusts the smoothness of image movement. This setting is displayed only when: <ul style="list-style-type: none"> • Game Mode is set to Off. • PC Mode is set to Off.
Low Blue Light	Reduces blue light in the projected image.
Color Tuner	Set Enable to On to enable the Color Tuner settings. Adjusts the individual R (red), G (green), B (blue), C (cyan), M (magenta), Y (yellow), and Flesh Tone components of the Tint , Saturation , and Brightness settings. Adjusts the individual R (red), G (green), and B (blue) components of the offset and gain.

► Related Links

- "Changing the Color Mode" [p.51](#)
- "Adjusting Image Quality in Detail" [p.52](#)
- "Changing the Sound Mode" [p.56](#)
- "Available Image Aspect Ratios" [p.50](#)

Options on other menus let you customize various projector's OS features.

► Related Links

- "Network & Internet Menu" [p.71](#)
- "Accounts & Profiles Menu" [p.71](#)
- "Privacy Menu" [p.71](#)
- "Apps Menu" [p.71](#)
- "System Menu" [p.71](#)
- "Accessibility Menu" [p.71](#)
- "Remotes & Accessories Menu" [p.72](#)
- "Help & Feedback Menu" [p.72](#)

Network & Internet Menu

Settings on the Network & Internet menu let you view network information and set up the projector for controlling over a network.

Accounts & Profiles Menu

Settings on the Accounts & Profiles menu let you add new Google Accounts used to log in to the projector, and make detailed settings for these accounts.

Privacy Menu

Settings on the Privacy menu let you change your privacy and security settings.

Apps Menu

The Apps menu displays your most recently used apps or all the apps that are installed on the projector.

System Menu

Settings on the System menu let you customize various projector features.

Setting	Description
Ambient Screensaver	Allows you to make settings for the screen saver.
Power & Energy	Allows you to make settings for power and energy saving.
About	Displays the projector's preferences and status. You can return all the projector settings to their factory default values from this menu.
Date & Time	Adjusts the projector's system time and date settings.
Language	Select the language used for the projector menus and messages.
Keyboard	Allows you to make detailed settings for the virtual keyboard installed in the projector's menu.
Storage	Allows you to display the usage status of the internal storage and clean the cache.
Cast	Turns on/off the cast function.
System sounds	Turns on/off the system sounds.
Restart	Restarts the projector.

► Related Links

- "Initializing the Projector" [p.64](#)
- "Shutting Off the Image Temporarily" [p.60](#)

Accessibility Menu

Settings on the Accessibility menu let you configure accessibility options, such as subtitles and text reading.

Remotes & Accessories Menu

Settings on the Remotes & Accessories menu let you pair the remote control and the projector, or let you connect/disconnect your Bluetooth devices to the projector.

Help & Feedback Menu

The Help & Feedback menu provides a link to the projector's OS help page, or lets you send feedback or comments about the product.

Maintaining the Projector

Follow the instructions in these sections to maintain your projector.

► Related Links

- "Projector Maintenance" [p.74](#)
- "Cleaning the Lens" [p.75](#)
- "Cleaning the Projector Case" [p.76](#)
- "Air Filter and Vent Maintenance" [p.77](#)

You may need to clean the projector's lens periodically, and clean the air filter and air vents to prevent the projector from overheating due to blocked ventilation.

The only user-replaceable parts are the remote control batteries. If any other part needs to be replaced, contact Epson.

Warning

Before cleaning any part of the projector, turn it off and unplug the power cord. Never open any cover on the projector, except as specifically explained in this manual. Dangerous electrical voltages in the projector can injure you severely.

Clean the projector's lens periodically, or whenever you notice dust or smudges on the surface.

- To remove dust or smudges, gently wipe the lens with clean and dry lens-cleaning paper.
- If the lens is dusty, blow off dust using a blower, and then wipe the lens.

Warning

- Before cleaning the lens, turn off the projector and unplug the power cord.
- Do not use any flammable gas sprays such as air dusters to blow off dust. The high heat generated by the projector may cause a fire.

Attention

- Do not wipe the lens right after you turn off the projector. Doing so could damage the lens.
- Do not use any harsh materials to clean the lens and do not subject the lens to any impacts; otherwise, it could be damaged.

Before cleaning the projector case, turn off the projector and unplug the power cord.

- To remove dust or dirt, use a soft, dry, lint-free cloth.
- To remove stubborn dirt, use a soft cloth moistened with water and mild soap. Do not spray liquid directly on the projector.

Attention

Do not use wax, alcohol, benzene, paint thinner, or other chemicals to clean the projector case. These can damage the case. Do not use canned air, or the gases may leave a flammable residue.

Regular filter maintenance is important to maintain your projector. Clean the air filter when a message appears telling you the temperature inside the projector has reached a high level. It is recommended that you clean these parts about once every year. Clean them more often than this if you use the projector in an environment that is dustier than expected. (Assuming the projector is used in an atmosphere in which airborne particulate matter is less than 0.04 to 0.2 mg/m³.)

► Related Links

- "Cleaning the Air Filters and Intake Vents" [p.77](#)

Cleaning the Air Filters and Intake Vents


You need to clean the projector's air filter or air intake vents in the following situations:

- The filter or vents get dusty.
- The projector's Status indicator turns orange.


1 Turn off the projector and unplug the power cord.

2 Gently remove the dust using a small vacuum designed for computers or a very soft brush (such as a paintbrush).

EF-72/EF-71

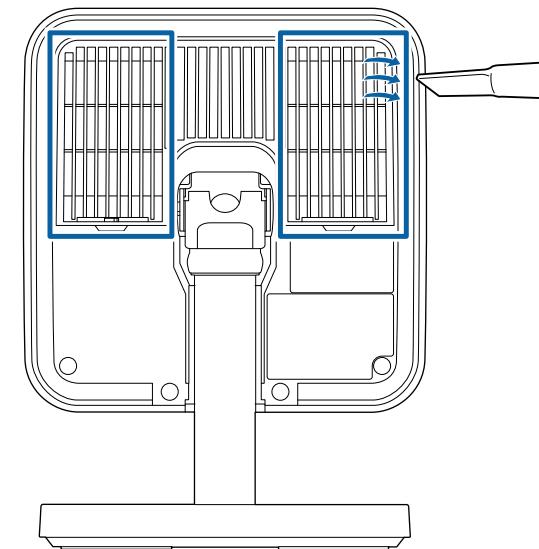

EF-62/EF-61

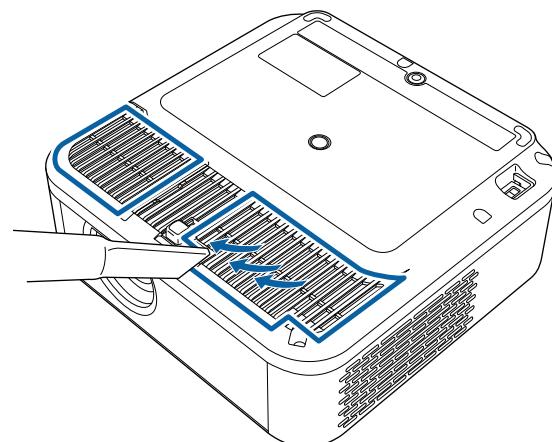

Attention

- Do not use canned air. The gases may leave a flammable residue or push dust and debris into the projector's optics or other sensitive areas.
- If dust is difficult to remove or the air filter is damaged, contact Epson to request help with replacing the air filter.

Solving Problems

Check the solutions in these sections if you have any problems using the projector.

► Related Links

- "Projection Problems" [p.80](#)
- "Projector Indicator Status" [p.81](#)
- "Solving Projector Power-On or Power-Off Problems" [p.83](#)
- "Solving Image Problems" [p.84](#)
- "Solving Sound Problems" [p.89](#)
- "Solving Remote Control Operation Problems" [p.91](#)
- "Solving HDMI CEC Problems" [p.92](#)
- "Solving Wi-Fi Network Problems" [p.93](#)
- "Solving Projector's OS Problems" [p.94](#)

If the projector is not working properly, turn it off, unplug it, and then plug it back in and turn it on.

If this does not solve the problem, check the following:

- The indicators on the projector may indicate the problem.
- The solutions in this manual can help you solve many problems.

If none of these solutions help, contact Epson for technical support.




After repairing the projector, Epson may return the projector to you in its initial status. Make sure you make a note of the account information of each online service before you contact Epson or the nearest authorized Epson service center.

The indicators on the projector indicate the projector status and let you know when a problem occurs. Check the status and color of the indicators and then refer to this table for a solution.




If the indicators display a pattern not listed in the table below, turn the projector off, unplug it, and contact Epson for help.

EF-72/EF-71

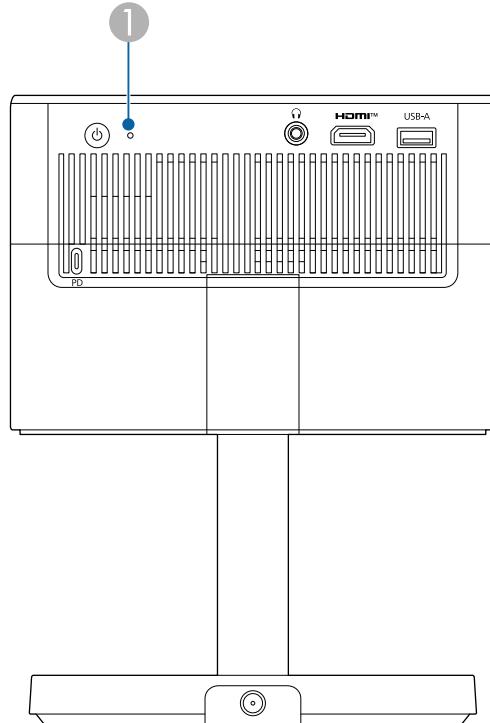

EF-62/EF-61

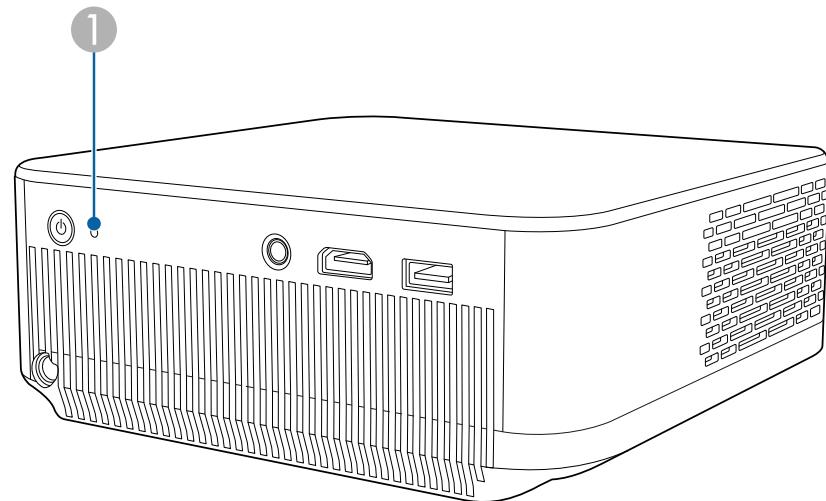

1 Status indicator

Projector status

Indicator status	Problem and solutions
Lit white	Normal operation.
Flashing white	Warming up or updating the projector firmware. Remote control operations may be disabled when the indicator is flashing white.
Off	The projector is in standby mode. When you press the power button, projection starts.

Indicator status	Problem and solutions
Lit orange	<p>The projector has overheated and turned off. Leave it turned off to cool down for 5 minutes.</p> <ul style="list-style-type: none">• Make sure that the vents and air filter are not clogged with dust or obstructed by nearby objects.• Make sure the environmental temperature is not too hot.• Clean the air filter.• If the problem persists, unplug the projector and contact Epson for help.
Flashing orange	<p>Internal projector error.</p> <p>Turn the projector off, unplug it, and contact Epson for help.</p>

► Related Links

- "Cleaning the Air Filters and Intake Vents" [p.77](#)

Check the solutions in these sections if the projector does not turn on when you press the power button or it turns off unexpectedly.

► Related Links

- "Solving Projector Power Problems" [p.83](#)
- "Solving Projector Shutdown Problems" [p.83](#)

Solving Projector Power Problems

If the projector does not turn on when you press the power button, try the following steps until the problem is solved.

- 1 Make sure the power cord is securely connected to the projector, to a working electrical outlet, and to the AC adapter.
- 2 If you are using the remote control, check the batteries of the remote control.
- 3 The power cord or the AC adapter may be defective. Disconnect the cord and contact Epson for help.

► Related Links

- "Turning On the Projector" [p.35](#)
- "Installing Batteries in the Remote Control" [p.29](#)

Solving Projector Shutdown Problems

If the projector's light source turns off unexpectedly, try the following steps until the problem is solved.

- 1 The projector may have turned off after the interval of time specified in **Shut-Off Timer** in the projector's **Power & Energy** menu has passed. Press the power button on the projector or remote control to turn the projector back on.

►  [System > Power & Energy > Shut-Off Timer](#)

- 2 After switching to HDMI source, if there is no input signal for more than the time specified in **No signal standby timeout**, the projector automatically enters standby mode. Press the power button to wake the projector from standby mode.

►  [Channels & Inputs > Inputs > HDMI 1 > No signal standby timeout](#)

- 3 When the status indicator is lit orange, the projector has overheated and turned off.



The cooling fans may run in standby status depending on the projector settings. Also, when the projector wakes from standby status, the fans may cause an unexpected noise. This is not a malfunction.

► Related Links

- "System Menu" [p.71](#)

Check the solutions in these sections if you have any problems with projected images.

► Related Links

- "Solving Missing Image Problems" [p.84](#)
- "Adjusting an Image that is not Rectangular" [p.85](#)
- "Adjusting a Fuzzy or Blurry Image" [p.85](#)
- "Fixing Partial Image Problems" [p.86](#)
- "Adjusting an Image that Contains Noise or Static" [p.86](#)
- "Adjusting an Image with Incorrect Brightness or Colors" [p.86](#)
- "Adjusting an Upside-down Image" [p.87](#)
- "Solving Auto Shape Correction Problems" [p.87](#)

Solving Missing Image Problems

If no image is displayed, try the following steps until the problem is solved.

1 Check the projector's status:

- Check the status indicator to confirm that the projector is in normal operating status.
- Press the projector's power button to wake it from standby mode.

☛ **System** > **Power & Energy** > **Shut-Off Timer**

☛ **Channels & Inputs** > **Inputs** > **HDMI 1** > **No signal standby timeout**

2 Check the cable connection:

- Make sure all necessary cables are securely connected and the power is on for the projector.
- Connect the video source directly to the projector.
- Replace the HDMI cable with a shorter one.

We recommend using an HDMI cable that is 16.5 feet (5 meters) or shorter. If you use an HDMI cable that is longer than five meters, the signal may deteriorate and the video and audio may become unstable.

- When sending 18 Gbps images such as 4K 60Hz 4:4:4, use an HDMI cable (premium-high speed).

3 Check the status of your video source:

- Turn on the connected video source, and press the play button to start a video, if necessary.
- Make sure the connected device meets the HDMI CEC standard. See the documentation supplied with the device for more information.
- If you are projecting from a laptop computer, make sure it is set up to display on an external monitor.

4 Check the following items:

- You need an Internet connection to view online content. Make sure your Wi-Fi is on.
- Turn off the projector and the connected video source, and then turn them back on.
- Set the CEC function for the connected device again and restart the device.
- Make sure the computer's display resolution does not exceed the projector's resolution and frequency limits. If necessary, select a different display resolution for your computer. (See your computer manual for details.)
- Reset all of the projector settings to their default values.

► Related Links

- "System Menu" [p.71](#)

Adjusting an Image that is not Rectangular

If the projected image is not evenly rectangular, try the following steps until the problem is solved.

- 1 Place the projector directly in front of the center of the screen, facing it squarely, if possible.
- 2 Make sure that **At Power-On from Shutdown** and **While Moving** settings are set to **On** in the **Projector** menu.
 - ☛ **Projector** > **Keystone** > **Auto Shape Correction** > **At Power-On from Shutdown**
 - ☛ **Projector** > **Keystone** > **Auto Shape Correction** > **While Moving**
- 3 Select **Start Corrections** in the **Auto Shape Correction** menu to run the **Auto Shape Correction** setting.
 - ☛ **Projector** > **Keystone** > **Auto Shape Correction** > **Start Corrections**
- 4 When projecting on a screen, use **Screen Fit** to automatically correct the shape and position of the image so that it fits on your screen.
 - ☛ **Projector** > **Keystone** > **Screen Fit**



When projecting on a screen, we recommend using **Screen Fit** to correct the shape of the projected image. Set **While Moving** to **Off** to prevent **Auto Shape Correction** from unintentionally correcting the shape of the image.

☛ **Projector** > **Keystone** > **Auto Shape Correction** > **While Moving**

- 5 Adjust the image shape manually using **Quick Corner** in the **Projector** menu.
 - ☛ **Projector** > **Keystone** > **Quick Corner**

► Related Links

- "Projector Feature Settings - Projector Menu" [p.68](#)

Adjusting a Fuzzy or Blurry Image

If the projected image is fuzzy or blurry, try the following steps until the problem is solved.

- 1 Press the button on the remote control to display the focus adjustment screen and adjust focus manually.
- 2 Check the following items:
 - Position the projector close enough to the screen.
 - Position the projector so the keystone adjustment angle is not so wide that it distorts the image.

- 3 Clean the projector's lens.



To avoid condensation on the lens after bringing the projector in from a cold environment, let the projector warm up to room temperature before using it.

- 4 Adjust the **Sharpness** setting in the projector's **Display & Sound** menu to improve image quality.
 - ☛ **Display & Sound** > **Display** > **Sharpness**
- 5 If you are projecting from a computer, use a lower resolution or select a resolution that matches the projector's native resolution.

► Related Links

- "Image Quality Settings - Display & Sound Menu" [p.69](#)

Fixing Partial Image Problems

If only a partial image is displayed, try the following steps until the problem is solved.

- 1** Adjust the position of the projected image using the **Zoom & Shift** setting in the **Projector** menu.
☞ **Projector** > **Keystone** > **Zoom & Shift**
- 2** Select an appropriate aspect ratio from the **Screen** menu according to the current input source. (Available only when the current input source is HDMI.)
☞ **Display & Sound** > **Screen**
- 3** Make sure you select the correct projection mode. You can select this from the **Projection** menu.
☞ **Projector** > **Advanced Settings** > **Projection**
- 4** Check your computer display settings to disable dual display and set the resolution within the projector's limits. (See your computer manual for details.)

► Related Links

- "Projector Feature Settings - Projector Menu" [p.68](#)
- "Image Quality Settings - Display & Sound Menu" [p.69](#)

Adjusting an Image that Contains Noise or Static

If the projected image contains electronic interference (noise) or static, try the following steps until the problem is solved.

- 1** Check the cables connecting your video source to the projector. They should be:
 - Separated from the power cord to prevent interference
 - Securely connected at both ends
 - Not connected to an extension cable
- 2** Adjust the DNR setting in the projector's menu.
☞ **Display & Sound** > **Display** > **Advanced Settings** > **DNR**
- 3** If you adjusted the image shape using the projector controls, try decreasing the **Sharpness** setting in the projector's **Display & Sound** menu to improve image quality.
☞ **Display & Sound** > **Display** > **Sharpness**
- 4** If you connected an extension power cable, try projecting without it to see if it caused interference in the signal.
- 5** Select a computer video resolution and refresh rate that are compatible with the projector.
- 6** If you connected an A/V system that does not support eARC/ARC to the HDMI port, the image may be distorted.

► Related Links

- "Image Quality Settings - Display & Sound Menu" [p.69](#)

Adjusting an Image with Incorrect Brightness or Colors

If the projected image is too dark or bright, or the colors are incorrect, try the following steps until the problem is solved.



When power is supplied through the USB-C port, the projected image will be dimmed to reduce power consumption.

- 1** Try different color modes for your image and environment by selecting the color mode setting in the projector's **Picture Mode** menu.

☛ **Display & Sound > Display > Picture Mode**

- 2** Check your video source settings.

- 3** Adjust the color settings in the **Display** menu.

☛ **Display & Sound > Display**

- 4** Make sure you selected the correct **HDMI RGB Range** setting in the projector's **Display & Sound** menu, if available for your image source. (Available only for the HDMI source.)

☛ **Display & Sound > Display > Advanced Settings > HDMI RGB Range**

- 5** Make sure all the cables are securely connected to the projector and your video equipment. If you connected long cables, try connecting shorter cables.

- 6** Position the projector close enough to the screen.

► Related Links

- "Image Quality Settings - **Display & Sound Menu**" [p.69](#)

Adjusting an Upside-down Image

If the projected image is upside-down, select the correct projection mode. (EF-62/EF-61)

☛ **Projector > Advanced Settings > Projection**

► Related Links

- "Projector Feature Settings - **Projector Menu**" [p.68](#)

Solving Auto Shape Correction Problems

Try the following steps if you cannot automatically correct focus and vertical/horizontal distortion of the projected image in the following situations:

- When you turn on the projector.
- When the projector is moved or tilted.

- 1** Check the projector's status:

- Remove any obstacles that are blocking the projector's camera and sensor.
- Clean the projector's camera and sensor if they are dusty or dirty.
- Do not move the projector while correcting the focus and keystone distortion.
- Set **While Moving** and **At Power-On** from **Shutdown** to **On**.
☛ **Projector > Keystone > Auto Shape Correction > While Moving**
☛ **Projector > Keystone > Auto Shape Correction > At Power-On from Shutdown**

- 2** Check the installation environment of the projector.

- **Auto Shape Correction** operates under the following conditions:
 - When the size of the projected image (diagonal length) before correcting focus and keystone distortion is from 30 to 100 inches.
 - When the projection distance is about 195.6 to 105 inches (77 to 267 cm).

- When the installation angle of the projector toward the projection surface is within 20° right, left, up, or down.
- Remove any obstacles between the projector and the projection surface as these can interrupt the projection.
- If you are using the projector in a bright room, darken the room. Do not change the room brightness while performing **Auto Shape Correction**. Otherwise, **Auto Shape Correction** may fail.
- Project the image on to a plain and flat surface. If the projection surface is patterned or is not level, **Auto Shape Correction** may fail.



If you cannot correct focus and any distortion of the projected image due to a malfunction of the projector's camera or sensor, a warning screen is displayed. Contact Epson for help.

► Related Links

- "Correcting the Image Shape and Focus Automatically" [p.44](#)

Check the solutions in these sections if you have any problems with projected sound.

► Related Links

- "Solving Missing or Low Audio Problems" [p.89](#)
- "Solving Bluetooth Speaker Mode Problems" [p.89](#)

Solving Missing or Low Audio Problems

If there is no sound or the volume is too low, try the following steps until the problem is solved.

- 1 Adjust the projector's volume settings using the  up/down buttons on the remote control.
- 2 Check the cable connection between the projector and your video source.
- 3 Check your video source to make sure the volume is turned up and the audio output is set for the correct source.
- 4 If you want to output audio from the projector's speakers, check that **Global CEC control** is set to **Off**.
► **Channels & Inputs > Inputs > Global CEC control**
- 5 If you want to output audio to an external audio device that supports HDMI eARC/ARC using an HDMI cable, try the following solutions:
 - Set **Global CEC control** to **On** in the projector's menu when using an ARC connection.
► **Channels & Inputs > Inputs > Global CEC control**
 - Make sure the HDMI cable is compliant with HDMI eARC and ARC.



- When outputting audio to an external audio device that does not support HDMI eARC/ARC using an HDMI cable, set **Global CEC control** to **Off** in the projector's menu.
► **Channels & Inputs > Inputs > Global CEC control**
- See the online *Notices* guide for eARC/ARC audio supported formats.

- 6 If audio is not output to an external audio device that supports HDMI eARC/ARC, try changing **Auto** to **PCM** as the **Digital Output** setting.
► **Display & Sound > Audio Output > Digital Output**

► Related Links

- "Projector Feature Settings - Channels & Inputs Menu" [p.67](#)
- "Image Quality Settings - Display & Sound Menu" [p.69](#)

Solving Bluetooth Speaker Mode Problems

If you cannot connect a Bluetooth audio device to the projector, try the following solutions.

- 1 Select **Bluetooth Speaker Mode** in the **Projector** menu and press the **[Enter]** button on the remote control.
- 2 Select the projector name (this projector) from the list of available Bluetooth devices displayed on your device.



You can check and change the projector name from the projector's **Device name** menu.

► **System > About > Device name**

3 Check your Bluetooth audio device to make sure the volume is turned up and the audio output settings are correct.

4 Make sure only one Bluetooth device is connected to the projector.

You cannot connect multiple Bluetooth audio devices to the projector at the same time.

5 Make sure the device meets the projector's Bluetooth specifications.

6 Check the following items:

- Check for obstacles between the Bluetooth audio device and the projector, and change their positions to improve communication.
- Make sure the connected Bluetooth audio device is within the specified communication distance.
- Avoid using the projector near wireless networks, microwave ovens, 2.4 GHz cordless phones, or other devices that use the 2.4 GHz frequency band. These devices can interfere with the signal between the projector and the Bluetooth audio device.

► Related Links

- "Using the Projector as a Bluetooth® Speaker" [p.59](#)
- "Bluetooth Specifications" [p.104](#)

If the projector does not respond to remote control commands or responds slowly, try the following steps until the problem is solved.



If you lose the remote control, you can order another one. Contact Epson for help.

- 1** Check that the remote control batteries are installed correctly and have power. If necessary, replace the batteries.
- 2** The buttons on the remote control may be stuck down and you may not be able to operate them. Return the buttons to their normal positions.
- 3** If the pairing screen is displayed, perform pairing again by holding down the button and button on the remote control at the same time for about three seconds.
- 4** Perform pairing again by displaying the pairing screen manually from the **Remotes & Accessories** menu.
- 5** If the image is projected from the projector, make sure you are operating the remote control within the reception angle and range of the projector.
- 6** Strong fluorescent lighting, direct sunlight, or infrared device signals may be interfering with the projector's remote receivers. Dim the lights or move the projector away from the sun or interfering equipment.
- 7** The remote control may be defective. Contact Epson for help.

► Related Links

- "Remote Control Operation" [p.29](#)
- "Installing Batteries in the Remote Control" [p.29](#)
- "Projector Indicator Status" [p.81](#)

If you cannot operate the connected devices from the projector, try the following steps until the problem is solved.

- 1** Make sure the cable meets the HDMI CEC standard.
- 2** Make sure the connected device meets the HDMI CEC standard. See the documentation supplied with the device for more information.
- 3** Set **Global CEC control** to **On** in the **Inputs** menu.
👉 **Channels & Inputs > Inputs > Global CEC control**
- 4** Make sure all the cables are securely connected to the projector and your video equipment.
- 5** Make sure the connected devices are turned on and in standby status. See the documentation supplied with the device for more information.
- 6** If you connect a new device or change the connection, set the CEC function for the connected device again and restart the device.

► Related Links

- "Projector Feature Settings - Channels & Inputs Menu" [p.67](#)
- "Projector Indicator Status" [p.81](#)

If you cannot connect to a Wi-Fi network, try the following solutions.

- 1 Make sure your Wi-Fi router and modem are working properly. Rebooting these devices may solve the network connection problem.
- 2 Check for obstacles between the Wi-Fi router and the projector, and change their positions to improve communication.
- 3 You can check the network settings from Wi-Fi in the **Network & Internet** menu.
- 4 If you initialize the projector, you need to select the network settings again on the initial setup screen.

► Related Links

- "Initializing the Projector" [p.64](#)

See the following page if you have any problems when watching the online content.

<https://support.google.com/googletv/>

Appendix

Check these sections for the technical specifications and important notices about your product.

► Related Links

- "Optional Accessories" [p.96](#)
- "Screen Size and Projection Distance" [p.97](#)
- "Supported Monitor Display Resolutions" [p.100](#)
- "Projector Specifications" [p.101](#)
- "External Dimensions" [p.105](#)
- "List of Safety Symbols and Instructions" [p.107](#)
- "Warning Labels" [p.109](#)
- "Glossary" [p.110](#)
- "Notices" [p.111](#)

The following optional accessories are available. Please purchase these products as and when needed.

The following list of optional accessories is current as of: July 2025.

Details of accessories are subject to change without notice and availability may vary depending on the country of purchase.

► Related Links

- "Mounts" [p.96](#)

Mounts

Floor Stand ELPFS01

Use when installing the projector on the floor.



Compatibility of accessories varies by model.

Safety Wire Set ELPWR01

Use when connecting the projector to the location where the projector is installed to prevent it from falling.




Special expertise is required to suspend the projector from a ceiling.

► Related Links



- "Mounting the Projector on a Tripod or Projector Stand (Floor-stand or Ceiling-mount) (EF-62/EF-61)" [p.23](#)
- "Attaching Safety Wire (EF-72/EF-71)" [p.24](#)

Check the table here to determine how far to place the projector from the screen based on the size of the projected image.

EF-72/EF-71 (model with stand)

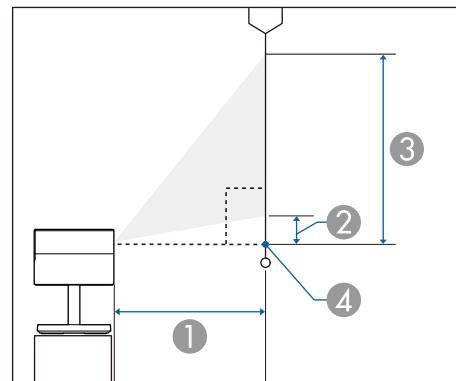

EF-62/EF-61

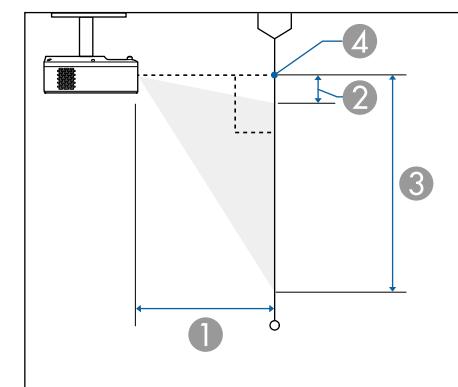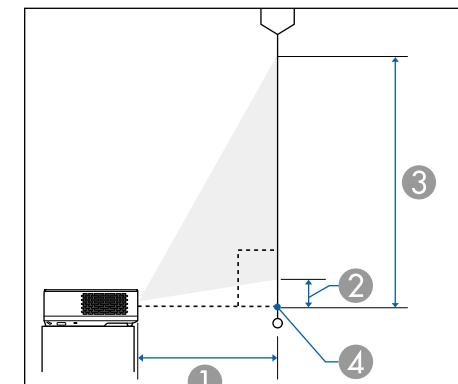

- ① Projection distance
- ② Distance from the projector to the bottom of the screen
- ③ Distance from the projector to the top of the screen
- ④ Center of lens

16:9 screen size		①	②	③
		Minimum (Wide)	Minimum (Wide)	Minimum (Wide)
30"	26 x 14.5" (66 x 37 cm)	30.3" (77 cm)	-1.6" (-4 cm)	13" (33 cm)

16:9 screen size		①	②	③
		Minimum (Wide)	Minimum (Wide)	Minimum (Wide)
40"	35 × 19.7" (89 × 50 cm)	41" (104 cm)	-2.4" (-6 cm)	17.3" (-44 cm)
50"	43.7 × 24.4" (111 × 62 cm)	52" (132 cm)	-2.8" (-7 cm)	21.6" (55 cm)
60"	52.4 × 30" (133 × 75 cm)	62.6" (159 cm)	-3.5" (-9 cm)	26" (66 cm)
70"	61 × 34.3" (155 × 87 cm)	73.2" (186 cm)	-4" (-10 cm)	30.3" (77 cm)
80"	69.7 × 39.4" (177 × 100 cm)	83.9" (213 cm)	-4.7" (-12 cm)	34.7" (88 cm)
90"	78.4 × 44.1" (199 × 112 cm)	94.5" (240 cm)	-5.1" (-13 cm)	39" (99 cm)
100"	87 × 49.2" (221 × 125 cm)	105.1" (267 cm)	-5.9" (-15 cm)	43.3" (110 cm)
120"	104.7 × 58.7" (266 × 149 cm)	126.4" (321 cm)	-7.1" (-18 cm)	52" (132 cm)
150"	130.7 × 73.6" (332 × 187 cm)	158.3" (402 cm)	-8.7" (-22 cm)	65" (165 cm)

4:3 screen size		①	②	③
		Minimum (Wide)	Minimum (Wide)	Minimum (Wide)
27"	21.7 × 16.1" (55 × 41 cm)	33.9" (86 cm)	-2" (-5 cm)	14.2" (36 cm)
30"	24 × 18.1" (61 × 46 cm)	37.8" (96 cm)	-2" (-5 cm)	15.7" (40 cm)
40"	31.9 × 24" (81 × 61 cm)	50.8" (129 cm)	-2.8" (-7 cm)	21.3" (54 cm)

4:3 screen size		①	②	③
		Minimum (Wide)	Minimum (Wide)	Minimum (Wide)
50"	40.2 × 30" (102 × 76 cm)	63.8" (162 cm)	-3.5" (-9 cm)	26.4" (67 cm)
60"	48 × 35.8" (122 × 91 cm)	76.8" (195 cm)	-4.3" (-11 cm)	31.9" (81 cm)
70"	55.9 × 42.1" (142 × 107 cm)	89.8" (228 cm)	-5.1" (-13 cm)	37" (94 cm)
80"	64.2 × 48" (163 × 122 cm)	102.8" (261 cm)	-5.9" (-15 cm)	42" (107 cm)
90"	72 × 54" (183 × 137 cm)	115.8" (294 cm)	-6.3" (-16 cm)	47.6" (121 cm)
100"	80 × 59.9" (203 × 152 cm)	128.7" (327 cm)	-7.1" (-18 cm)	52.8" (134 cm)
120"	96.1 × 72" (244 × 183 cm)	155.1" (394 cm)	-8.7" (-22 cm)	63.4" (161 cm)
122"	97.6 × 73.2" (248 × 186 cm)	157.5" (400 cm)	-8.7" (-22 cm)	64.6" (164 cm)

16:10 screen size		①	②	③
		Minimum (Wide)	Minimum (Wide)	Minimum (Wide)
28"	23.6 × 15" (60 × 38 cm)	30.7" (78 cm)	-1.6" (-4 cm)	13" (33 cm)
40"	33.9 × 21.3" (86 × 54 cm)	44.8" (113 cm)	-2.4" (-6 cm)	18.5" (47 cm)
50"	42.5 × 26.4" (108 × 67 cm)	56.3" (143 cm)	-3.1" (-8 cm)	23.2" (59 cm)
60"	50.8 × 31.9" (129 × 81 cm)	67.7" (172 cm)	-4" (-10 cm)	28" (71 cm)

16:10 screen size		①	②	③
		Minimum (Wide)	Minimum (Wide)	Minimum (Wide)
70"	59.4 × 37" (151 × 94 cm)	79.1" (201 cm)	-4.3" (-11 cm)	32.7" (83 cm)
80"	67.6 × 42.5" (172 × 108 cm)	90.6" (230 cm)	-5.1" (-13 cm)	37.4" (95 cm)
90"	76.4 × 47.6" (194 × 121 cm)	102.4" (260 cm)	-5.5" (-14 cm)	42.1" (107 cm)
100"	84.6 × 53.2" (215 × 135 cm)	113.8" (289 cm)	-6.3" (-16 cm)	46.9" (119 cm)
110"	93.3 × 58.3" (237 × 148 cm)	125.2" (318 cm)	-7.1" (-18 cm)	51.2" (130 cm)
120"	101.6 × 63.8" (258 × 162 cm)	136.6" (347 cm)	-7.5" (-19 cm)	55.9" (142 cm)
138"	116.5 × 73.2" (297 × 186 cm)	157.5" (400 cm)	-8.7" (-22 cm)	64.6" (164 cm)

See the online *Notices* guide for detailed information on compatible refresh rates and resolutions for each compatible video display format.

EF-72/EF-71

Product name	EF-72/EF-71
Dimensions (W × H × D)	7.5 × 9.8 × 7.5" (190 × 248 × 190 mm) (not including raised section)
LCD panel size	0.62"
Display method	3LCD
Number of pixels	Full HD (1,920 (W) × 1,080 (H) dots) × 3
Screen resolution	EF-72 4,147,200 pixels * EF-71 2,073,600 pixels
Focus adjustment	Powered
Zoom adjustment	1.0 to 3.33 (Digital)
Light source	LED
Light source output power	EF-72 Up to 19 W EF-71 Up to 14 W
Wavelength	N/A
Light source life **	Up to about 20,000 hours
Max. audio output	5 W × 2
Speaker	2 (Stereo with passive radiators)
Power supply	24.0 V DC 6.0 A
Operating power consumption (100 to 120 V area)	When the light source brightness is 100%: 137 W When the light source brightness is 50%: 87 W

Operating power consumption (220 to 240 V area)	When the light source brightness is 100%: 135 W When the light source brightness is 50%: 82 W
Standby power consumption	Communication On: 2.0 W Communication Off: 0.5 W
Operating altitude	Altitude 0 to 10,000' (0 to 3,048 m)
Operating temperature ***	Altitude of 0 to 7,500 feet (2,286 m): 41 to 95 °F (5 to 35 °C) (Humidity of 20 to 80%, No condensation) Altitude of 7,500 to 10,000 feet (2,287 to 3,048 m): 41 to 86 °F (5 to 30 °C) (Humidity of 20 to 80%, No condensation)
Storage temperature	14 to 140 °F (-10 to 60 °C) (Humidity of 10 to 90%, No condensation)
Mass	Approx. 8.8 lb (4.0 kg)

* Pixel shifting technology achieves 4K resolution on screen.

** Approximate time until the light source brightness decreases to half of its original value. (Assuming the projector is used in an atmosphere in which airborne particulate matter is less than 0.04 to 0.2mg/m³. The estimated time varies depending on the projector usage and operating conditions.)

*** Light source brightness automatically dims if the surrounding temperature gets too high.

The rating label is attached on the bottom of the projector.

This product is also designed for IT power distribution system with phase-to-phase voltage 230V.

EF-62/EF-61

Product name	EF-62N/EF-62B/EF-61R/EF-61W/EF-61G
Dimensions (W × H × D)	7.8" × 2.7 × 7.5" (199 × 68 × 190 mm) (not including raised section)
LCD panel size	0.62"

Display method	3LCD
Number of pixels	Full HD (1,920 (W) × 1,080 (H) dots) × 3
Screen resolution	EF-62 4,147,200 pixels * EF-61 2,073,600 pixels
Focus adjustment	Powered
Zoom adjustment	1.0 to 3.33 (Digital)
Light source	LED
Light source output power	Up to 14 W
Wavelength	N/A
Light source life **	Up to about 20,000 hours
Max. audio output	5 W + 2 W
Speaker	2 (Stereo with passive radiators)
Power supply	24.0 V DC 6.0 A
Operating power consumption (100 to 120 V area)	When the light source brightness is 100%: 101 W When the light source brightness is 50%: 57 W
Operating power consumption (220 to 240 V area)	When the light source brightness is 100%: 95 W When the light source brightness is 50%: 56 W
Standby power consumption	Communication On: 2.0 W Communication Off: 0.5 W
Operating altitude	Altitude 0 to 10,000' (0 to 3,048 m)
Operating temperature ***	Altitude of 0 to 7,500 feet (2,286 m): 41 to 95 °F (5 to 35 °C) (Humidity of 20 to 80%, No condensation) Altitude of 7,500 to 10,000 feet (2,287 to 3,048 m): 41 to 86 °F (5 to 30 °C) (Humidity of 20 to 80%, No condensation)

Storage temperature	14 to 140 °F (-10 to 60 °C) (Humidity of 10 to 90%, No condensation)
Mass	Approx. 3.5 lb (1.6 kg)

* Pixel shifting technology achieves 4K resolution on screen.

** Approximate time until the light source brightness decreases to half of its original value. (Assuming the projector is used in an atmosphere in which airborne particulate matter is less than 0.04 to 0.2mg/m³. The estimated time varies depending on the projector usage and operating conditions.)

*** Light source brightness automatically dims if the surrounding temperature gets too high.

The rating label is attached on the bottom of the projector.

This product is also designed for IT power distribution system with phase-to-phase voltage 230V.

► Related Links

- "AC Adapter Specifications" [p.102](#)
- "Connector Specifications" [p.103](#)
- "Bluetooth Specifications" [p.104](#)

AC Adapter Specifications

Manufacturer	EPSON
Model	E210-1B2400750M3
Power input to AC adapter	100-240V AC ±10% 50/60Hz 3.0 A
Output power	24.0V DC 7.5A 180.0 W

For India

Due to manufacturing reasons, the following AC adapter may be included in the package for India. (EF-62/EF-61)

Manufacturer	EPSON
--------------	-------


Model	AD10370LF
Power input to AC adapter	100-240V AC $\pm 10\%$ 50/60Hz 1.75A
Output power	24.0V DC 5.0A 120.0W
Power input to projector	24.0V DC 4.5A
Power consumption (220-240V)	95 W

Connector Specifications


Audio Out port	1	Stereo mini pin jack (3-pin)
HDMI port	1	HDMI (Type A)
USB-A port	1	USB connector (Type A)
Service port	1	USB connector (Mini-B)
USB-C port (EF-72)	1	USB connector (Type C)



- USB ports are not guaranteed to operate all devices that support USB.
- The service port is not normally used.
- See the following illustration for the location of the service port.
The service port has a cap. Do not remove it.
EF-72/EF-71 (model with stand)

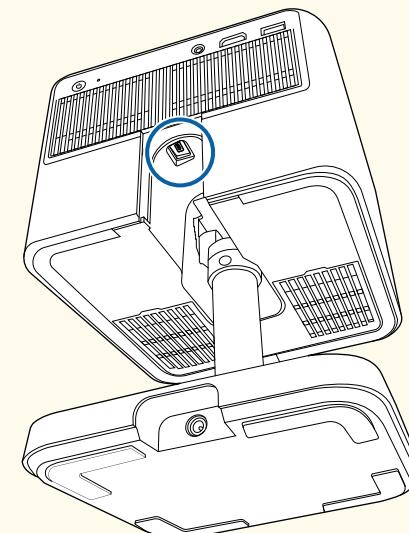

EF-62/EF-61

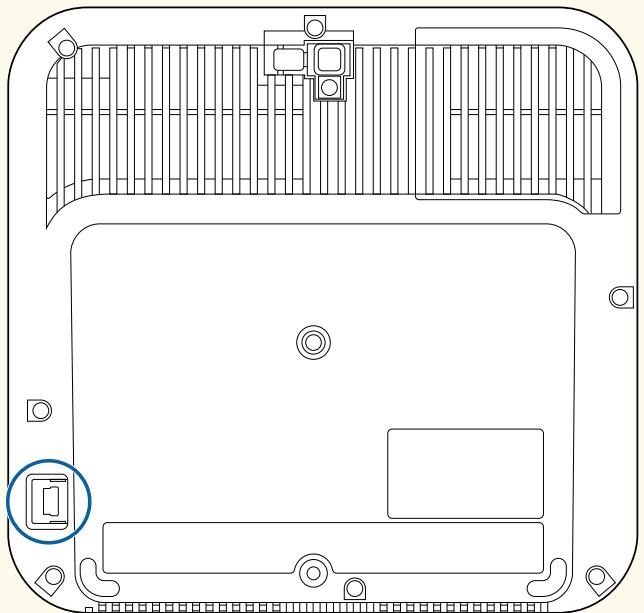

⚠️ Warning

Do not use the device near any medical equipment or equipment that is automatically controlled, such as automatic doors or fire alarms. Electromagnetic interference from the device may cause such equipment to malfunction and cause an accident.




- You may not be able to connect depending on the standard and type of device.
- Even when connecting within the specified communication distance, connections can be lost due to the strength of the signal.
- The communication method for Bluetooth uses the same frequency (2.4 GHz) as wireless LAN (IEEE802.11b/g/n/ax) or microwave ovens. Therefore, if these devices are used at the same time, radio wave interference may occur, the audio may be interrupted, or communication may not be possible. If you do need to use these devices at the same time, make sure there is enough distance between them and the Bluetooth device.

Bluetooth Specifications


Version	Bluetooth Ver. 5.2
Output	Class 2
Communication distance	Approx. 32.8 feet (10 m)
Supported profiles	A2DP, AVRCP, and HID
Frequency used	2.4 GHz band (2.402 to 2.480 GHz)
Supported codecs	SBC

EF-72/EF-71

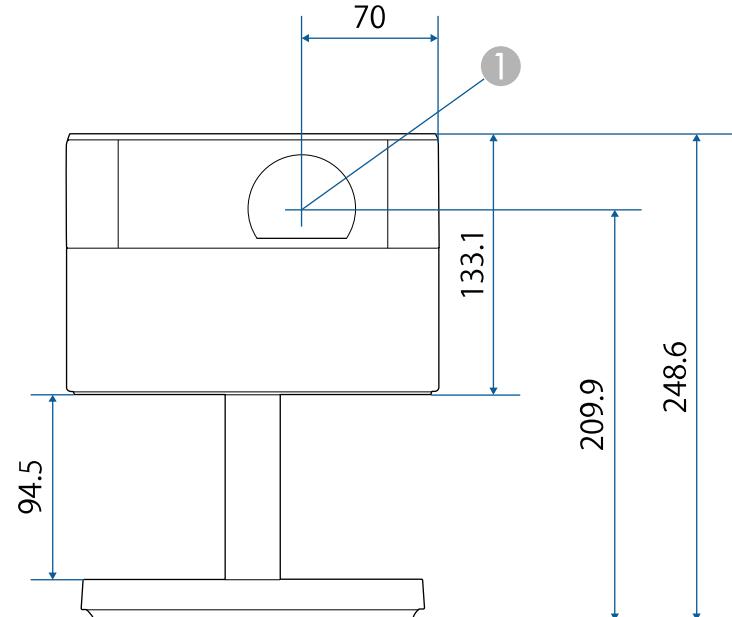

① Center of lens


2.8" (70 mm)
5.2" (133.1 mm)
8.3" (209.9 mm)
9.8" (248.6 mm)
3.7" (94.5 mm)

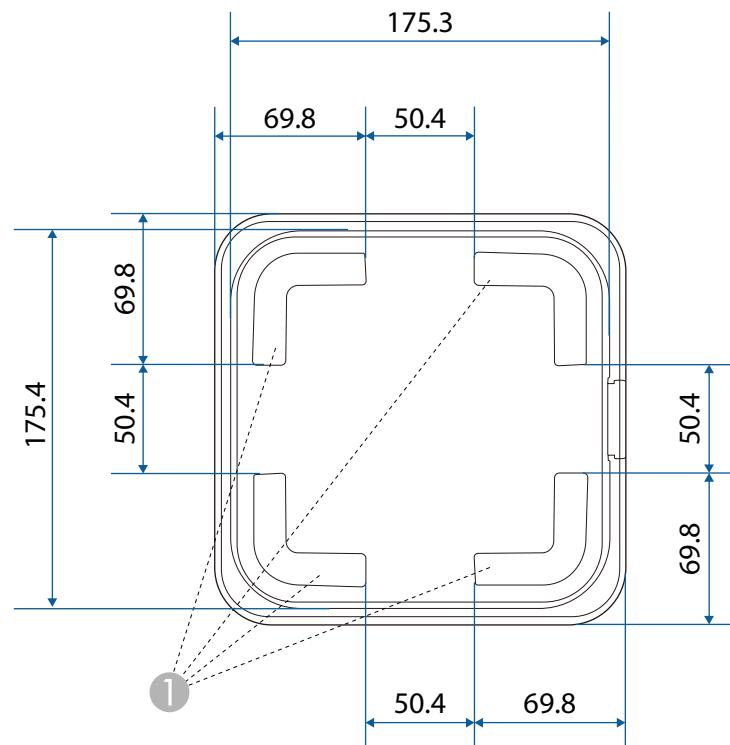

① Stand feet

6.9" (175.4 mm)
2" (50.4 mm)
2.5" (69.8 mm)
6.9" (175.3 mm)


When projecting images onto a ceiling by tilting the projector 90 degrees upwards

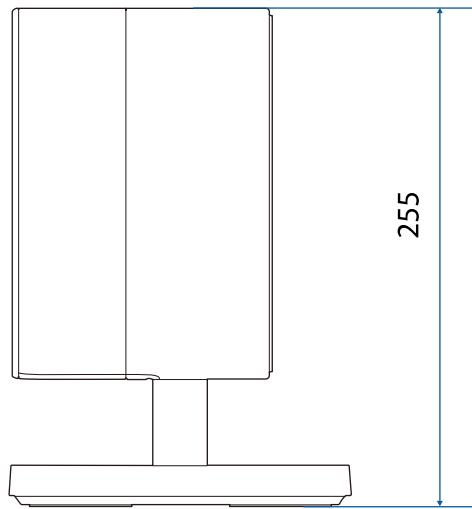

10.1" (255 mm)

The unit in these illustrations is mm.

EF-62/EF-61

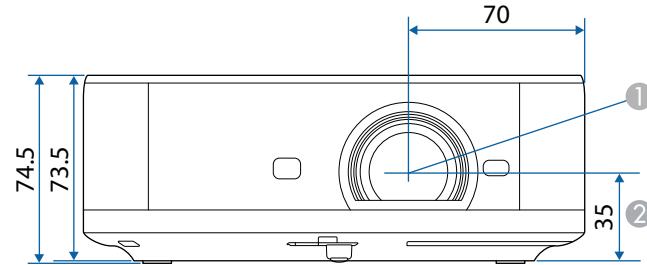


① Center of lens

② Distance from center of lens to tripod fixing point, 1.4" (35 mm)

2.9" (73.5 mm)

3" (74.5 mm)

2.8" (70 mm)

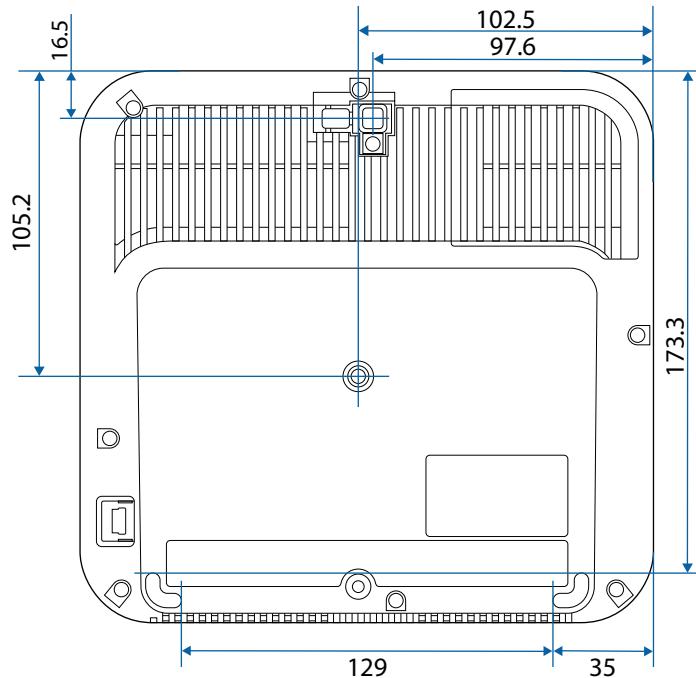

4" (102.5 mm)

3.8" (97.6 mm)

6.8" (173.3 mm)

1.4" (35 mm)

5.1" (129 mm)

4.1" (105.2 mm)

0.6" (16.5 mm)

The unit in these illustrations is mm.

The following table lists the meaning of the safety symbols labeled on the equipment.

No.	Symbol mark	Approved standards	Description
①		IEC60417 No. 5007	"ON" (power) To indicate connection to the mains.
②		IEC60417 No. 5008	"OFF" (power) To indicate disconnection from the mains.
③		IEC60417 No. 5009	Stand-by To identify the switch or switch position by means of which part of the equipment is switched on in order to bring it into the stand-by condition.
④		ISO7000 No. 0434B, IEC3864-B3.1	Caution To identify general caution when using the product.
⑤		IEC60417 No. 5041	Caution, hot surface To indicate that the marked item can be hot and should not be touched without taking care.
⑥		IEC60417 No. 6042 ISO3864-B3.6	Caution, risk of electric shock To identify equipment that has risk of electric shock.
⑦		IEC60417 No. 5957	For indoor use only To identify electrical equipment designed primarily for indoor use.

No.	Symbol mark	Approved standards	Description
⑧		IEC60417 No. 5926	Polarity of d.c. power connector To identify the positive and negative connections (the polarity) on a piece of equipment to which a d.c. power supply may be connected.
⑨		—	The same as No. 8.
⑩		IEC60417 No. 5001B	Battery, general On battery powered equipment. To identify a device for instance a cover for the battery compartment, or the connector terminals.
⑪		IEC60417 No. 5002	Positioning of cell To identify the battery holder itself and to identify the positioning of the cell(s) inside the battery holder.
⑫		—	The same as No. 11.
⑬		IEC60417 No. 5019	Protective earth To identify any terminal which is intended for connection to an external conductor for protection against electric shock in case of a fault, or the terminal of a protective earth electrode.
⑭		IEC60417 No. 5017	Earth To identify an earth (ground) terminal in cases where neither the symbol No. 13 is explicitly required.

No.	Symbol mark	Approved standards	Description
⑯		IEC60417 No. 5032	Alternating current To indicate on the rating plate that the equipment is suitable for alternating current only; to identify relevant terminals.
⑯		IEC60417 No. 5031	Direct current To indicate on the rating plate that the equipment is suitable for direct current only; to identify relevant terminals.
⑯		IEC60417 No. 5172	Class II equipment To identify equipment meeting the safety requirements specified for Class II equipment according to IEC 61140.
⑯		ISO 3864	General prohibition To identify actions or operations that are prohibited.
⑯		ISO 3864	Contact prohibition To indicate injury that could occur due to touching a specific part of the equipment.
⑯		—	Never look into the optical lens while the projector is on.
⑯		—	To indicate that the marked item don't place anything on projector.
⑯		ISO3864 IEC60825-1	Caution, laser radiation To indicate the equipment has a laser radiation part.


No.	Symbol mark	Approved standards	Description
⑯		ISO 3864	Disassembly prohibition To indicate a risk of injury, such as electric shock, if the equipment is disassembled.
⑯		IEC60417 No. 5266	Standby, partial standby To indicate that part of the equipment is in the ready status.
⑯		ISO3864 IEC60417 No. 5057	Caution, movable parts To indicate that you must keep away from movable parts according to protection standards.
⑯		IEC60417 No. 6056	Caution (Moving Fan Blades) As a safety precaution, stay away from the moving fan blades.
⑯		IEC60417 No. 6043	Caution (Sharp Corners) To indicate sharp corners that should not be touched.
⑯		—	To indicate that looking into the lens while projecting is prohibited.
⑯		ISO7010 No. W027 ISO 3864	Warning, Optical radiation (such as UV, visible radiation, IR) Taking care to avoid injury to eyes and skin when in the vicinity of optical radiation.
⑯		IEC60417 No. 5109	Not to be used in residential areas. To identify electrical equipment which is not suitable for a residential area.

Warning labels are attached on the projector.

⚠️ Warning

As with any bright source, do not stare into the beam, RG2 IEC/EN 62471-5:2015.


EF-72/EF-71

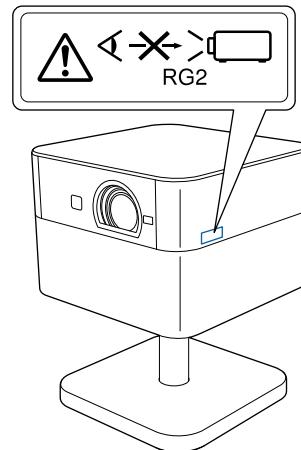

⚠️ Warning

- Never look into the projector lens when the laser is on. This can damage your eyes and is especially dangerous for children and pets.
- When turning on the projector at a distance using the remote control, make sure no one is looking into the lens.
- Do not allow small children to operate the projector. Children must be accompanied by an adult.
- Do not look into the lens during projection. Also, do not look into the lens using optical devices, such as a magnifying glass or telescope. This could cause visual impairment.
- If any problems occur with the projector, unplug the projector from the outlet and contact Epson for help. Continuing to use it as it is may result in fire or accidents, and can also damage your eyes.

EF-62/EF-61

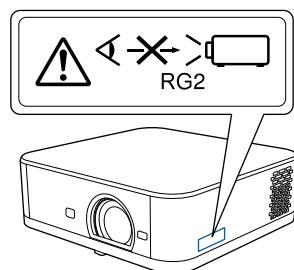

This section briefly explains the difficult terms that are not explained in the text of this guide. For details, refer to other commercially available publications.

Aspect Ratio	<p>The ratio between an image's length and its height.</p> <p>Screens with a horizontal:vertical ratio of 16:9, such as HDTV screens, are known as wide screens.</p> <p>SDTV and general computer displays have an aspect ratio of 4:3.</p>
Contrast	<p>The relative brightness of the light and dark areas of an image can be increased or decreased to make text and graphics stand out more clearly, or to make them appear softer. Adjusting this particular property of an image is called contrast adjustment.</p>
4K	<p>A screen size standard with a resolution of 3,840 (horizontal) × 2,160 (vertical) dots.</p>
Full HD	<p>A screen size standard with a resolution of 1,920 (horizontal) × 1,080 (vertical) dots.</p>
HDCP	<p>HDCP is an abbreviation for High-bandwidth Digital Content Protection.</p> <p>It is used to prevent illegal copying and protect copyrights by encrypting digital signals sent over DVI and HDMI ports.</p> <p>Because the HDMI port on this projector supports HDCP, it can project digital images protected by HDCP technology.</p> <p>However, the projector may not be able to project images protected with updated or revised versions of HDCP encryption.</p>
HDMI™	<p>An abbreviation for High Definition Multimedia Interface.</p> <p>HDMI™ is a standard aimed at digital consumer electronics and computers. This is the standard by which HD images and multichannel audio signals are digitally transmitted.</p> <p>By not compressing the digital signal, the image can be transferred at the highest quality possible. It also provides an encryption function for the digital signal.</p>

HDTV	<p>An abbreviation for High-Definition Television that refers to high-definition systems which satisfy the following conditions:</p> <ul style="list-style-type: none">• Vertical resolution of 720p or 1080i or greater (p = Progressive, i = Interlace)• Screen aspect ratio of 16:9
Pairing	<p>Register devices in advance when connecting with Bluetooth devices to ensure mutual communication.</p>
Refresh Rate	<p>The light-emitting element of a display maintains the same luminosity and color for an extremely short time.</p> <p>Because of this, the image must be scanned many times per second to refresh the light-emitting element.</p> <p>The number of refresh operations per second is called the Refresh rate and is expressed in hertz (Hz).</p>
SDTV	<p>An abbreviation for Standard Definition Television that refers to standard television systems which do not satisfy the conditions for HDTV High-Definition Television.</p>

Check these sections for important notices about your projector.

► Related Links

- "FCC Compliance Statement" [p.111](#)
- "Innovation, Science and Economic Development Canada (ISED) Notices" [p.111](#)
- "Wireless LAN with Bluetooth Safety and Specifications" [p.112](#)
- "Restriction of Use" [p.112](#)
- "Trademarks" [p.112](#)
- "Copyright Notice" [p.113](#)
- "Copyright Attribution" [p.113](#)

FCC Compliance Statement

FCC Compliance Statement For United States Users

Contains FCC ID: BKMAE-WXT5HM

Bluetooth remote controller FCC ID: BKMAE-B064E02W7

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. Properly shielded and grounded cables and connectors must be used for connection to host computers and/or peripherals in order to meet FCC emission limits.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 7.8 inches (20 cm) or more away from person's body.

Innovation, Science and Economic Development Canada (ISED) Notices

Contains IC: 1052D-WXT5HM

Bluetooth remote controller IC: 1052D-B064E02W7

CAN ICES(B) / NMB(B)

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment (without Bluetooth remote controller) complies with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules.

This equipment should be installed and operated with a distance of at least 7.9 inches (20 cm) between the radiator and your body.

Wireless LAN with Bluetooth Safety and Specifications

Contains WLAN/BT module model: WXT5HM2001

Bluetooth remote controller Model: B064E-02-W7

This document provides safety instructions and describes the specifications. Read this document carefully before use to ensure your safety and product performance.

This device is restricted to indoor operation only.

Operating frequency range:

WXT5HM2001: 2.402-2.480GHz, 5.15-5.35GHz, 5.47-5.85GHz

B064E-02-W7: 2.402-2.480GHz

Data transmission is always initiated by software, which is then passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinue transmission in case of either absence of information to transmit or operational failure.

Restriction of Use

When this product is used for applications requiring high reliability/safety such as transportation devices related to aviation, rail, marine, automotive etc.; disaster prevention devices; various safety devices etc; or functional/precision

devices etc, you should use this product only after giving consideration to including fail-safes and redundancies into your design to maintain safety and total system reliability. Because this product was not intended for use in applications requiring extremely high reliability/safety such as aerospace equipment, main communication equipment, nuclear power control equipment, or medical equipment related to direct medical care etc, please make your own judgment on this product's suitability after a full evaluation.

Trademarks

EPSON is a registered trademark of Seiko Epson Corporation.

Mac, OS X, and macOS are trademarks of Apple Inc.

Microsoft, Windows, and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube and Google Cast are trademarks of Google LLC.

Netflix is a registered trademark of Netflix, Inc. 

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. 

Wi-Fi® is a trademark of the Wi-Fi Alliance®.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Seiko Epson Corporation is under license. Other trademarks and trade names are those of their respective owners.

Adobe and Adobe Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

USB Type-C® is a registered trademark of USB Implementers Forum.

Other product names used herein are also for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

The contents of this guide may be changed or updated without further notice.

Copyright Attribution

This information is subject to change without notice.

© 2025 Seiko Epson Corporation

2025.08 414607100EN EAI