



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



610151P

Power Reclining Sofa

ITEM: **610151P**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A SEAT



1PC

B LEFT BACK



1PC

C MIDDLE BACK



1PC

D RIGHT BACK



1PC

E LEFT EAR



1PC

F RIGHT EAR



1PC

G ADAPTER



1PC

NOTE:

 
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **610151P**




ASSEMBLY INSTRUCTIONS


STEP 1

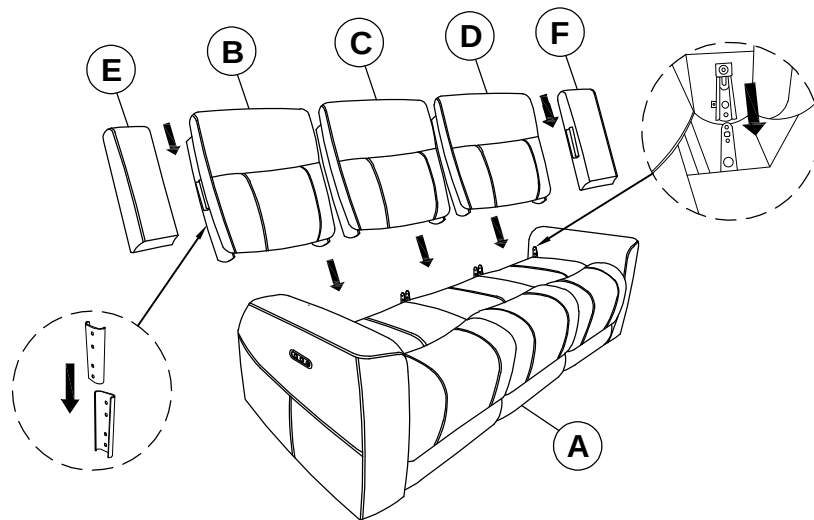

 
STEP 2

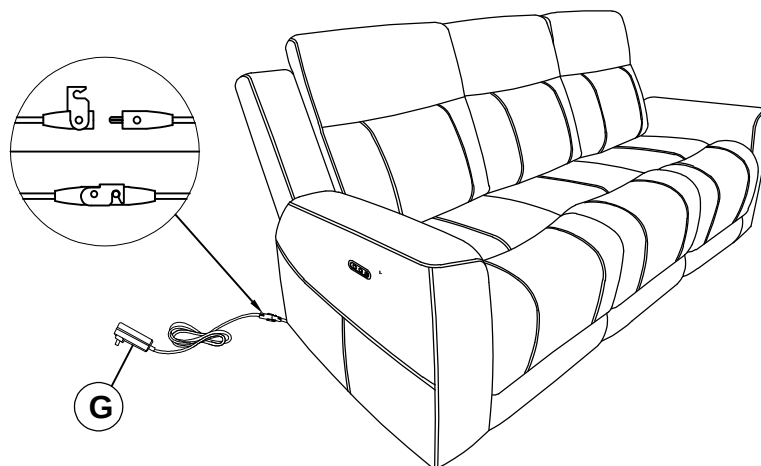

 STEP 3 **COMPLETE**

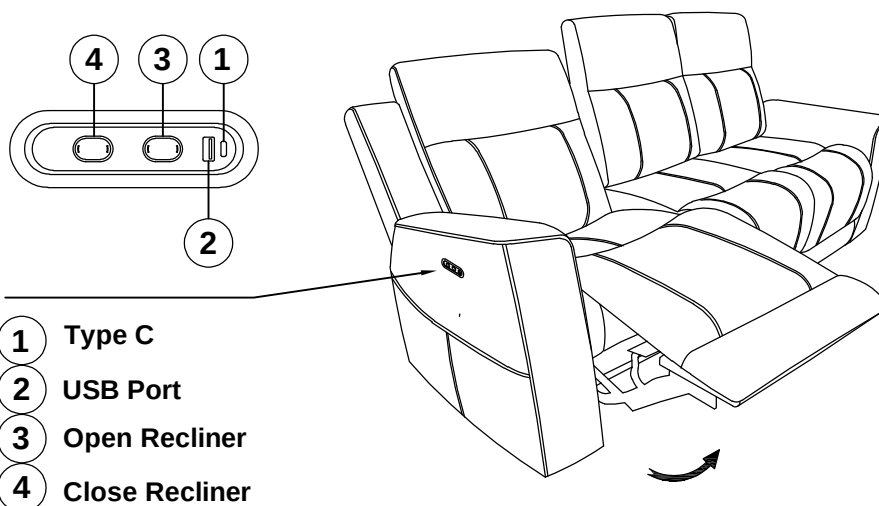

ITEM: **610151P**

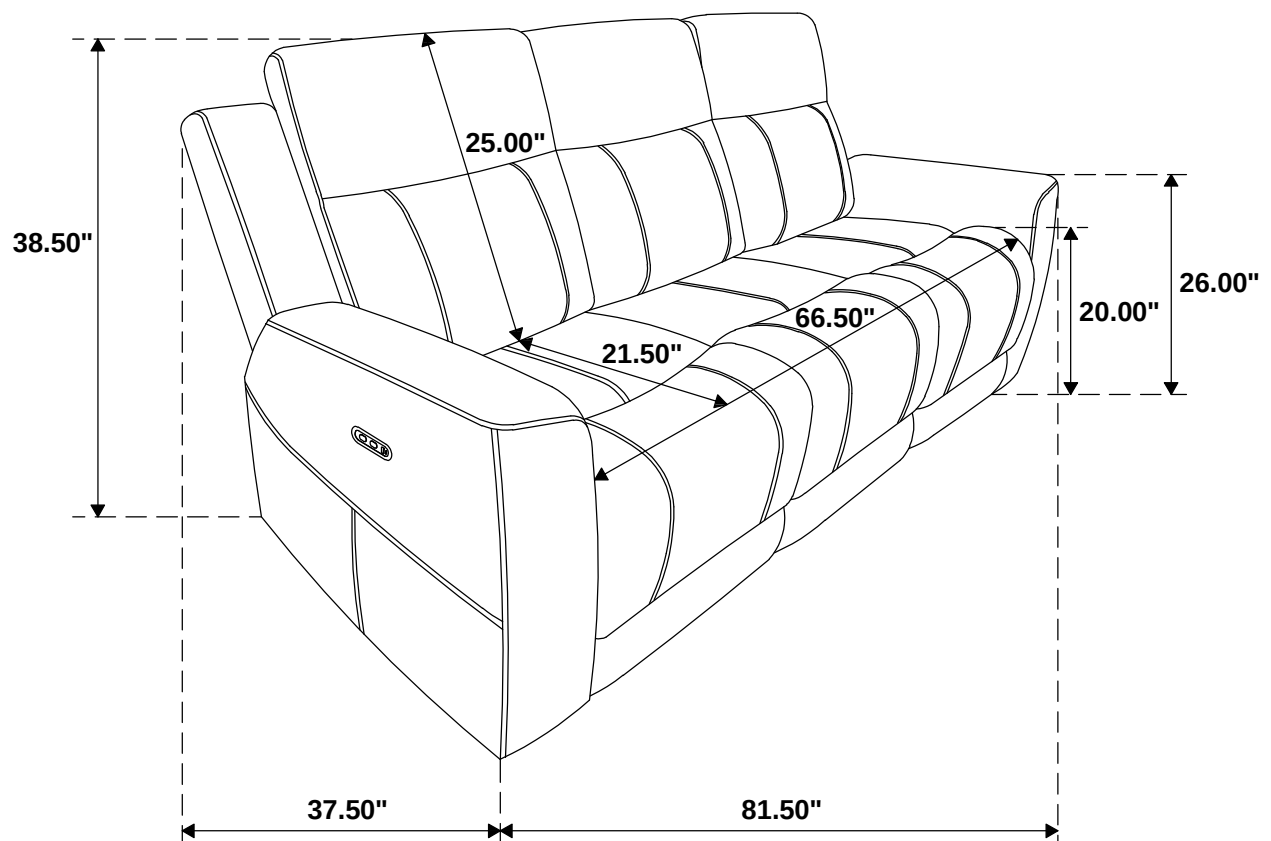 

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



610152P

Power Reclining Loveseat

ITEM: **610152P**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A SEAT



1PC

B LEFT BACK



1PC

C CONSOLE BACK



1PC

D RIGHT BACK



1PC

E LEFT EAR



1PC

F RIGHT EAR



1PC

G ADAPTER



1PC

 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **610152P**

ASSEMBLY INSTRUCTIONS


STEP 1

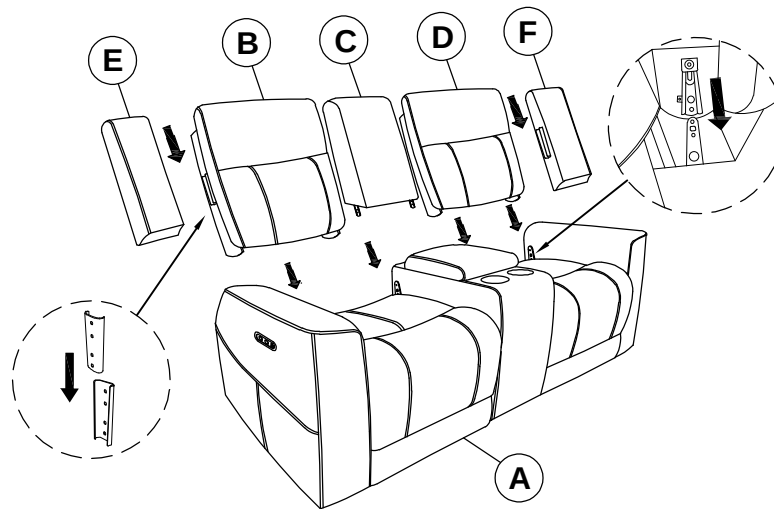

 
STEP 2

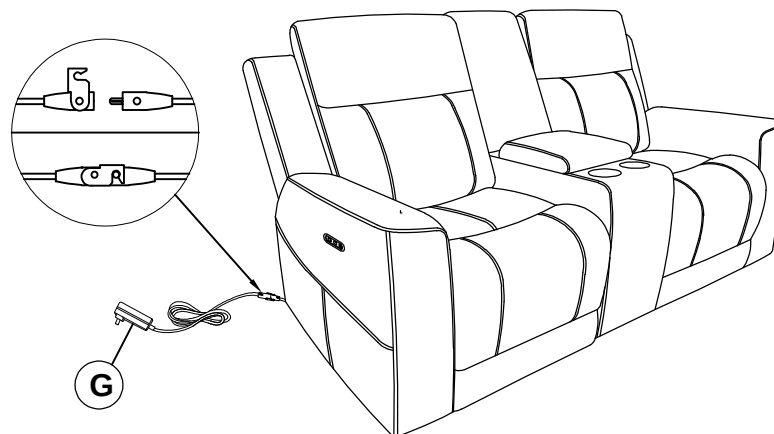

 
STEP 3 **COMPLETE**

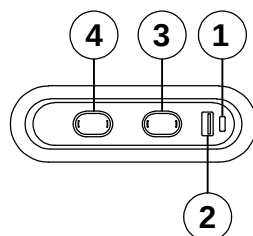

 - 1 Type C
- 2 USB Port
- 3 Open Recliner
- 4 Close Recliner

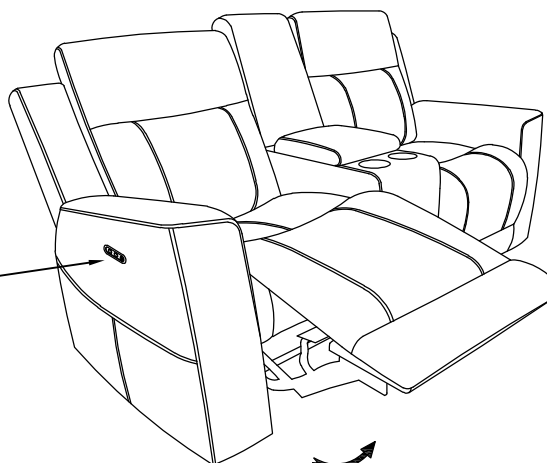

ITEM: **610152P**

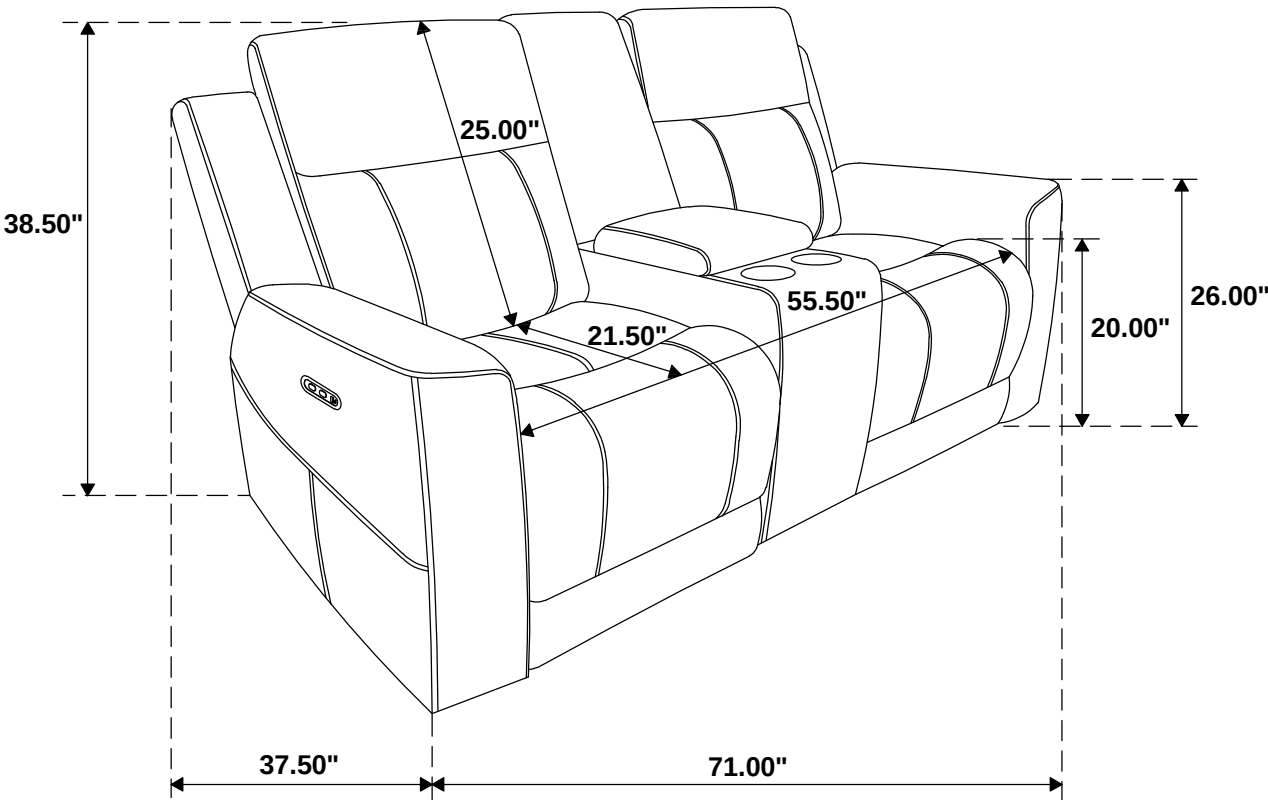 

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



610153P
Power Recliner

ITEM: **610153P**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A SEAT



1PC

B BACK



1PC

C LEFT EAR



1PC

D RIGHT EAR



1PC

E ADAPTER

 


1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **610153P**
ASSEMBLY INSTRUCTIONS
STEP 1

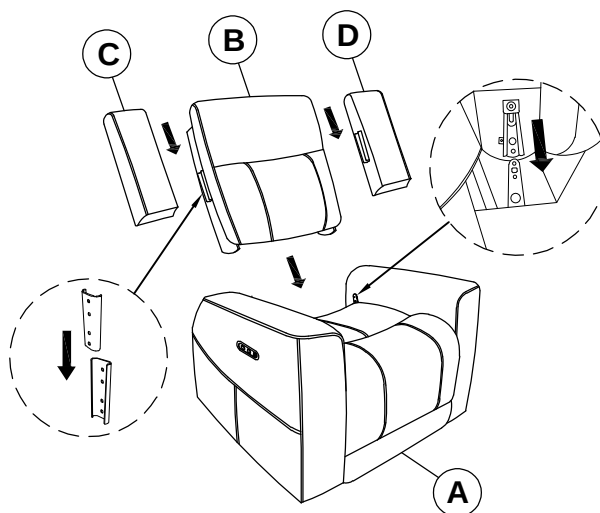

 
STEP 2

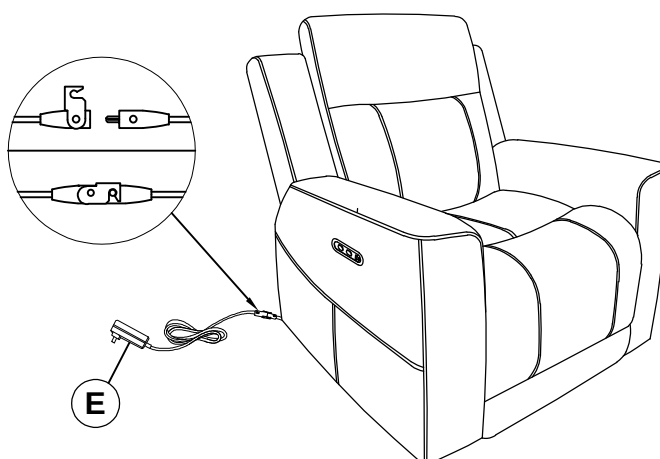

 
STEP 3
COMPLETE

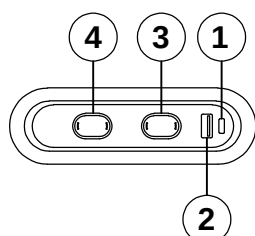

 - 1 Type C
- 2 USB Port
- 3 Open Recliner
- 4 Close Recliner

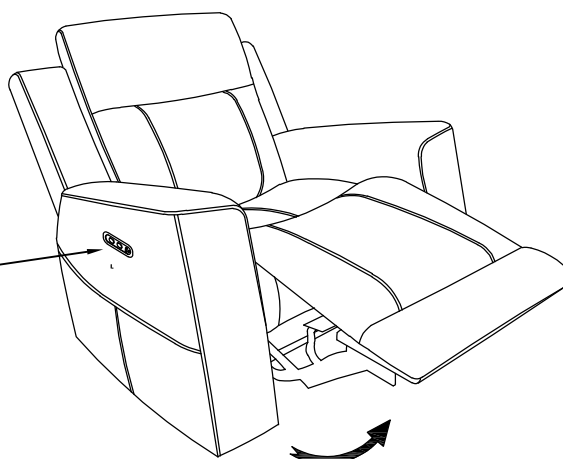

ITEM: **610153P**

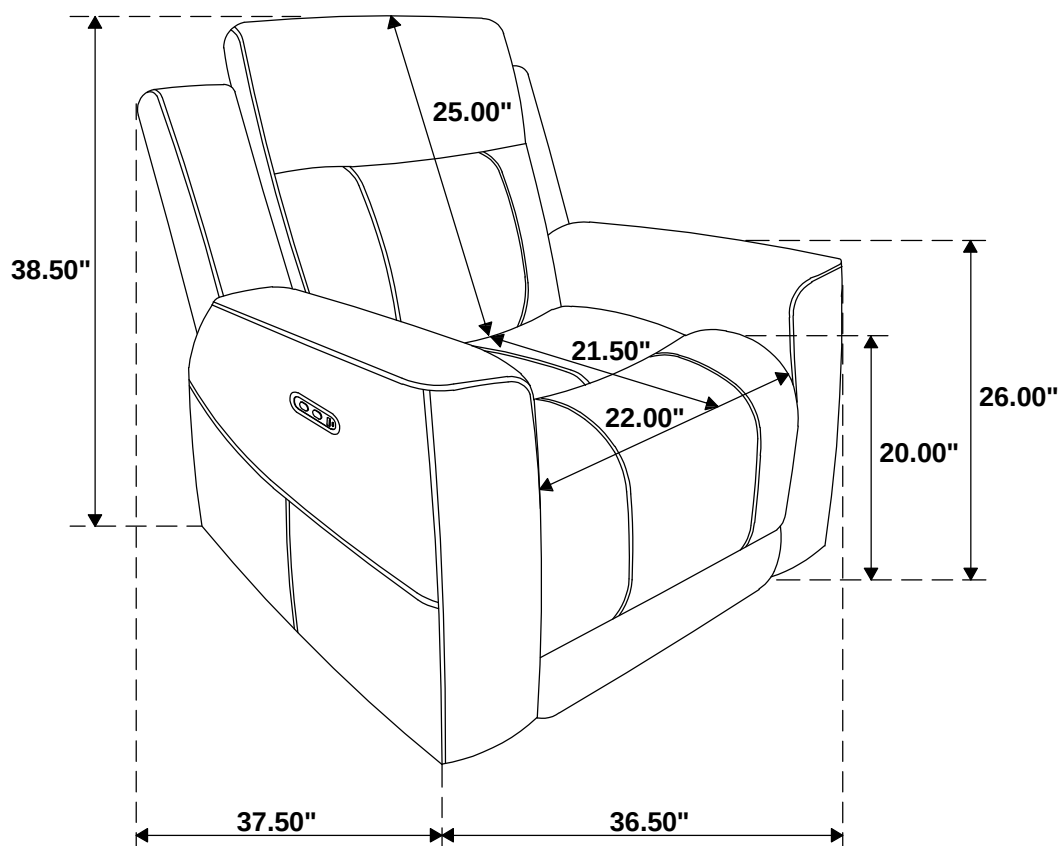 

Note: Dimension tolerance $\pm 5\%$