

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

107286
DINING CHAIR

REVISION 0:12/23/2016
REVISION 1:05/20/2019
REVISION 2:11/30/2019
REVISION 3:12/14/2019

ITEM : 107286



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !

 

 
- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.









ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

- A  BACK FRAME 1PC
- B  SEAT CUSHION 1PC
- C  FRONT LEG 2PCS

HARDWARE IDENTIFICATION


1	SHORT BOLT		M8*55	1pc
2	LARGE BOLT		M8*60	4pcs
3	LARGEST BOLT		M8*75	4pcs
4	ALLEN KEY		M8	1pc
5	LOCK WASHER			9pcs
6	FLAT WASHER			9pcs

ITEM: 107286


ASSEMBLY INSTRUCTIONS




STEP1

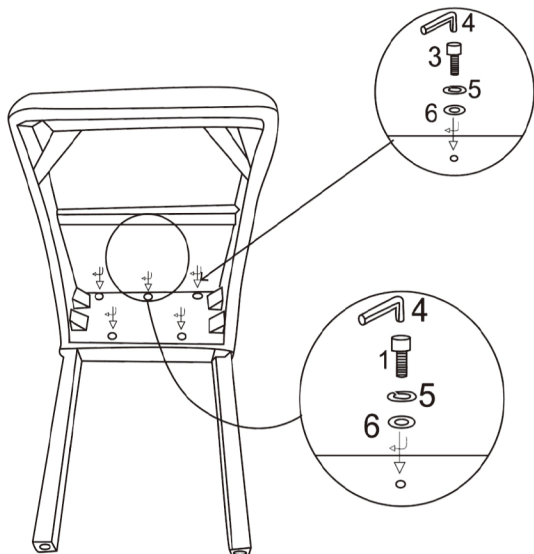



STEP2

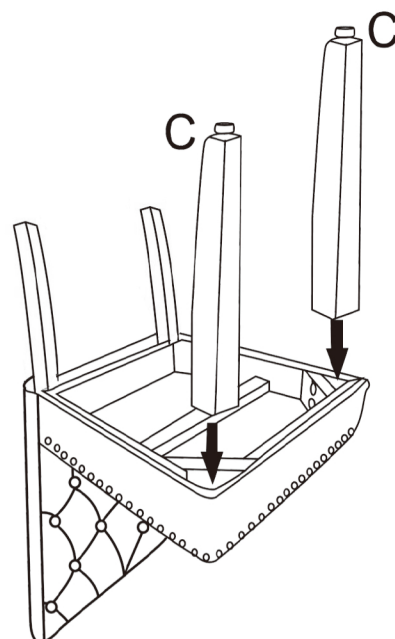

STEP3

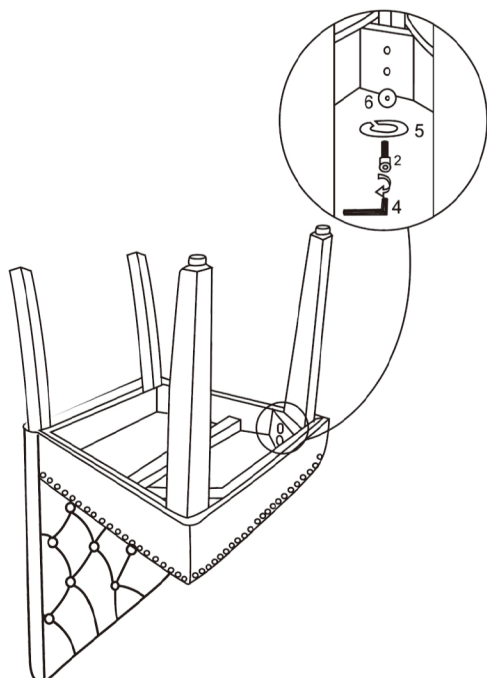


STEP4

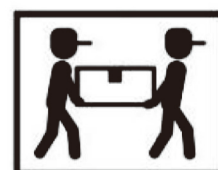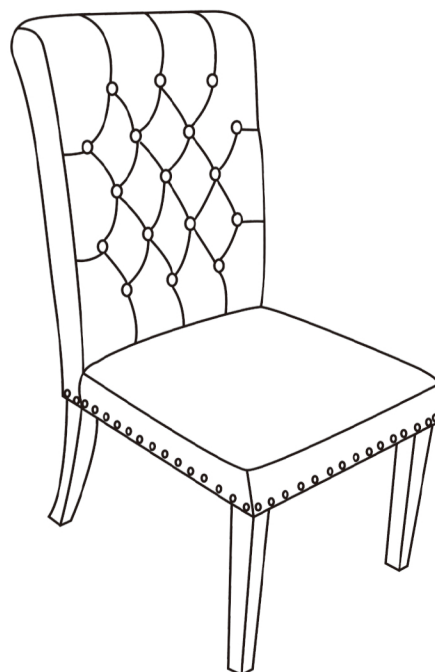

ITEM: 107286



ASSEMBLY INSTRUCTIONS

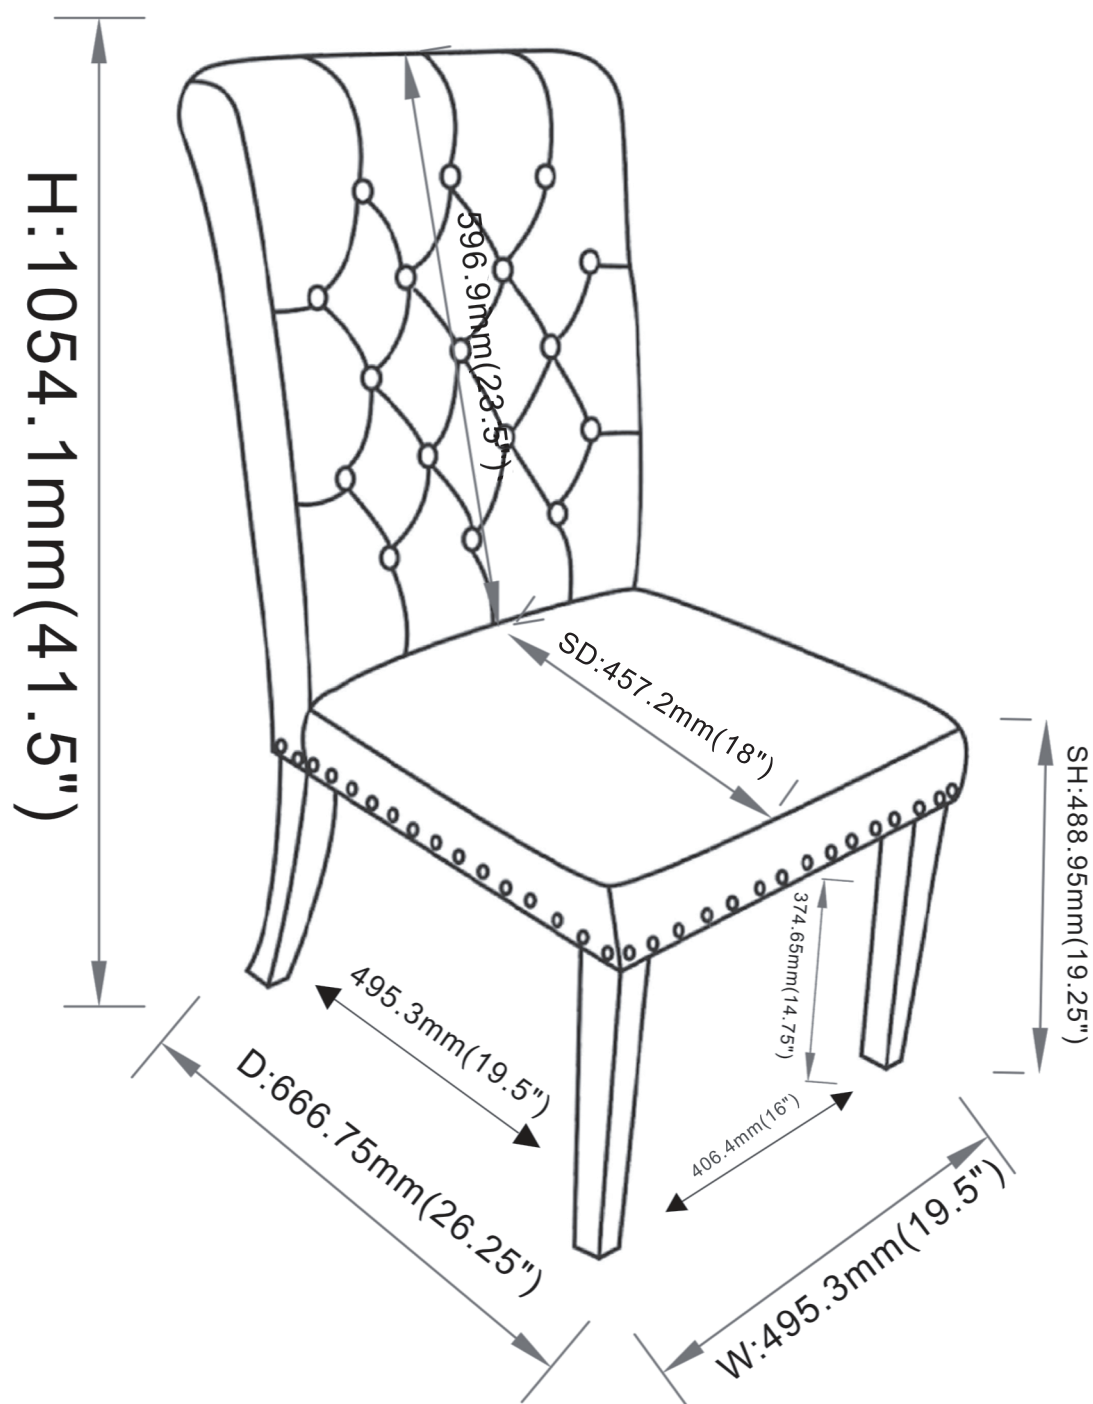

Note:Dimension tolerance $\pm 5\%$