
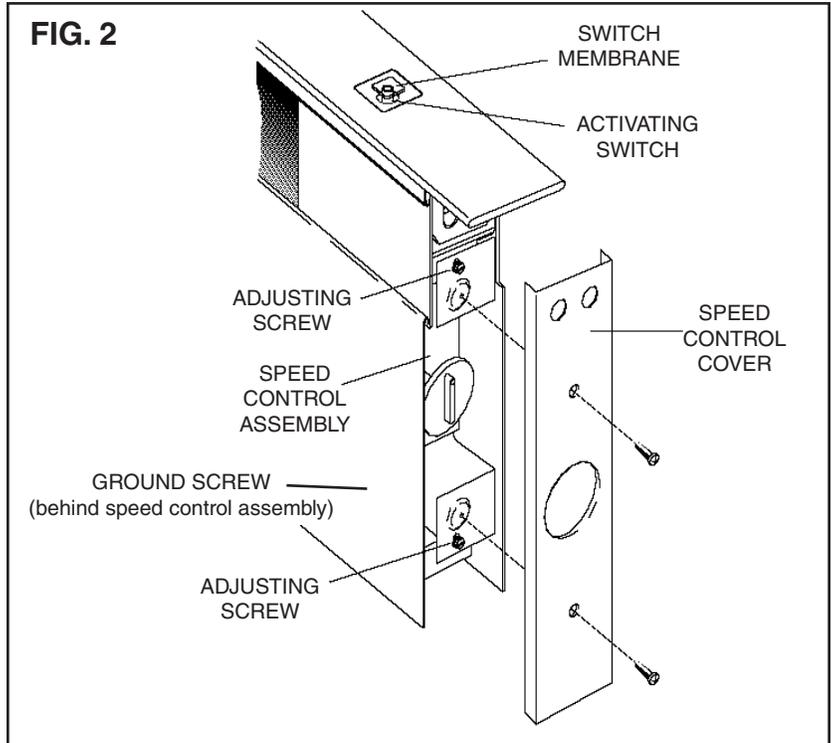


BROAN[®] DOWNDRAFT SPEED CONTROL ASSEMBLY

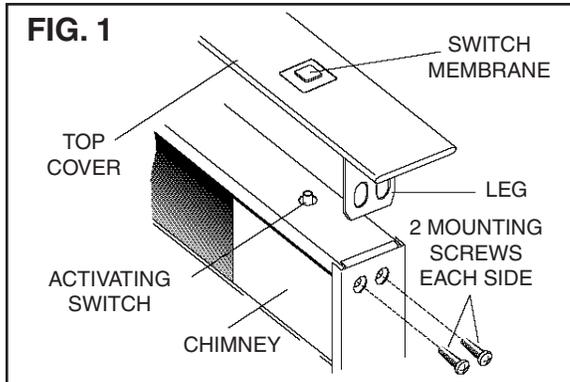

NEW DOWNDRAFT INSTALLATION (USING MODEL 332 EXTERIOR BLOWER)

When using the Broan Model 332 Exterior Blower, this Speed Control Kit **must replace** the factory-installed speed control in the Broan Model 2830 or 2836 Remote Downdraft **before** downdraft is installed.

To remove factory-installed speed control assembly:

1. Lift chimney straight up and cock it slightly so chimney rests on top of downdraft housing.
2. Remove the two (2) mounting screws from each side of the top cover and remove top cover. FIG. 1
3. Remove and discard speed control cover (2 screws). FIG. 2
4. Remove adjusting screws and move speed control assembly to allow access to the ground screw (located in chimney, behind speed control assembly). Remove ground screw. FIG. 2
5. Remove large access cover from front of downdraft housing. Pull apart wiring connector and remove ground screw in order to free the speed control assembly. Discard factory-installed speed control assembly.

Reverse Steps 1 - 5 to install new speed control assembly.

EXISTING DOWNDRAFT INSTALLATION (REPLACEMENT SPEED CONTROL)

This Speed Control Kit replaces the factory-installed speed control assembly in the Broan Downdraft. In most cases, the downdraft will be installed behind a cooktop and electrically wired.

To remove factory-installed speed control assembly:

WARNING

TURN OFF POWER TO DOWNDRAFT AT SERVICE PANEL AND LOCK OUT SERVICE PANEL TO KEEP POWER FROM BEING TURNED ON ACCIDENTALLY.

1. Lift chimney straight up and cock it slightly so chimney rests on top of downdraft housing.
2. Remove the two (2) mounting screws from each side of the top cover and remove top cover. FIG. 1
3. Remove and discard speed control cover (2 screws). FIG. 2
4. Remove adjusting screws and move speed control assembly to allow access to the ground screw (located in chimney, behind speed control assembly). Remove ground screw. FIG. 2
5. From below, (inside cabinet, beneath cooktop) remove large access cover from front of downdraft housing. Pull apart wiring connector and remove ground screw in order to free the speed control assembly. Discard factory-installed speed control assembly.

Reverse Steps 1 - 5 to install new speed control assembly.