

GETTING *started* WITH YOUR SINGLE-DOOR REFRIGERATOR



BEFORE YOU START



WHAT'S INCLUDED IN MY LITERATURE PACKET?

You have some extra items in your literature pack, including hinge covers, a *PureAir Ultra II™* Air Filter, *PureAir Produce Keeper™* Refill packets, and your Use & Care Manual. Flip over this guide for install instructions for your air filter. For more detailed information, reference your Use & Care Manual.

SET UP YOUR REFRIGERATOR

Prior to using the refrigerator, make sure it is located on a floor that is level and strong enough to support it fully loaded. Check out **INSTALLATION** in your Use & Care Manual.



BEFORE OPERATING FOR THE FIRST TIME

 
Clean the inside of your appliance before using it. See the **CARE AND CLEANING** section in your Use & Care Manual. To ensure safe food storage, allow the appliance to operate with the door closed for at least 8 hours before loading it with food.

YOU'RE IN CONTROL



Appliance Control Display

The appliance control display is located in the cabinet below the upper drawer.

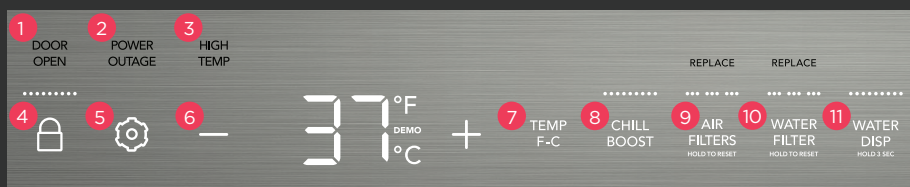

Alarms

- 1 DOOR OPEN** illuminates and alert sounds if the door is open 5+ minutes until you close the door.
- 2 POWER OUTAGE** illuminates and alert sounds after a power outage ends until you reset it by pressing any button.
- 3 HIGH TEMP** illuminates and alert sounds if the temperature increases above a safe temperature range until you reset it.



REMEMBER

- Allow 24 hours for the temperature to stabilize between adjustments.
- Refer to your Use & Care Manual for more detailed information about your appliance.

Controls

 
- Press and hold for 3 seconds to enable/disable the appliance control display. While locked, no changes can be made until unlocked.
- Press to reveal other function icons.
- Press **+** to raise the temperature and **-** to lower the temperature on the appliance control.
- TEMP °F/°C** allows you to switch between Fahrenheit (°F) and Celsius (°C).
- CHILL BOOST** helps ensure your recently purchased fresh food will stay cool at a faster rate to preserve freshness.
- AIR FILTER** illuminates when it's time to change the filter, generally every 6 months.
- WATER FILTER** illuminates when it's time to change the filter, generally every 6 months.
- WATER DISP** illuminates when you want internal water dispenser ON. When **WATER DISP** is off, you can't dispense water.

KEEP IT FRESH



Install your new *PureAir Ultra II™* Air Filter to keep fresh air flowing (1 included)

1. Grab and pull the cover in your refrigerator until it releases from the fixed air filter housing.
2. Snap the new filter into the filter cover. The open face (carbon media) of the filter should face outward.
3. Reattach the air filter cover to the air filter housing, aligning the cover to the housing and firmly snapping it in place.
4. Press and hold **REPLACE AIR FILTER** on the appliance control display to reset it.

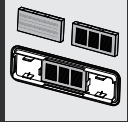

PAULTRA2™



Install your new *PureAir Produce Keeper™* Refill to extend the life of produce (1 included)

1. Remove the outer plastic wrapper.
2. Insert the unopened packet into the holder in the Crisper Drawer.



FRPAPKRF™

Change your filters every 6 months to ensure optimal fridge freshness.

SAFE, GREAT TASTING WATER



Your *PurePour™* Water Filter is certified to reduce contaminants and keep great-tasting water flowing for you and your family.

- Your new *PurePour™* water filter is located on the left side under your appliance control display.
- Before dispensing water for the first time, be sure to prime the water supply system:
 1. Press and hold a drinking glass against the water dispenser paddle until water comes out (it may take up to 1½ minutes).
 2. Run water through dispenser for approximately 3 minutes or 1½ gallons, before use, and discard.



FPPWFUO1™



Change your water filter every 6 months to ensure the highest possible water quality.

FAQs

How do I use the water dispenser?

Your water dispenser is mounted on the left-hand side of your interior refrigerator wall. To use the water dispenser simply push the water nozzle so it's fully extended. Place your cup against the paddle and press to dispense water. When you're finished, lock the water dispenser in place by pushing the nozzle back in place.



Why does my refrigerator seem to run continuously?

Your refrigerator is equipped with an energy-efficient variable speed compressor. It actually saves energy running more frequently while maintaining even temperatures.

The temperature is warmer or colder than preferred. What can I do?

Simply adjust the temperature by 1 or 2 degrees and allow 24 hours for the temperature to stabilize. Check to ensure food items are not blocking the multi-port air exhaust ducts as this will impact temperature performance.

 


Find more troubleshooting tips in the back of your Use & Care Manual.

LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family and discover more benefits by registering your single-door refrigerator.

Look for the PhotoregisterSM icon on your registration card.

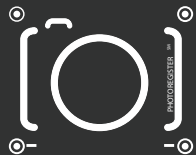

WE ARE
here
FOR YOU



Have a question?



Want help?



Need service?

owner support

frigidaire.com 1 (800) 374-4432

frigidaire.ca 1 (800) 265-8352

