

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

REVISION 0 : 01/03/2021

181065
Serving Cart

ITEM: 181065



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



 
 
 
WARNING!

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.


ASSEMBLY TIME

15 MINUTES


PARTS IDENTIFICATION

A GLASS  2PCS B FRAME  2PCS	C CONNECTION FRAME  4PCS
--	--

 
HARDWARE IDENTIFICATION

Z	HARDWARE PACK		
1	1.5" WHEELS WITHOUT BRAKES		2PCS
2	1.5" WHEELS WITH BRAKE		2PCS
3	BOLT M6*12MM		16PCS
4	SUCTION CUP Ø20MM		8PCS
5	ALLEN WRENCH M4		1PC
6	SPANNER M14		1PC

 
ITEM: 181065
ASSEMBLY INSTRUCTIONS
STEP 1

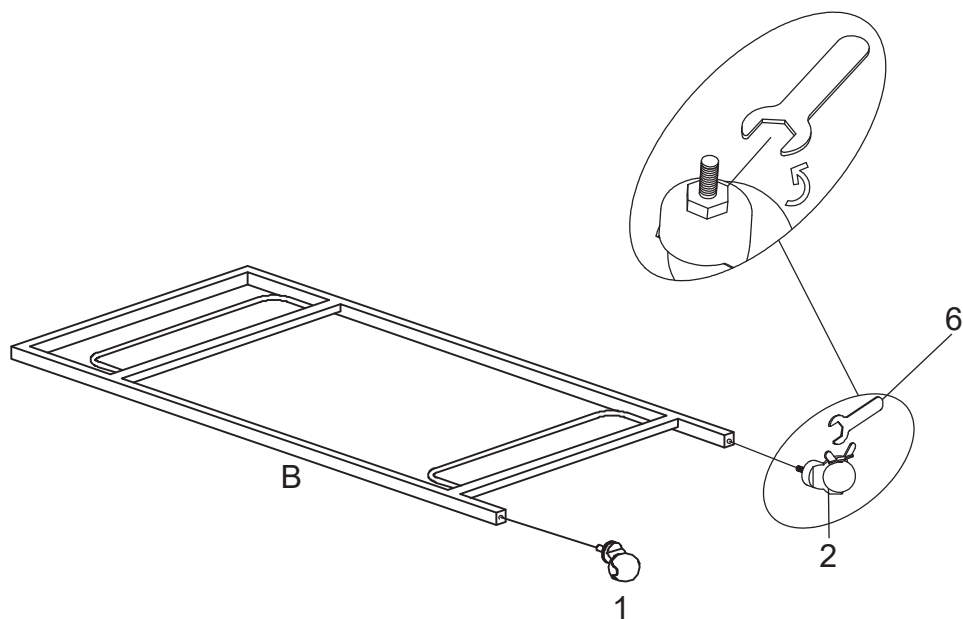


2x

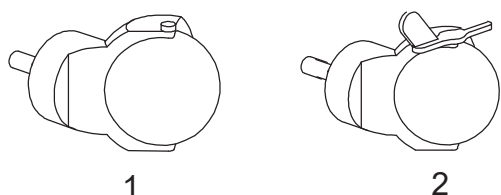 

 
STEP 2

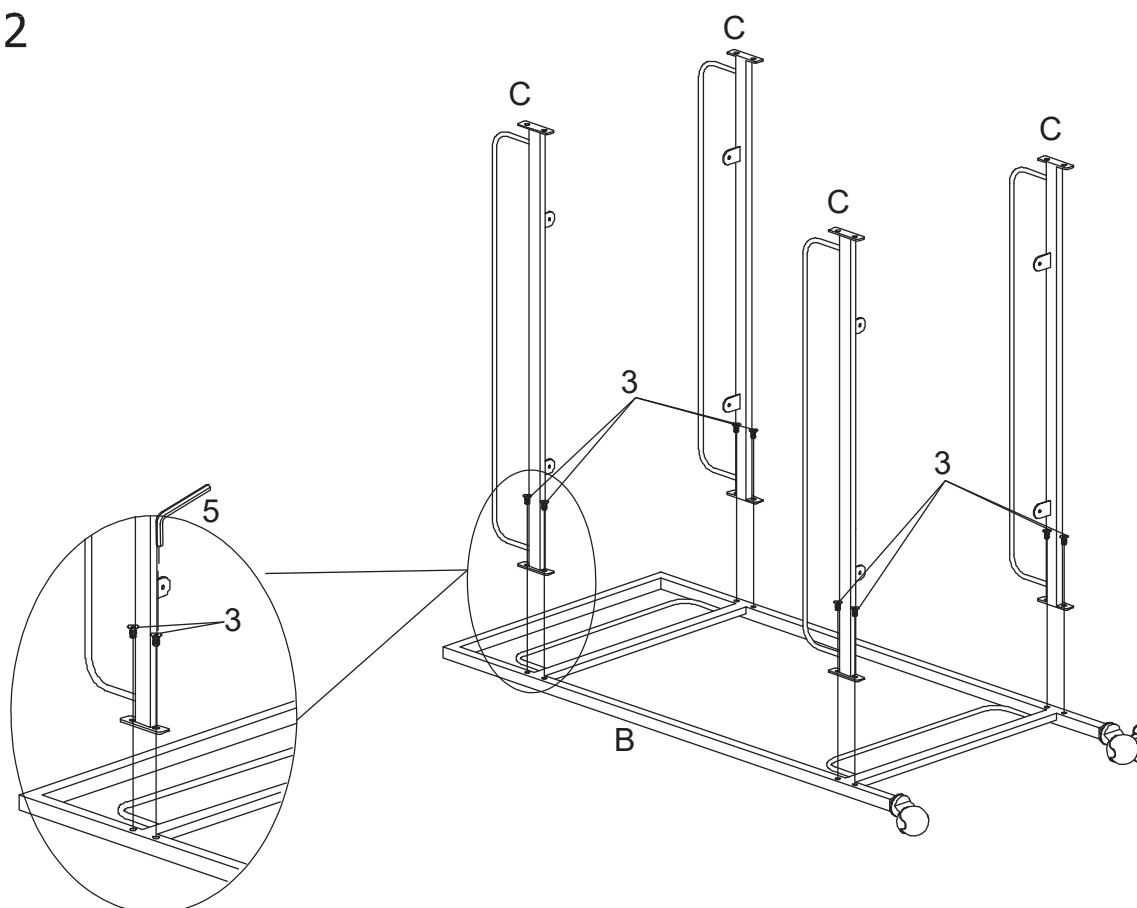

 
ITEM: 181065
ASSEMBLY INSTRUCTIONS
STEP 3

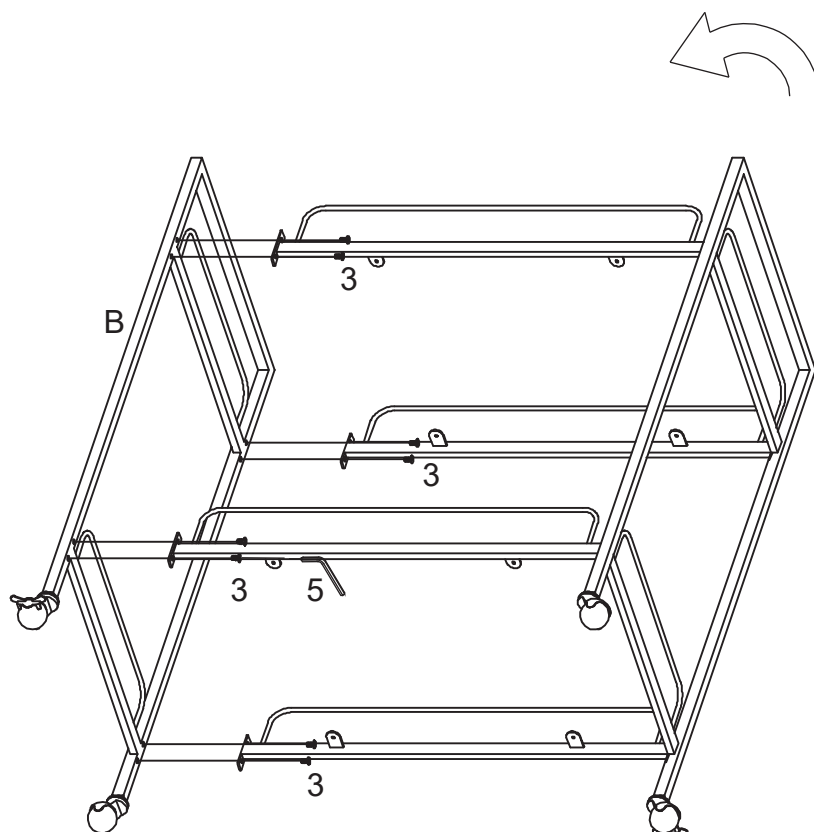

 
STEP 4

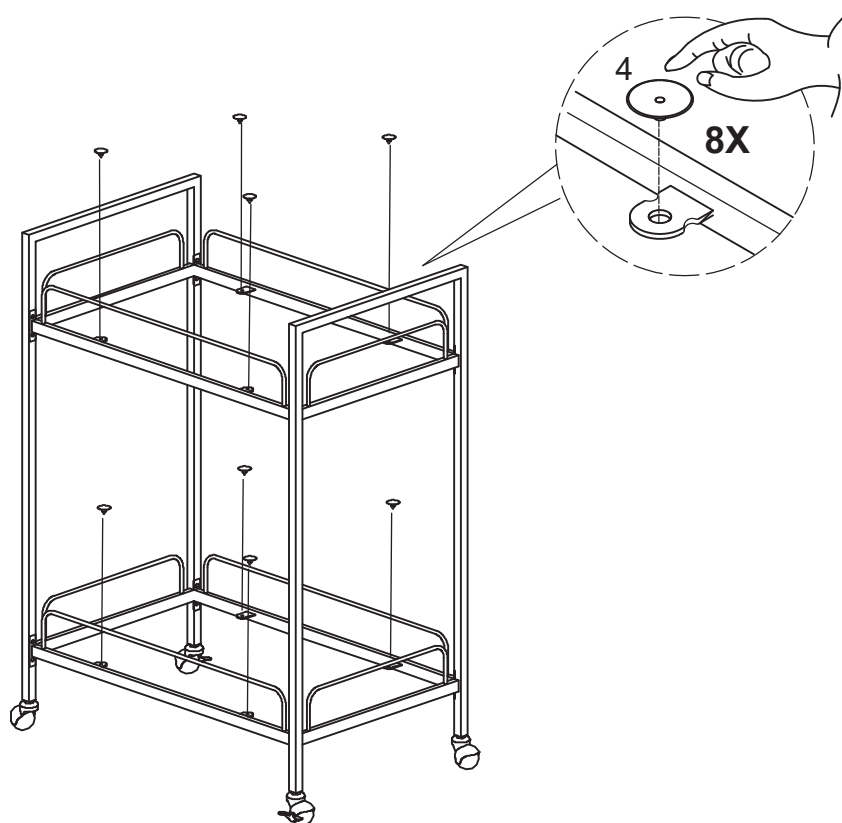

 ITEM: 181065
ASSEMBLY INSTRUCTIONS
STEP 5

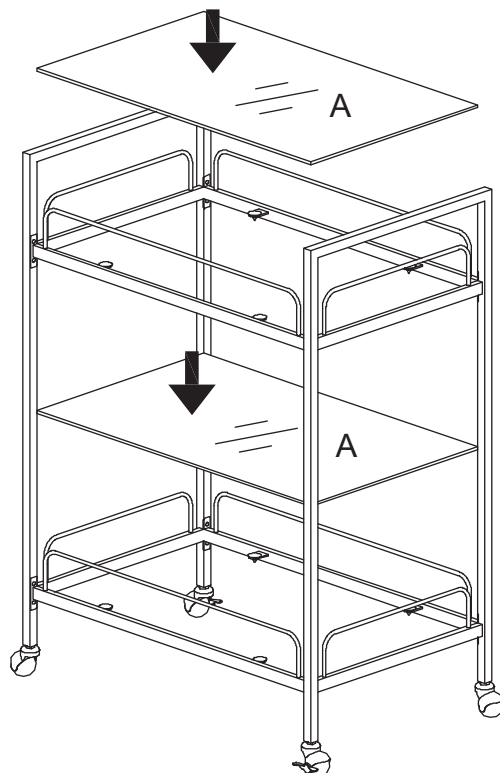


 STEP 6

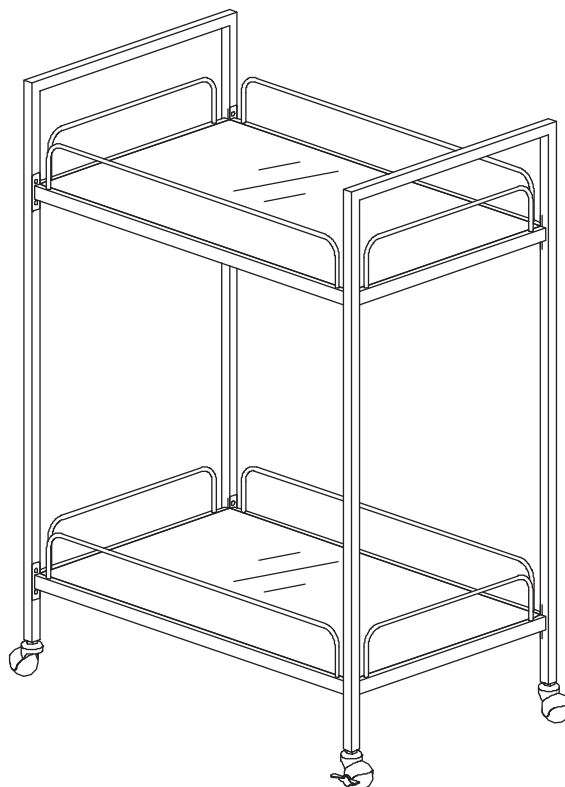

ITEM: 181065

 ASSEMBLY INSTRUCTIONS

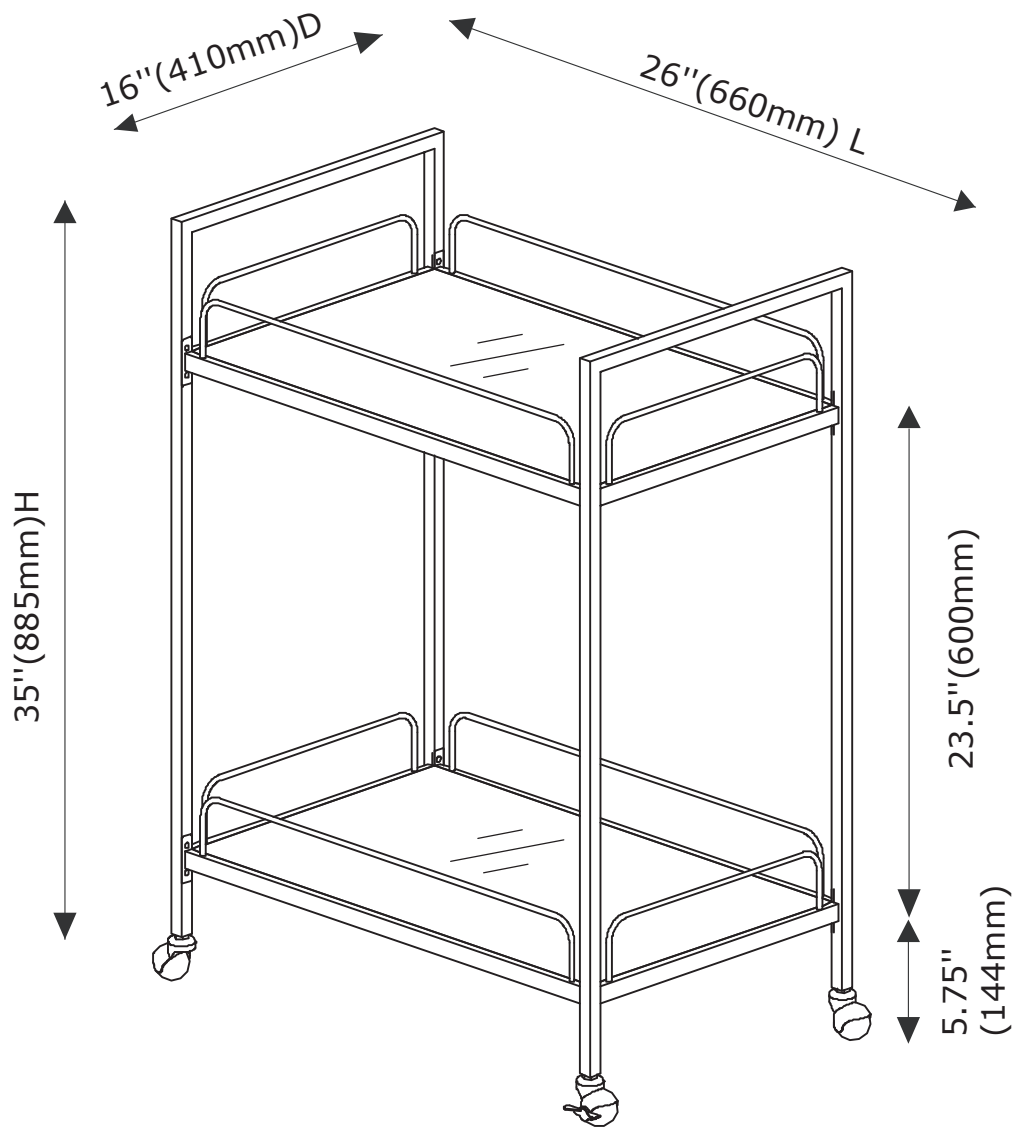

Note :Dimension tolerance $\pm 5\%$