


Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/7


IMPORTANT


- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

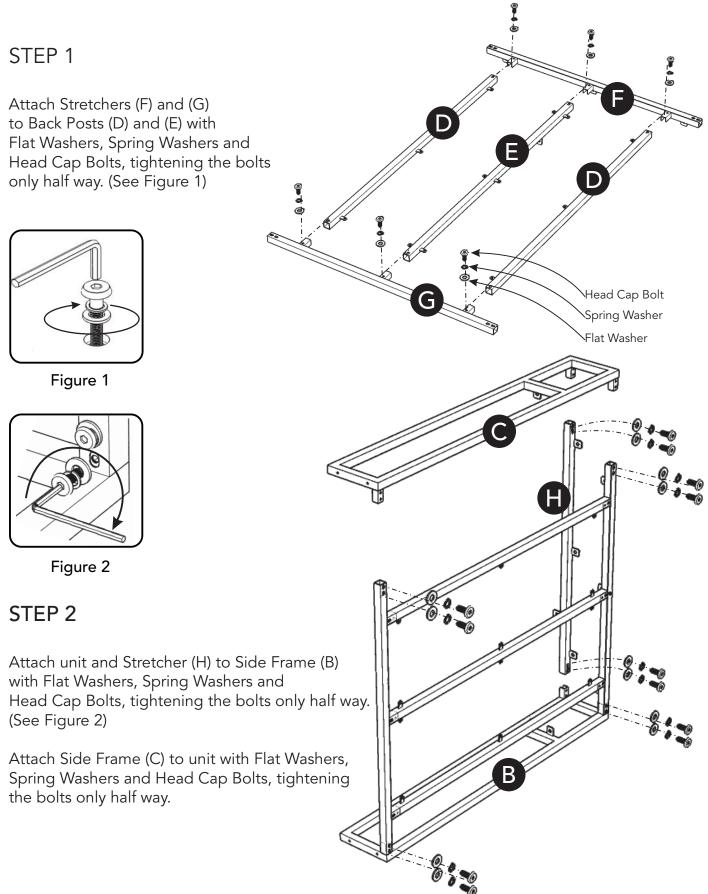

Assembly Instructions 3/7

STEP 3

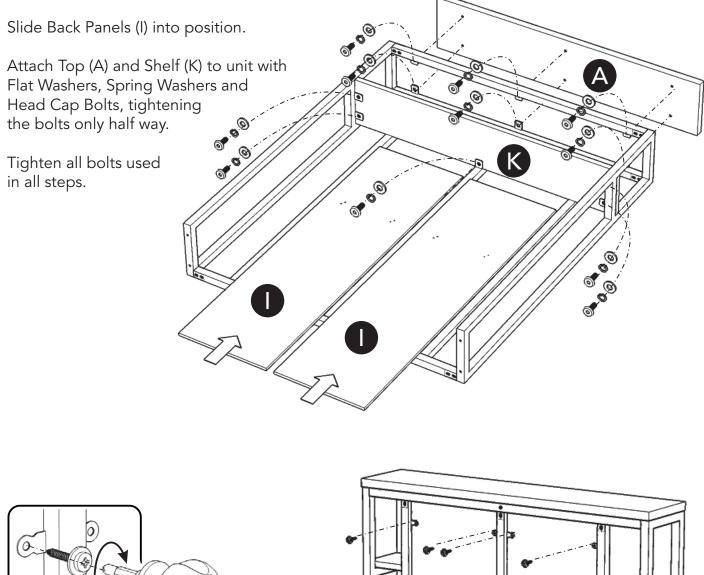

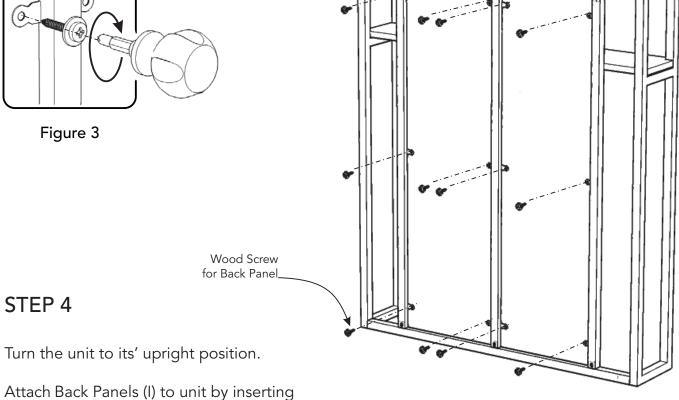

Wood Screws for Back Panel into the pre-drilled holes. (See Figure 3)

Assembly Instructions 4/7

STEP 5

Attach Stretchers (J) and Seat Frame (M) to Side Frame (Q) with Flat Washers, Spring Washers, Head Cap Bolts and Tapered Bolts (medium), tightening the bolts only half way. (See Figure 4)

Attach Side Frame (P) to unit with Flat Washers, Spring Washers, Head Cap Bolts and Tapered Bolts (medium).

Tighten all bolts used in this step.

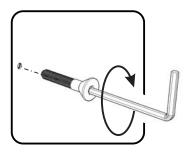


Figure 4


STEP 6

Attach Base (N) to unit with Flat Washers, Spring Washers and Head Cap Bolts.


6


Attach Divider (O) to unit with Tapered Bolts (medium).

Attach Seat (L) to unit with Flat Washers, Spring Washers and Head Cap Bolts.

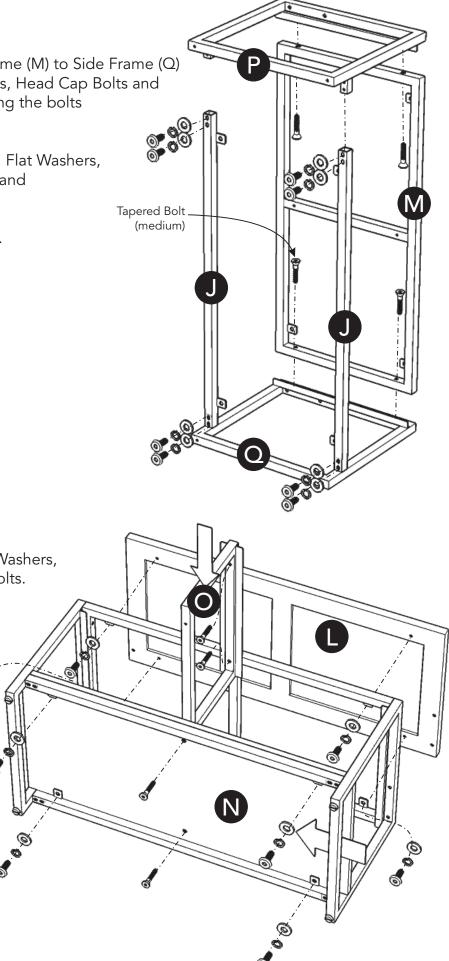

Assembly Instructions 5/7

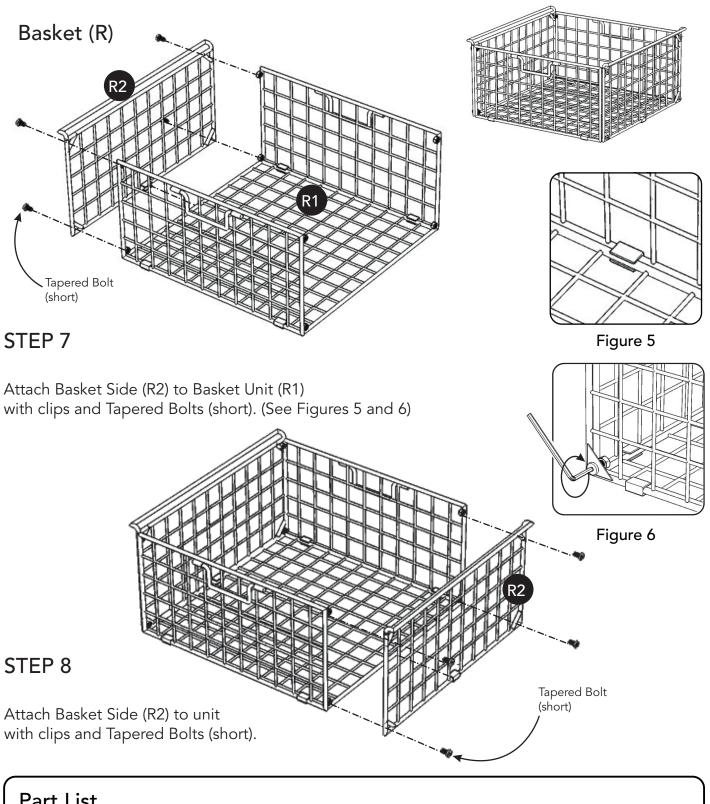

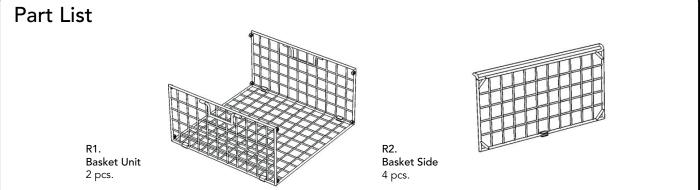

Assembly Instructions 6/7

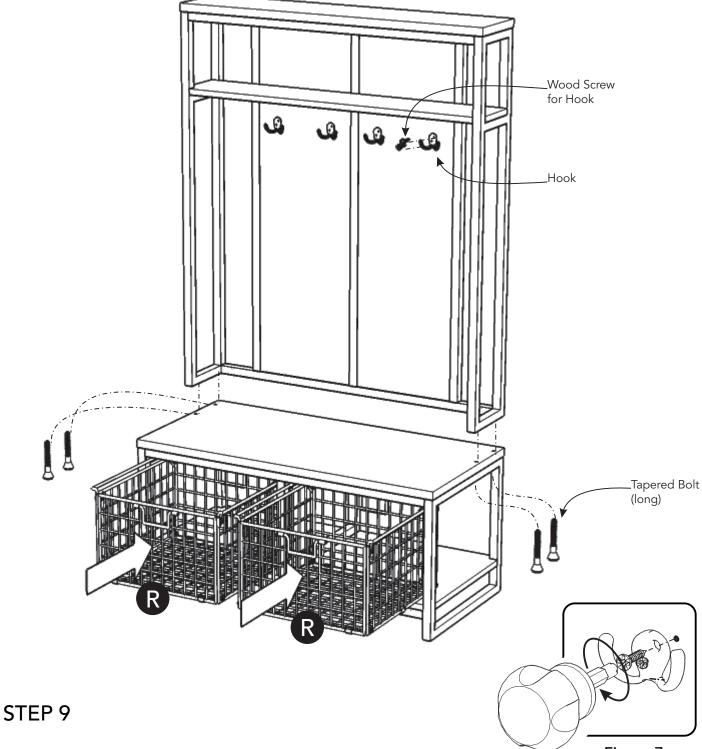


Figure 7

Attach Hooks to unit by inserting Wood Screws for Hook into the pre-drilled holes of back panels. (See Figure 7)

Attach unit from Step 4 to unit from Step 6 with Tapered Bolts (long).

Slide Baskets (R) into position.

To level the unit, adjust the adjustable levers on the bottom of unit. (See Figure 8)

Note: Unit must be level to work property.

Assembly Instructions 7/7

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

STEP 10

Place unit at desired location.

Drill a 3/8" hole in wall in-line with the pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Machine Screw.

Move unit back into place.

Slide Tip-over Restraint through Bracket on wall and Bracket on unit. (See Figure 9)

Put tie end of Tip-over Restraint into lock end of Tip-over Restraint and pull until tight.


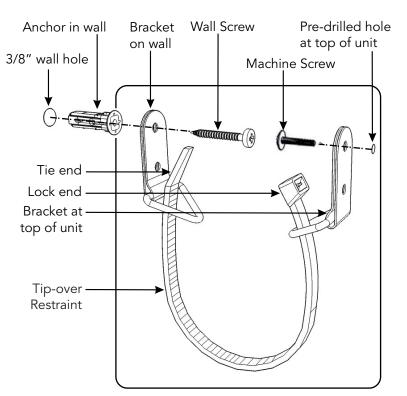


Figure 9

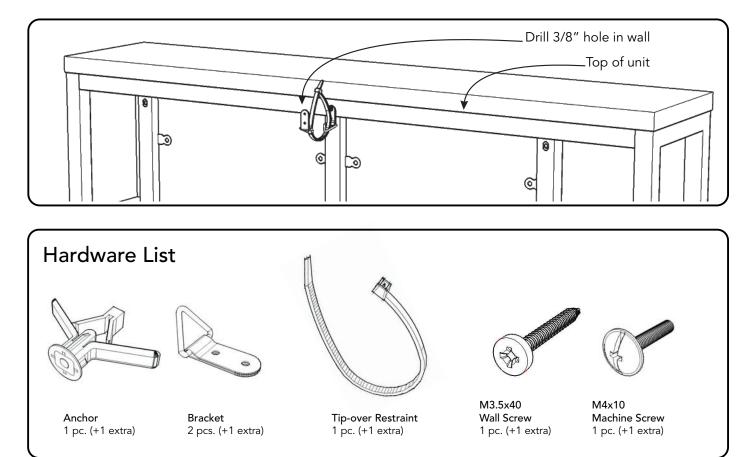

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at: www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319