

# Assembly Instruction for DINING TABLE 1319T-4272/1320T-4272

**Caution:** Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend that you should assemble this product with the assistance of another person, this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.
4. Please do not fully tighten any screws or bolts until last step.
5. Periodically check to ensure that all connectores (bolts, screw, etc) are tight.

PART LIST		
No.	PART DESC	Q'TY
A	 TABLE TOP	1
B	 TABLE LEG	2
C	 STRETCHER 2	2
D	 STRETCHER 1	1


HARDWARE LIST		
No.	HARDWARE DESC	Q'TY
1	 ALLEN BOLT (5/16*90mm)	4
2	 ALLEN BOLT (5/16*45mm)	14
3	 FLAT WASHER (5/16*19*1.5mm)	18
4	 SPRING WASHER (5/16)	18
5	 ALLEN KEY (M5*60*60mm)	1
6	 WOOD DOWEL (φ10 x 30mm)	2
7	 WOODEN CAP (φ21-φ19*12mm)	4

 Only tighten all bolts when all bolts aligned with bolt inserts.

STEP 1

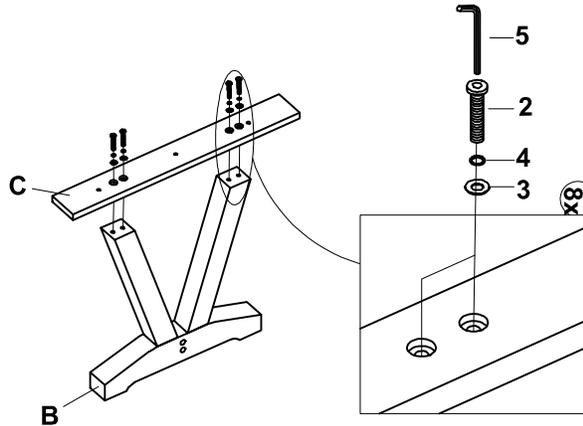


STEP 2

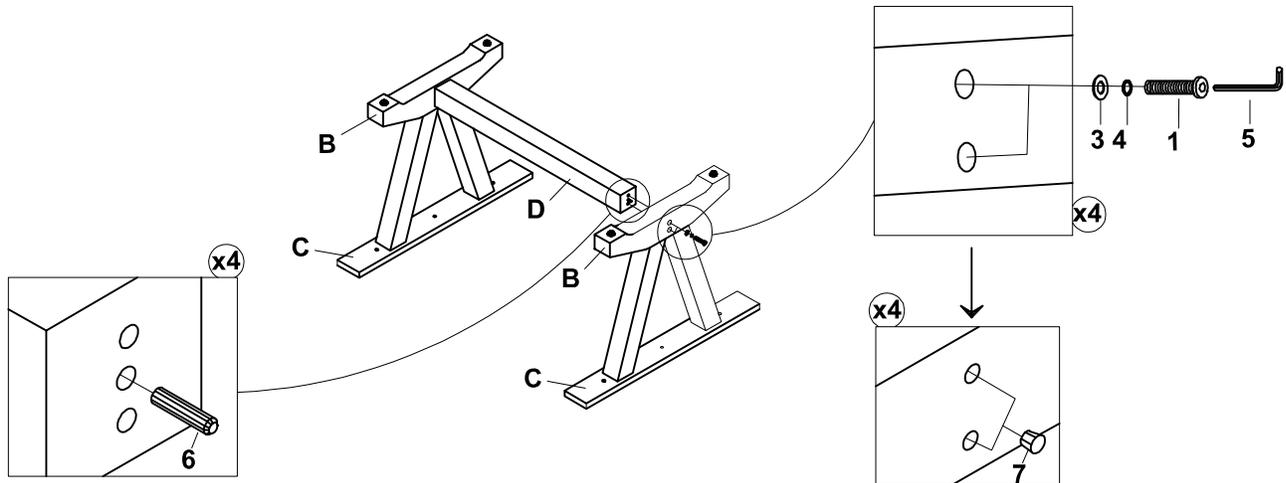


Assembly Instruction for  
DINING TABLE  
1319T-4272/1320T-4272

STEP 3

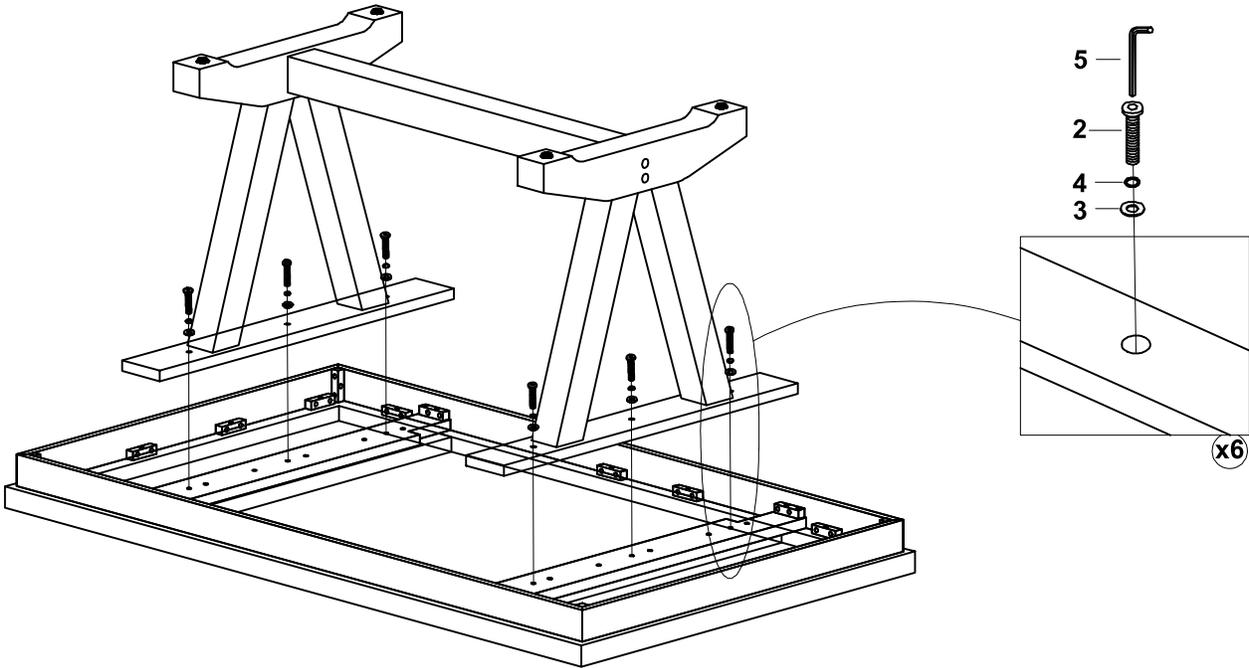

STEP 4: Completed

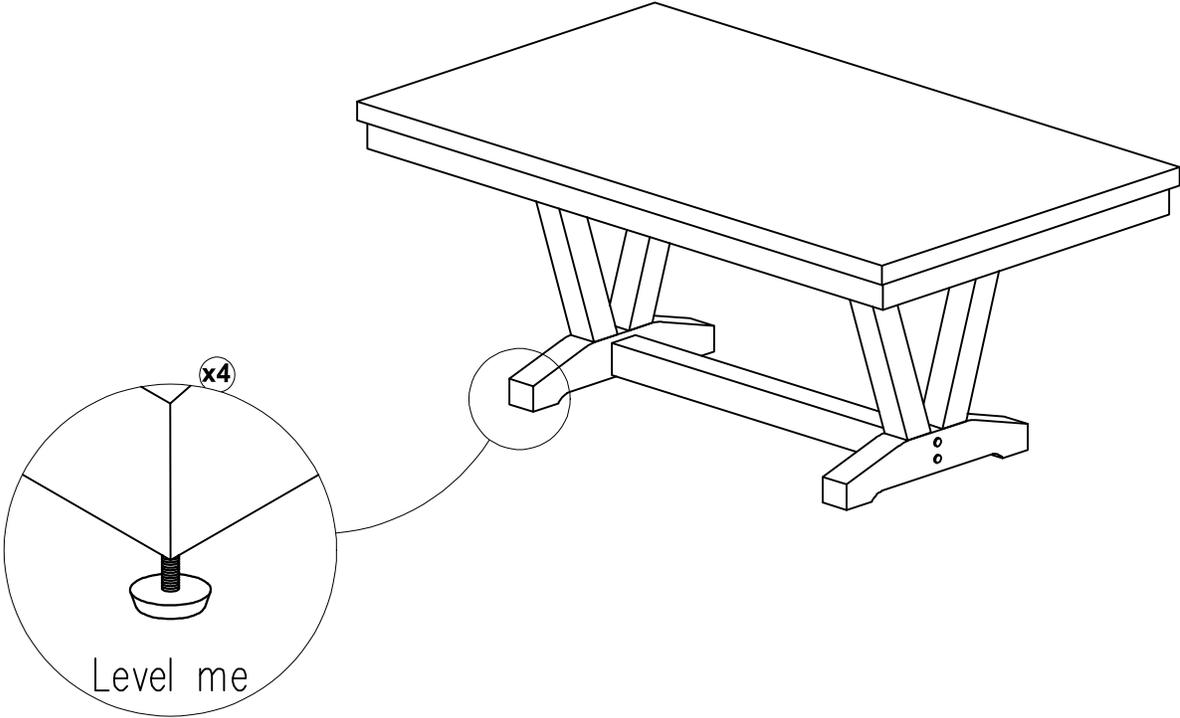

NOTE : Periodically check to ensure that all connectors (bolt, screws, etc.) are tight.