



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

182646
COUNTER STOOL

ITEM : 182646

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!

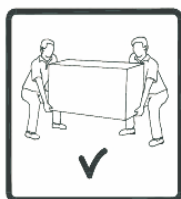



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.







  
ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

	PART NAME	FIGURE	QTY
A	BACK		1PC
B	SEAT		1PC
C	BACK FRAME		1PC
D	FRONT FRAME		1PC

HARDWARE IDENTIFICATION

	HARDWARE NAME	FIGURE	QTY
1	BOLTS (M6 x 30 MM - BLK)		4PCS
2	BOLTS (M6 x 20 MM - BLK)		4PCS
3	BOLTS (M6 x 25 MM - BLK)		4PCS
4	ALLEN WRENCH (M5 - BLK)		1PC
5	ALLEN WRENCH (M4 - BLK)		1PC


NOTE:

Quantities shown are for one chair.


ITEM :182646
ASSEMBLY INSTRUCTIONS




STEP1

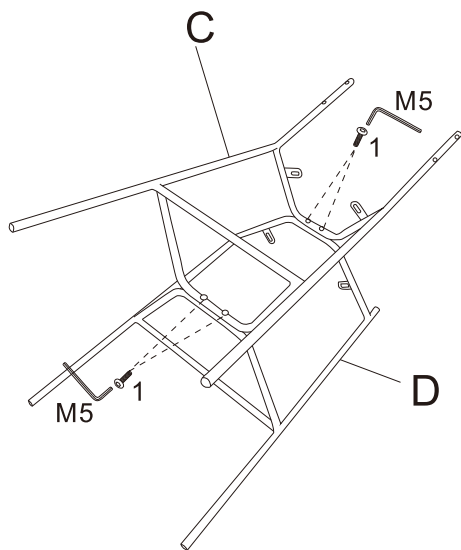


STEP2

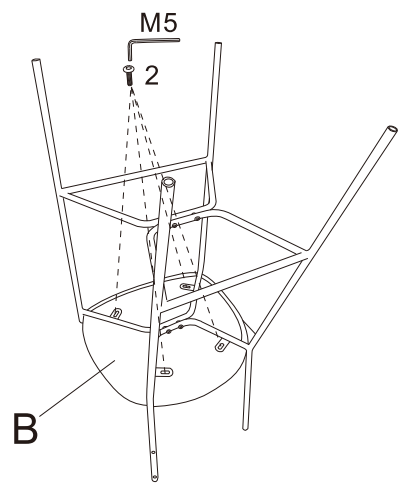


STEP3

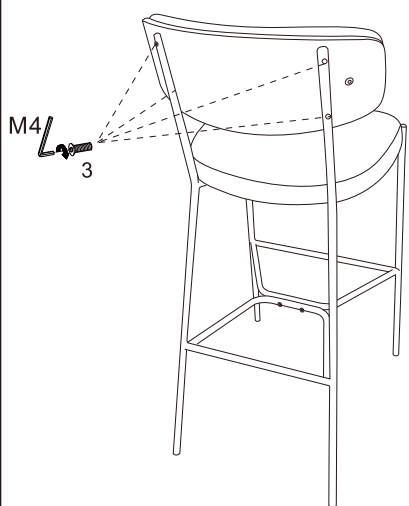

STEP4

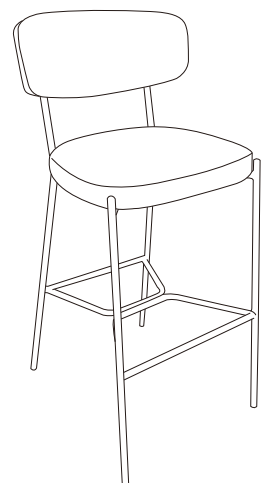

ITEM : 182646
ASSEMBLY INSTRUCTIONS

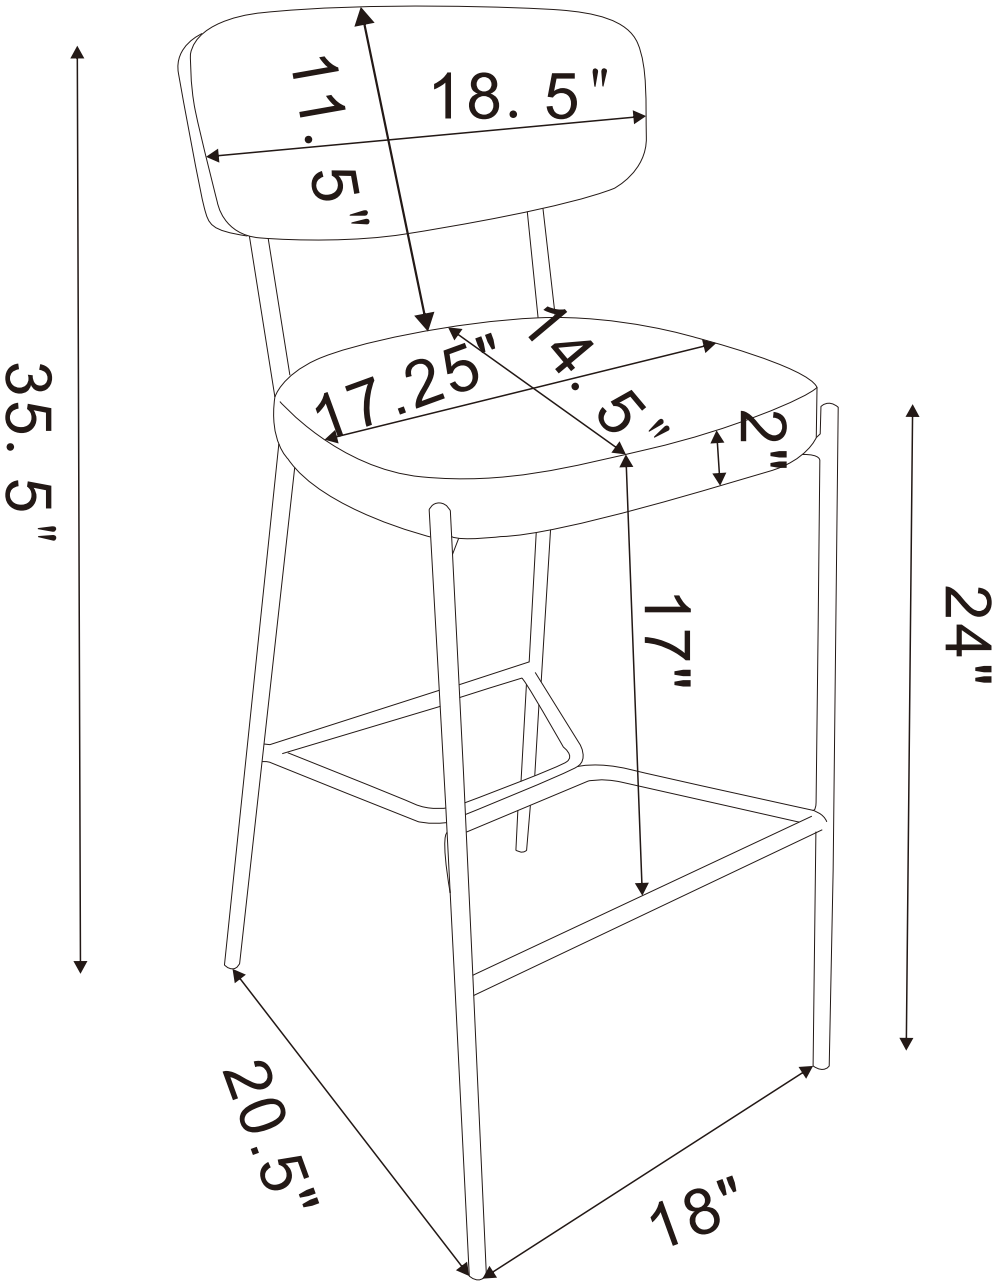

Note:Dimension tolerance \pm 5%