WINNERS ONLY ® Assembly Instructions AP300S 50" SOFA TABLE

Thank you for purchasing this quality product.Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment.

COMPONENT LIST:

HARDWARE LIST:

PART NO	FIGURE	DESCRIPTION	QTY	PART NO	FIGURE	DESCRIPTION	QTY
AP300S-01	Ì i o O (j	Hardware Bag	1 pce	1	() manual m Manual manual m	Hex Bolt	8 pcs
AP300S-13		able Top	1 pce	2	(January)	Pan Head Screw	4 pcs
AP300S-07		Legs	4 pcs	3	Ø	Lock Washer	8 pcs
				4	\bigcirc	Flat Washer	8 pcs
AP300S-22		Fixed Shelf	1 pce	5	5	Wrench	1 pce

This product will take 15-20 minutes to assemble.

Reminders

1.Use only the hardware supplied.

2. Once the product is assemble, level and tighten all the bolts.


3.Do not over-tighten bolts.

4. This item may require periodic tightening

NOTE:

1.Two or more people are needed for assembly

2 please keep all hardware parts out of the reach of children.

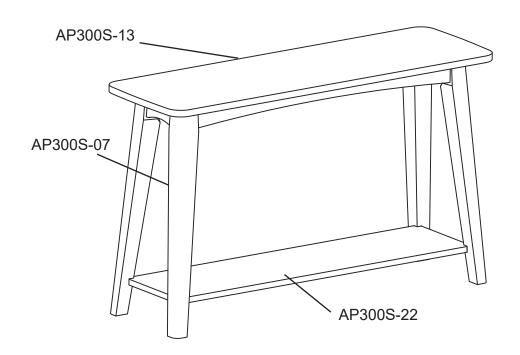


WINNERS ONLY © Assembly Instructions **AP300S 50" SOFA TABLE**

ASSEMBLY:

STEP 1

- 1.1-Turn the Table Top upside down on a protective surface such as carpet or other soft material.
- 1.2-Insert the three legs into the corner of the apron by insert the Flat Washer, Lock Washer and Hex Bolt into pre-drilled holes on the corner block and tighten it using Wrench.
- 1.3-Insert the Fixed Shelf into the leg assembly, then install the fourth leg using Flat Washer, Lock Washer and Hex Bolt into pre-drilled holes on the corner block, tighten using Wrench .
- 1.4-Insert the Pan Head Screw into pre-drilled holes on the corner block of Fixed Shelf and tighten using the Screw driver (Not provided).

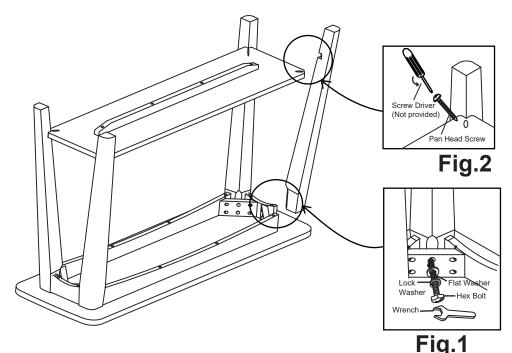

STEP 2

- 2.1- Turn table to upright position.
- 2.2- Once end table is fully balance fully tighten all bolts.

