


Setup Guide

Téléviseur
Televisor
Television

5-037-727-11(1)


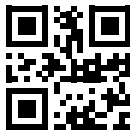


US	Setup Guide
FR	Manuel de configuration
ES	Guía de configuración
PT	Guia de Configuração



Sony Customer Support
U.S.A.:
<https://www.sony.com/tvsupport>
Canada:
<https://www.sony.ca/support>
United States
1.800.222.SONY
Please Do Not Return the Product to the Store
Service à la clientèle Sony
Canada :
<https://www.sony.ca/support>
États-Unis :
<https://www.sony.com/tvsupport>
Canada
1.877.899.SONY
Ne retournez pas le produit au magasin

Lea este manual antes de usar el producto
Centro de Asistencia de Sony
<https://esupport.sony.com/ES/LA/>
Llame al número telefónico que aparece en su póliza de garantía.
Por favor no devuelva el producto a la tienda donde adquirió el producto.



BRAVIA
KD-50X85K / 43X85K

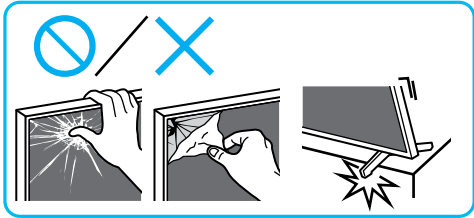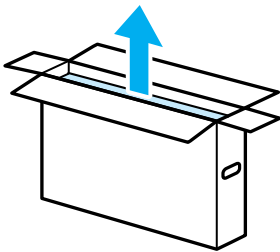


1

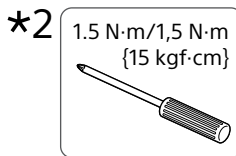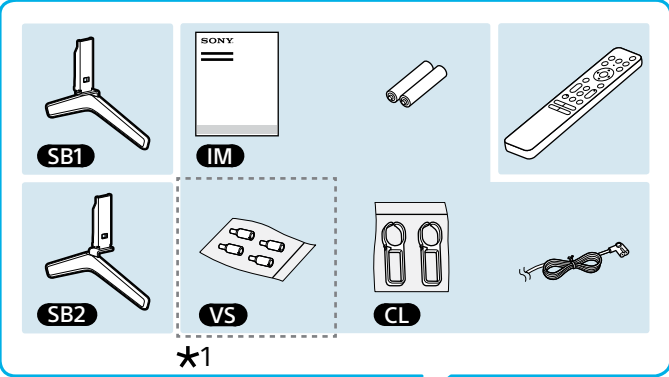


2

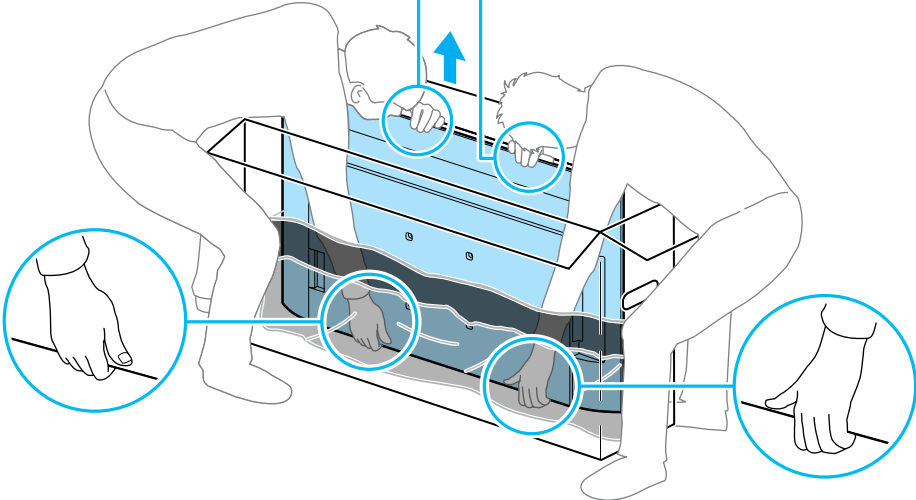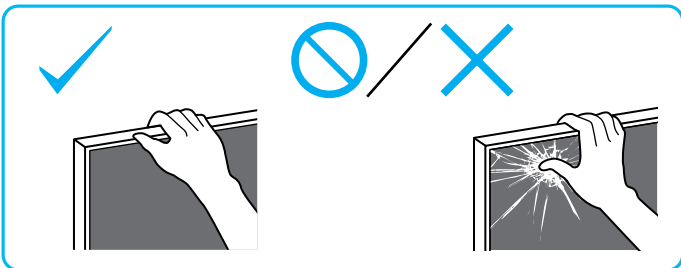


3

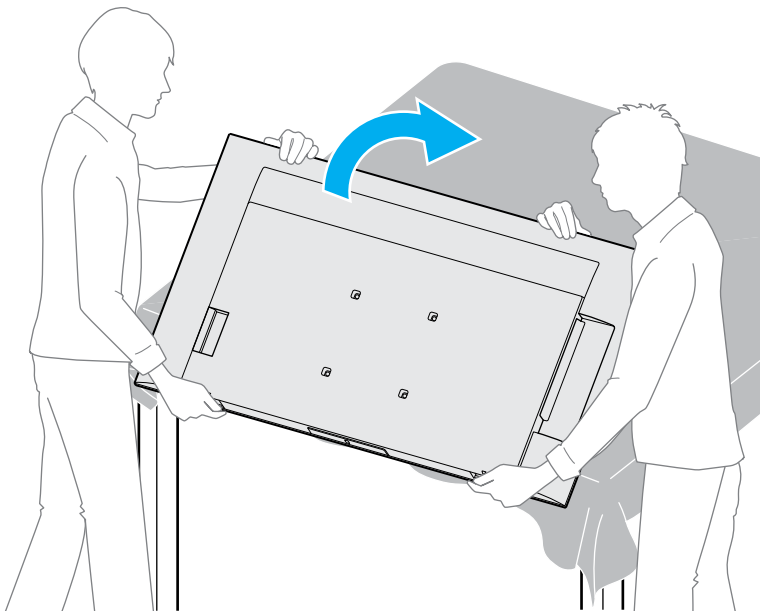


4

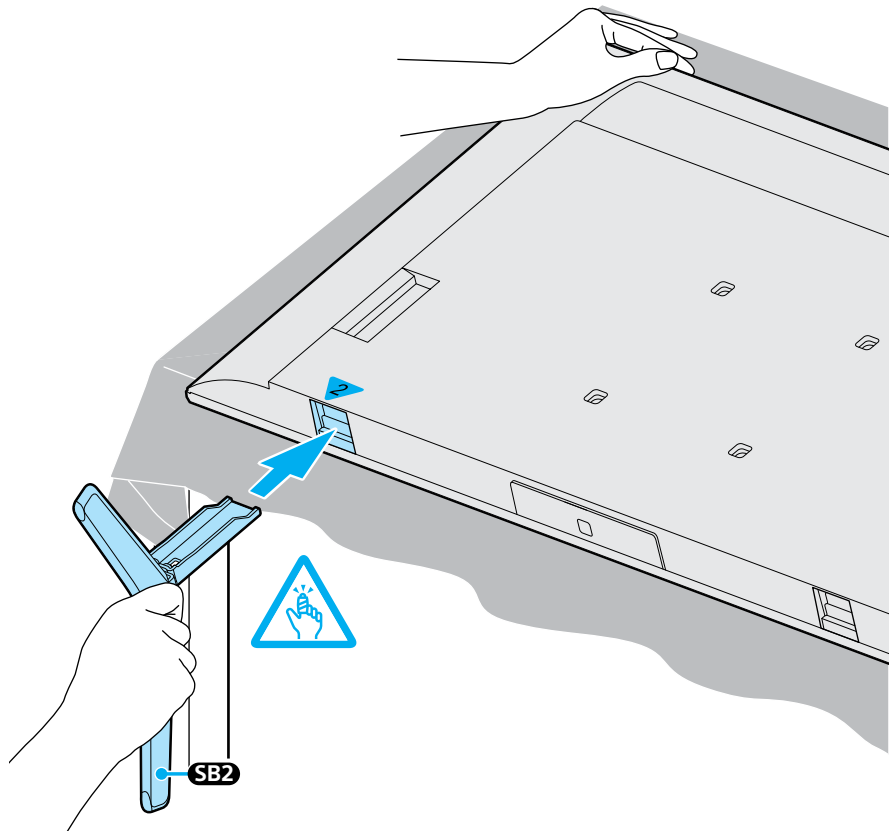

5

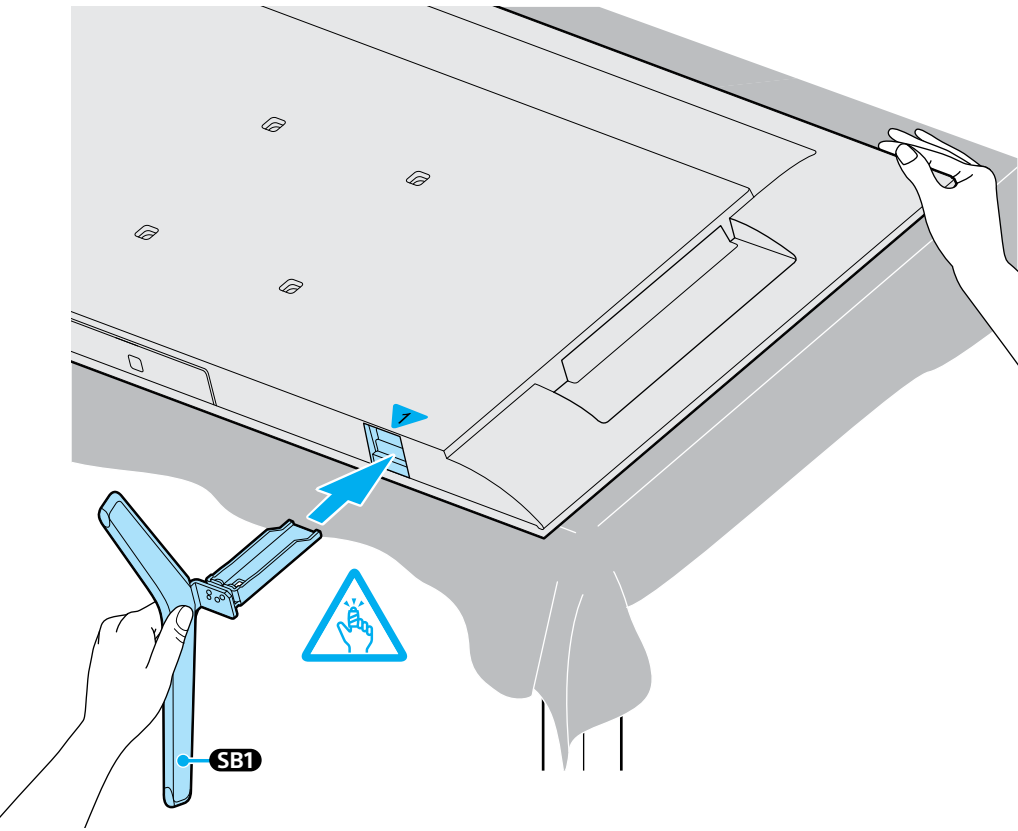

6

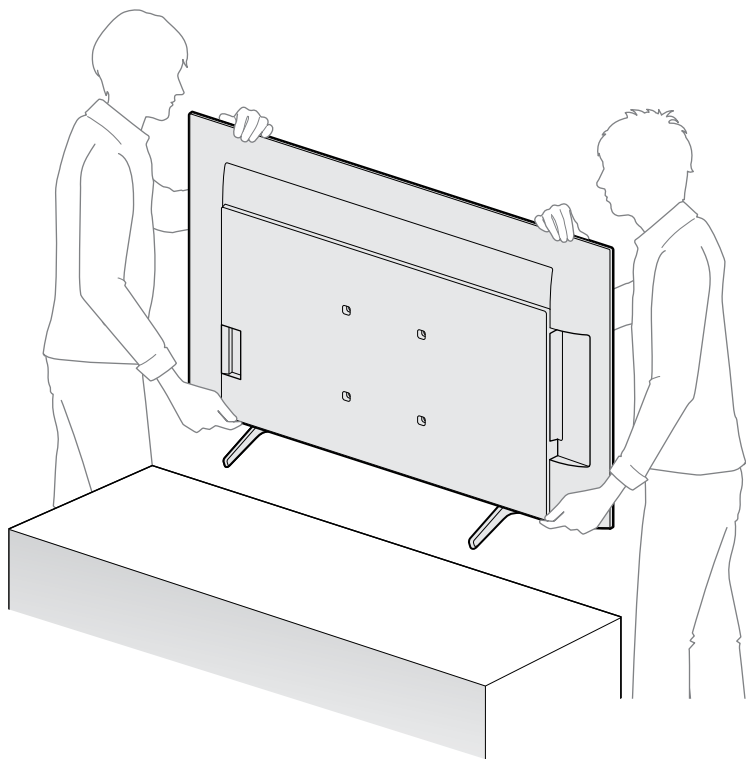


★1 Refer Reference Guide / Reportez-vous au Manuel de référence / Consulte la Guía de referencia / Consulte o manual de instruções


★2 Only for limited region/country/model. / Uniquement pour certaines régions/pays/modèles. / Solo para regiones/países/modelos limitados. / Exclusivo para regiões/países/modelos especificados.




7

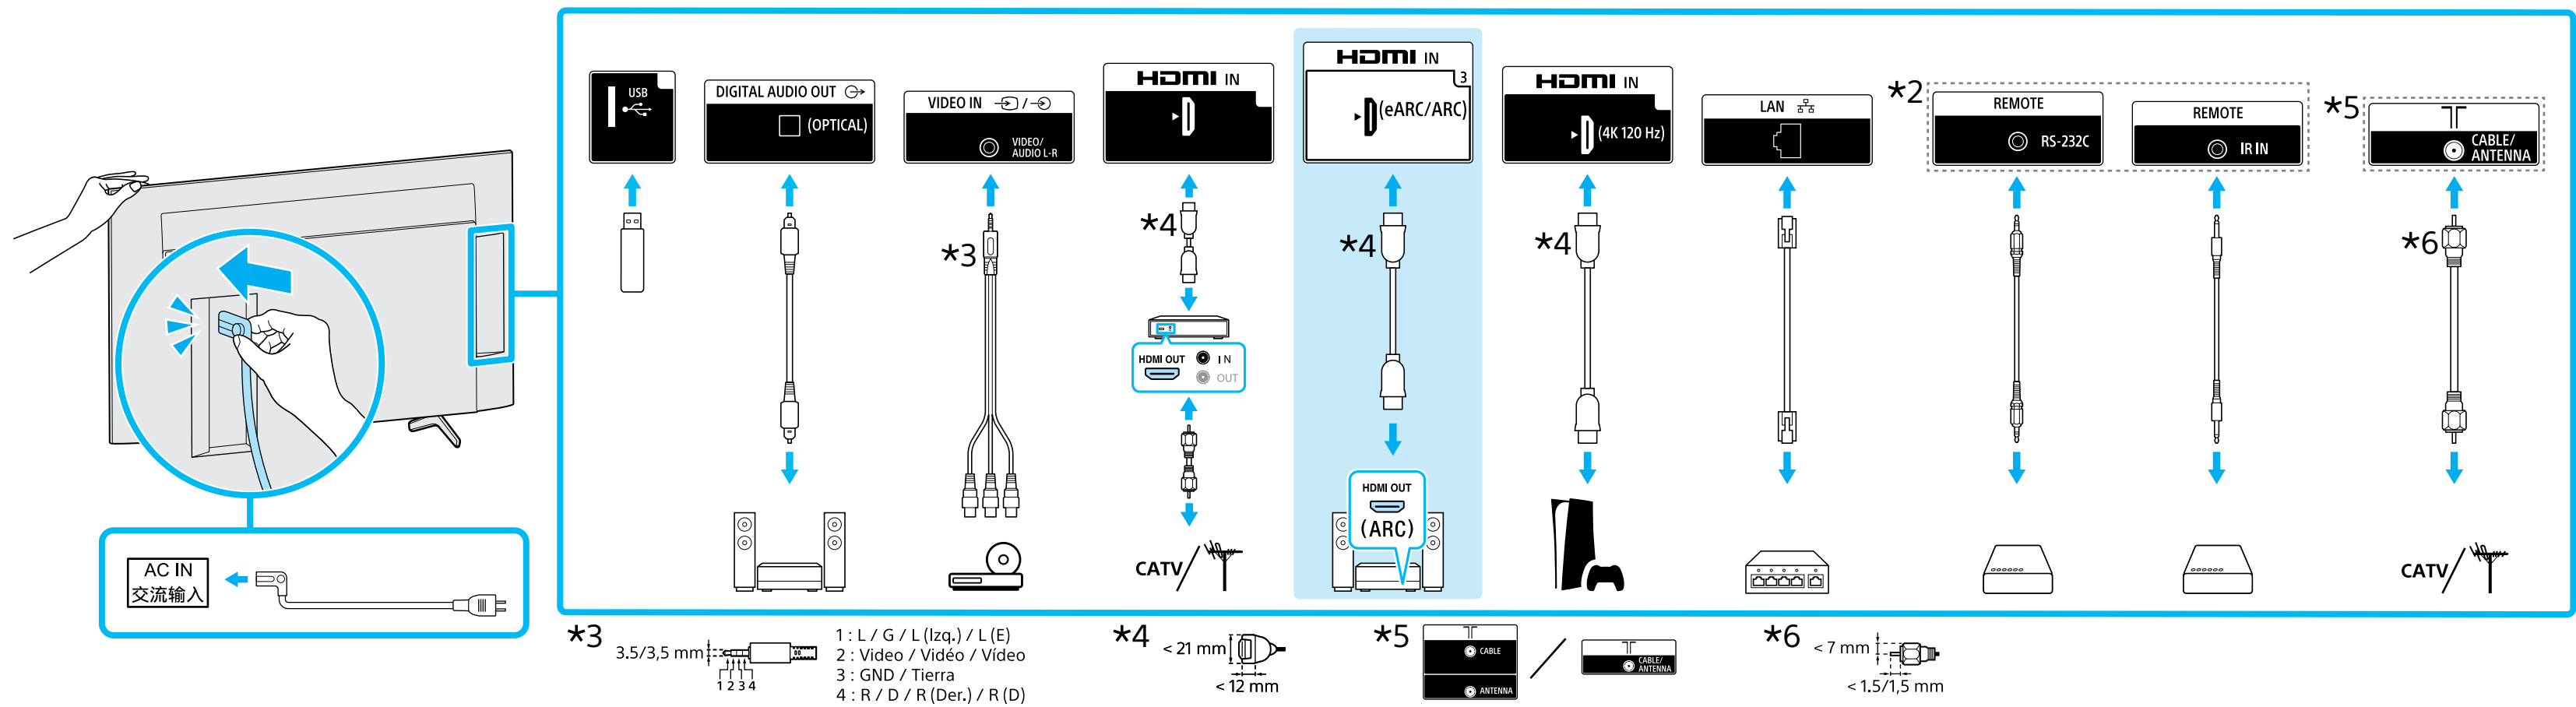





8

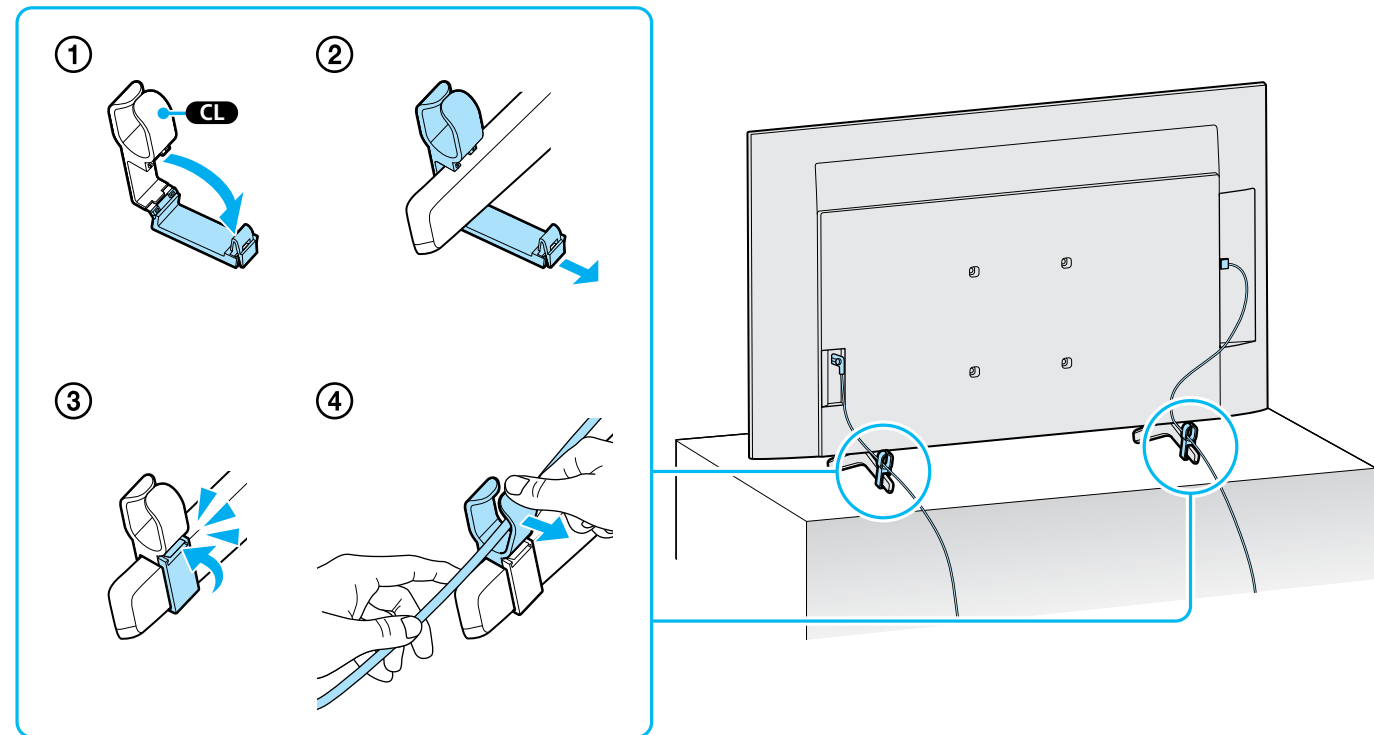

9

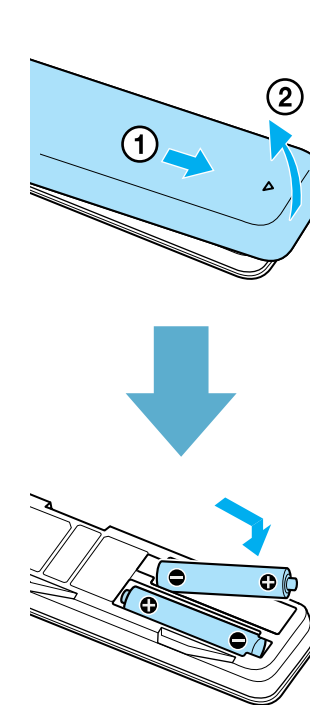

10

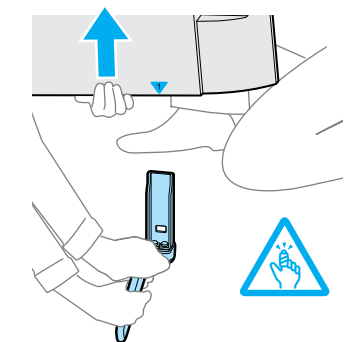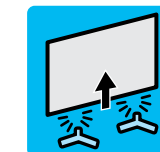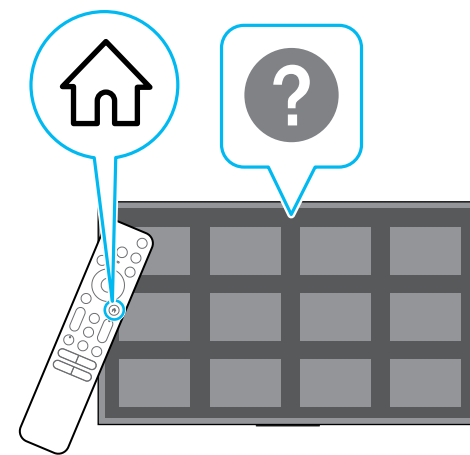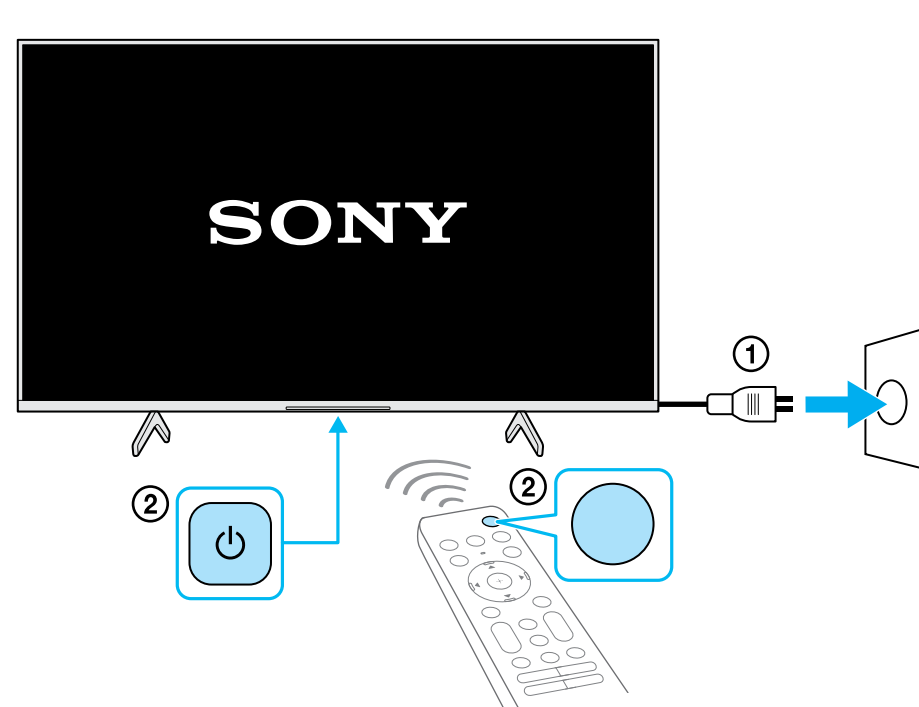

<https://www.sony.com/tvsupport>



<https://www.sony.ca/support>



<https://esupport.sony.com/ES/LA/>