

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108482 Side Chair

REVISION 0: 01/03/2024

PAGE 1 OF 6



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	BACK FRAME		1PC
В	FRONT LEG FRAME		1PC
С	LEFT SIDE RAIL	(Cara)	1PC
D	RIGHT SIDE RAIL		1PC
E	LEFT STRETCHER		1PC
F	RIGHT STRETCHER		1PC
G	SUPPORT BAR		2PCS
н	SEAT CUSHION		1PC

NOTE:

Quantities shown are for one chair.

Phillips head screw driver is required in the assembly process; However, manufacturer not provide this item.



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M5 x 65MM - BLK)		1PC
2	BOLT (M8 x 50MM - BLK)		4PCS
3	LOCK WASHER (5/16" - BLK)		4PCS
4	LONG PAN HEAD SCREW (#8 x 1 1/2" - BLK)	<ammunit(†< td=""><td>4PCS</td></ammunit(†<>	4PCS
5	SHORT PAN HEAD SCREW (#8 x 1 1/4" - BLK)	<ammuteling< td=""><td>4PCS</td></ammuteling<>	4PCS
6	L BRACKET (ZY 447 - BLK)		3PCS
7	FLAT HEAD SCREW (M3.5 x 16MM- RBW)	<i>4000(\$)</i>	6PCS

NOTE:


Quantities shown are for one chair.

Phillips head screw driver is required in the assembly process; However, manufacturer not provide this item.


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

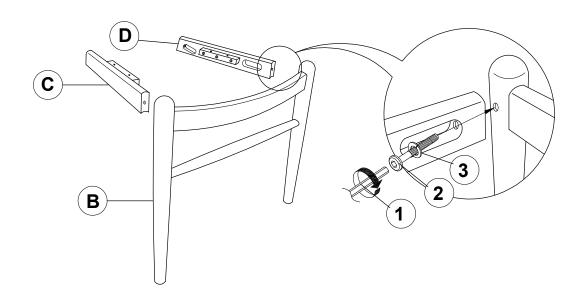


STEP 2

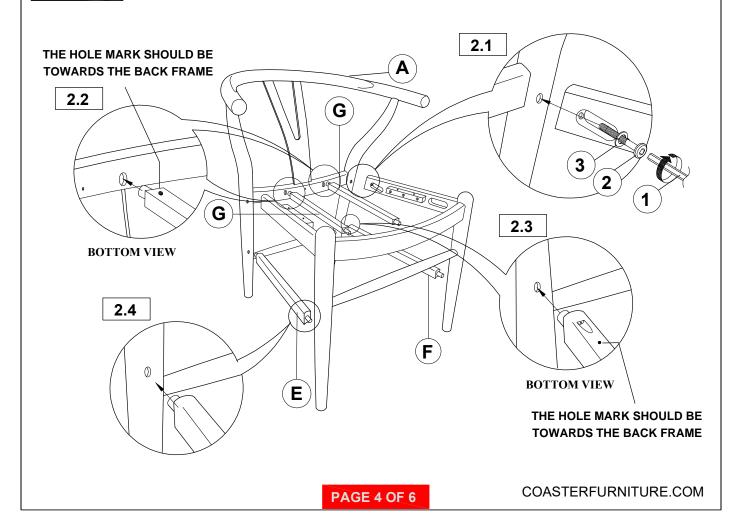


COASTER

ASSEMBLY INSTRUCTIONS

STEP 3

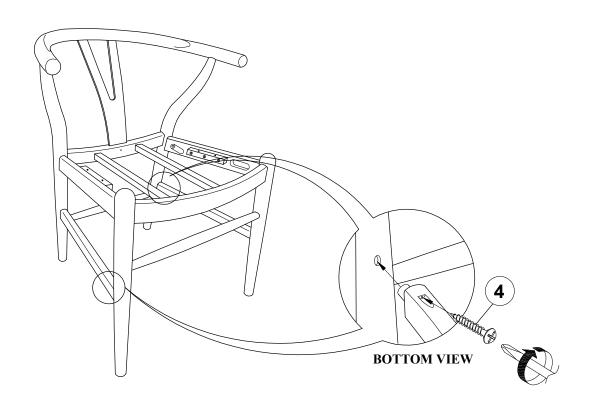

STEP 4

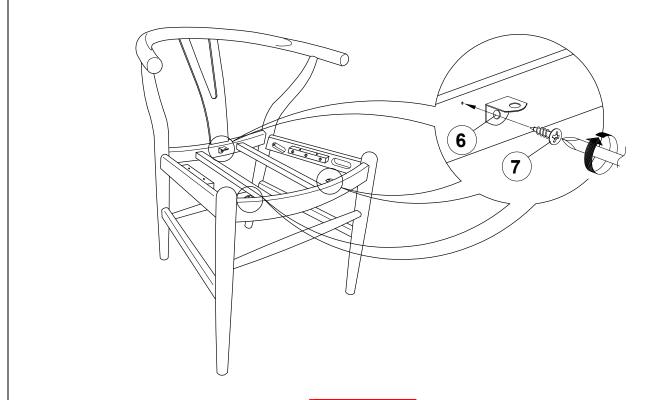


PAGE 5 OF 6


ASSEMBLY INSTRUCTIONS


COASTER

STEP 5

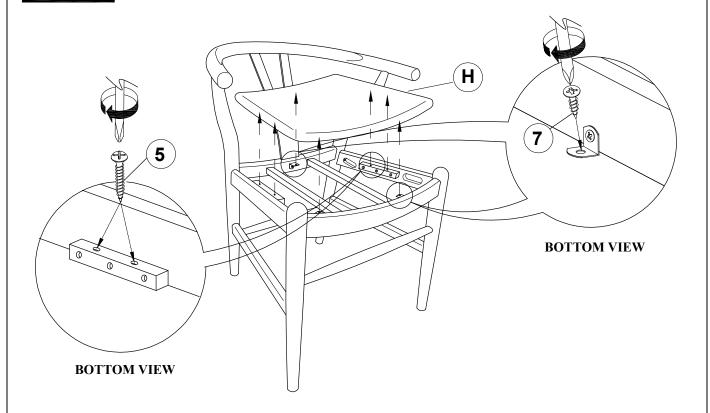


 STEP 6 COMPLETE

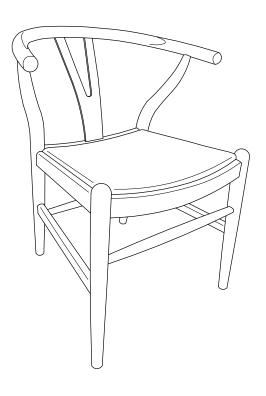





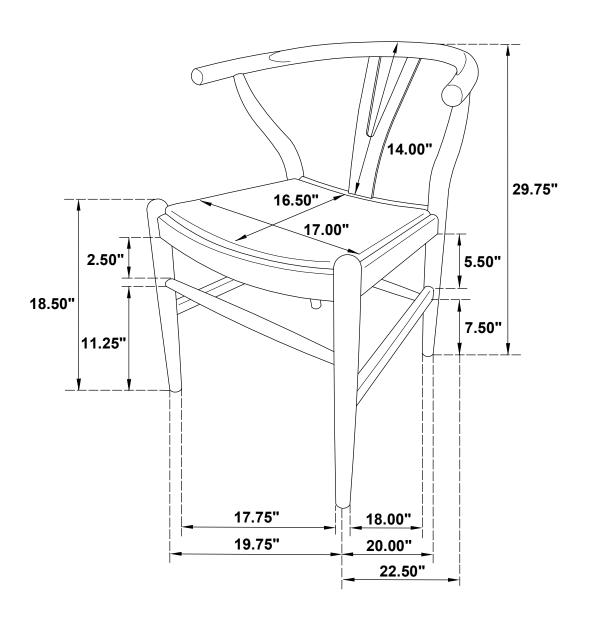

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

121251 Dining Table

REVISION 0 : 11/14/2023

PAGE 1 OF 5



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A TOP 1PC

B LEG 4PCS

HARDWARE IDENTIFICATION


1	BOLT (M8 X 95mm - BLK)	⊕	8PCS
2	ALLEN WRENCH (M5 x 60mm - BLK)		1PC
3	LOCK WASHER (M8 x 14mm - BLK)		8PCS
4	FLAT WASHER (M8 x 22mm - BLK)		8PCS

STEP 2



COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS STEP 1

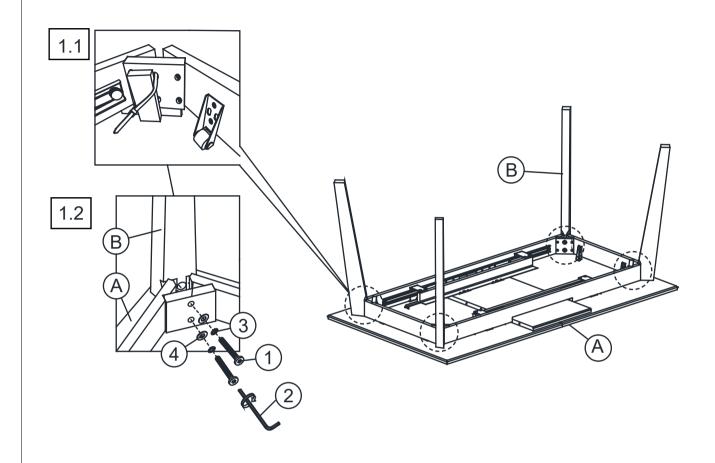


2.1 Unlock Lock


PAGE 3 OF 5



ASSEMBLY INSTRUCTIONS STEP 3

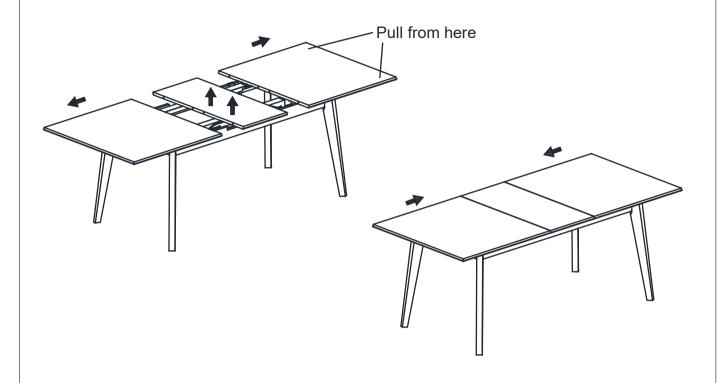


STEP 4

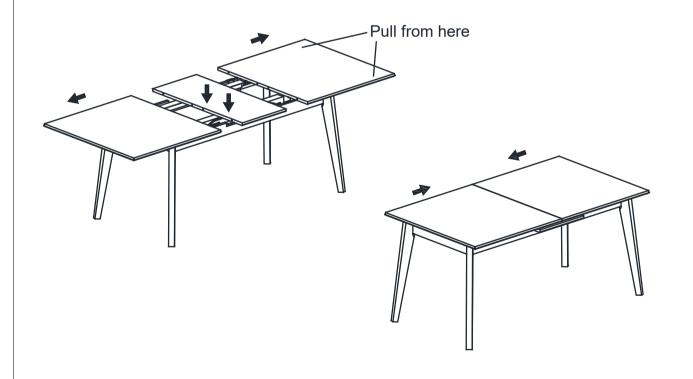




ASSEMBLY INSTRUCTIONS STEP 5 COMPLETE

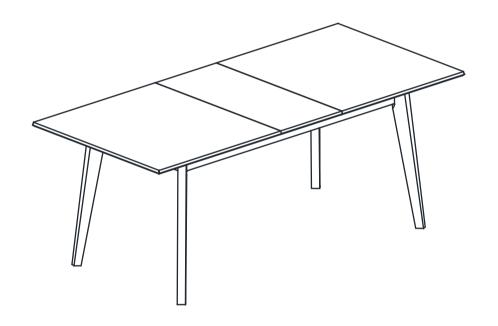





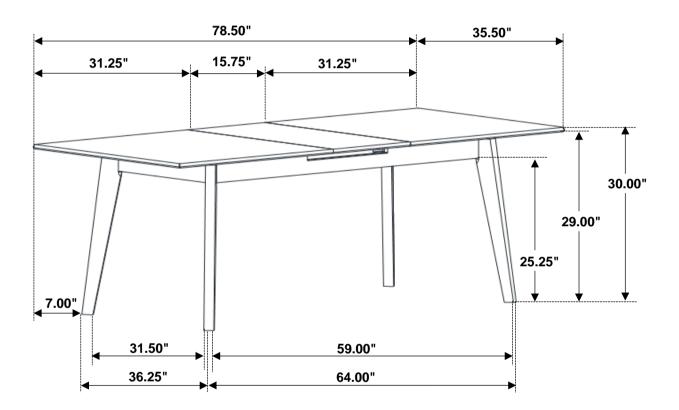

Note: Dimension tolerance ± 5%