



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

107041
Dining Table

REVISION 0 : 01/14/2016
REVISION 1 : 07/25/2019

PAGE 1 OF 3

COASTERFURNITURE.COM

ITEM:107041



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


 
- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

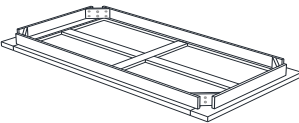A	TOP		1PC
B	LEG		4PCS

 HARDWARE IDENTIFICATION


1	BOLT (M8 x 70mm - BLK)		8PCS
2	LOCK WASHER (M8 - BLK)		8PCS
3	FLAT WASHER (M8 - BLK)		8PCS
4	ALLEN WRENCH (M5 x 60MM- BLK)		1PC

ITEM: **107041**




ASSEMBLY INSTRUCTIONS


STEP 1

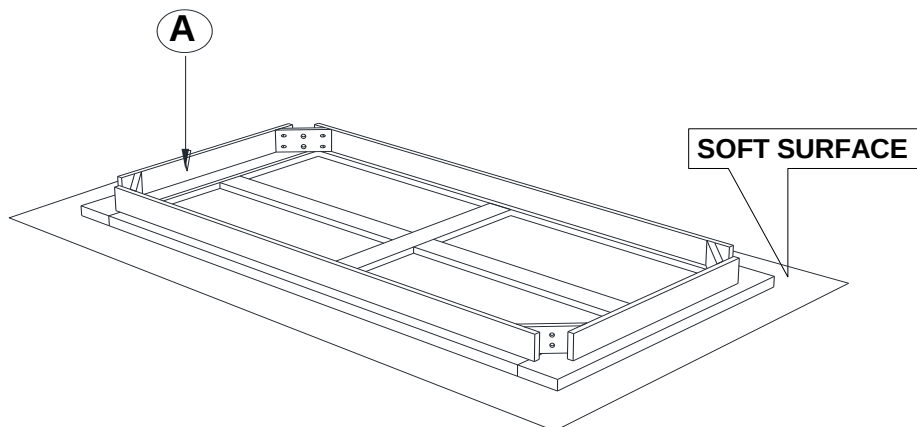


STEP 2

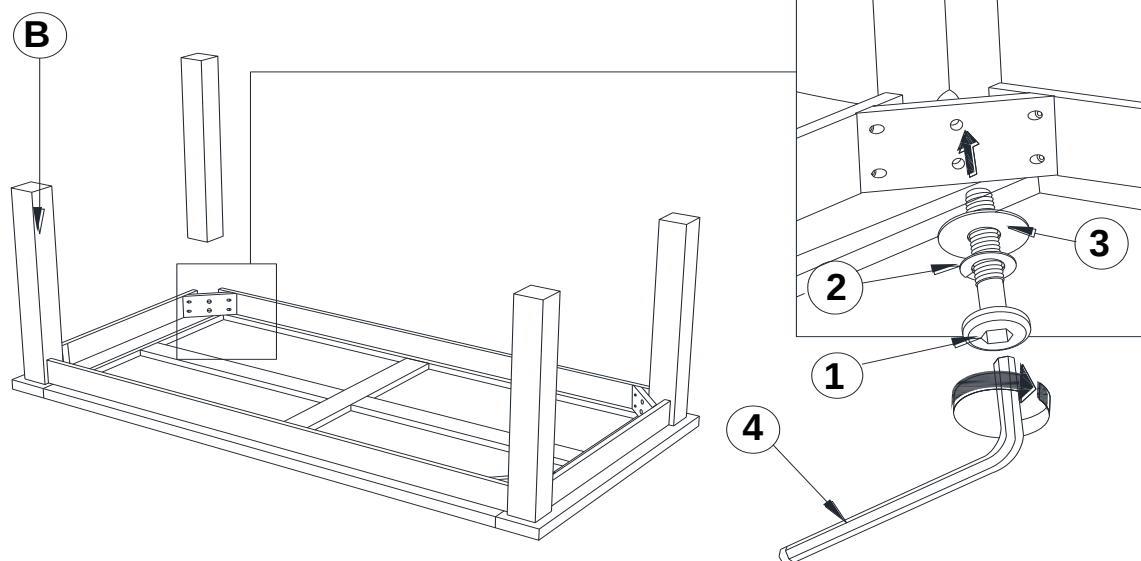

STEP 3 COMPLETE

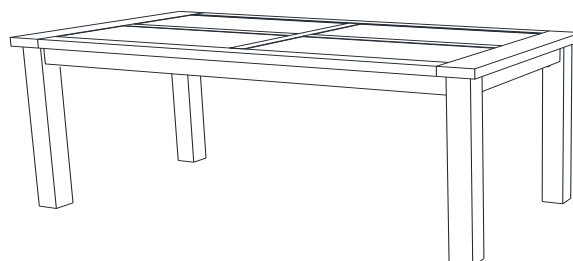

ITEM: **107041**

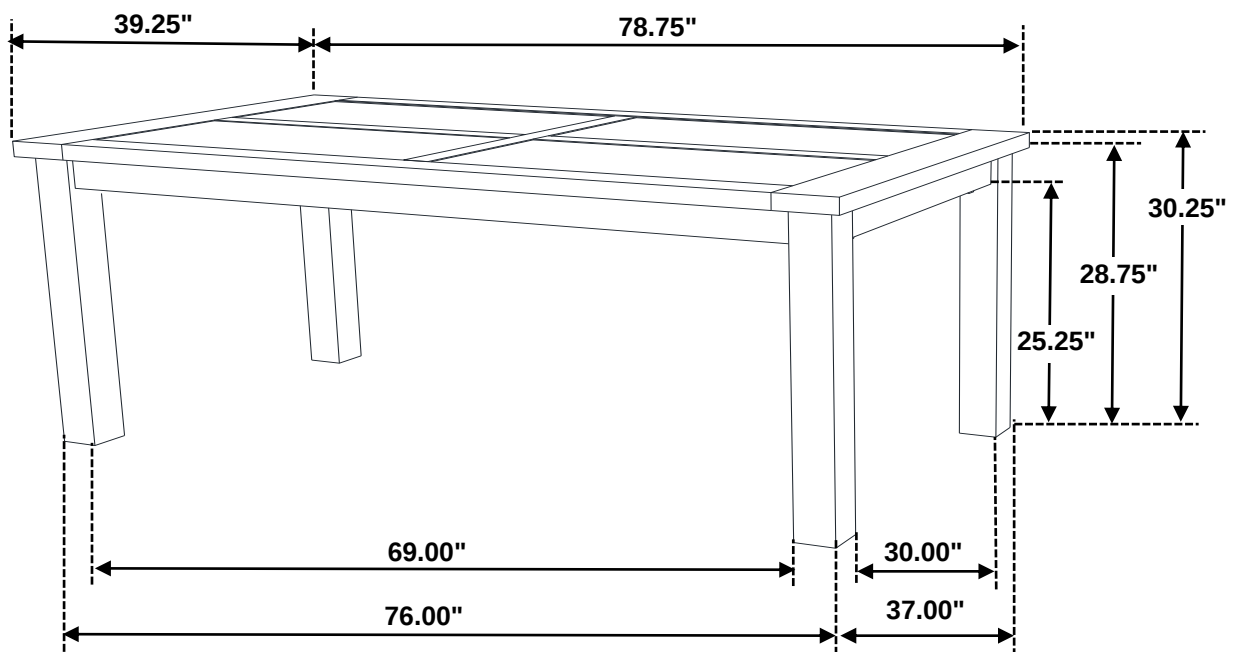

Note : Dimension tolerance $\pm$ 5%