

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

115490 Dining Table

REVISION 0: 04/28/2022

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 115490 (B1-B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- Remove hardware from box and sort by size.
 Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

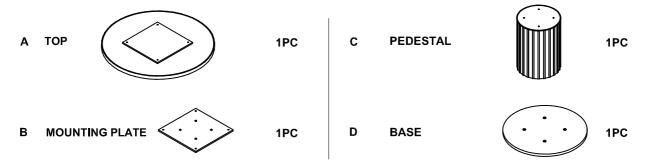

HARDWARE IDENTIFICATION


Z-B1 (BOX1) - HARDWARE PACK IS LOCATED IN 115490 (B1)

1	ALLEN WRENCH (5MM - BLK)	1PC	3	LOCK WASHER (Ø5/16"-BLK)	©	12PCS
2	ALLEN BOLT (Ø5/16 x 1-1/2" - BLK)	12PCS	4	FLAT WASHER (Ø5/16" x 19MM-BLK)		12PCS


ITEM: 115490 (B1-B2)

ASSEMBLY INSTRUCTIONS


STEP 1

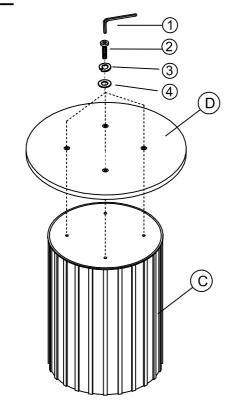


STEP 2

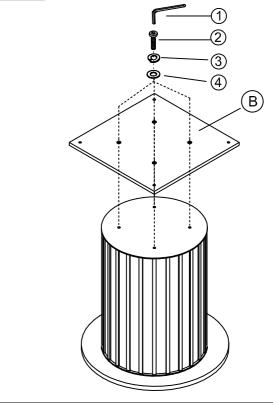

STEP 3

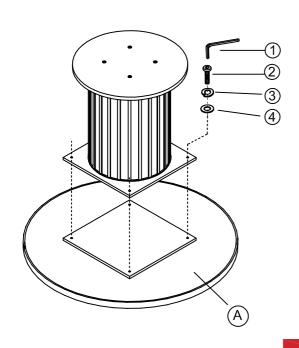

STEP 4
COMPLETE

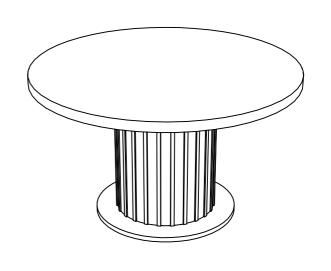




PAGE 3 OF 4

ITEM: **115490 (B1-B2)**



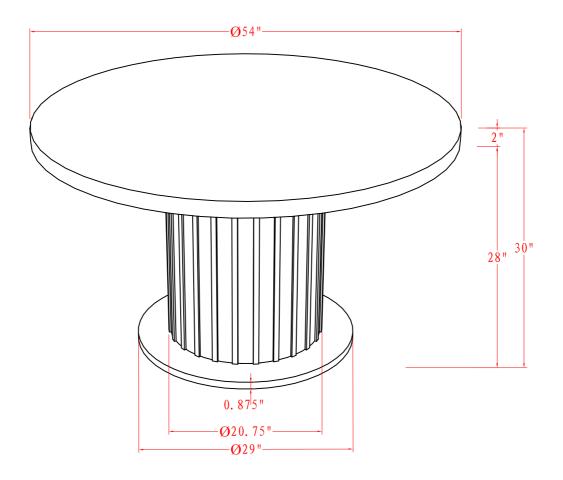

Note: Dimension tolerance ±5%