
 



 





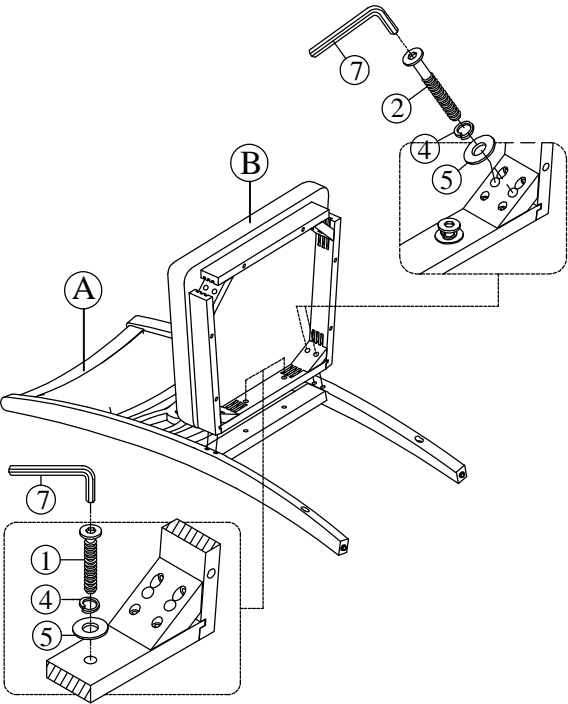
Assembly Instructions  
DINING SIDE CHAIR  
DAH305SPC & DAH505SPC & DAH705SPC

- Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.
1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
  2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
  3. Please do not over tighten screws or bolts.
  4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST FOR SIDE CHAIR				HARDWARE LIST PACKED INSIDE BOX			
No.	PART DESC	CODE.	Q'TY	No.	HARDWARE DESC	CODE.	Q'TY
A	Dining Side Chair w/ PU-Upholstered Back Frame	PDAH305SPCBFR PDAH505SPCBFR PDAH705SPCBFR	1	1	 ALLEN BOLT (Ø1/4**1-5/8")	PDAH305SPCHW PDAH505SPCHW PDAH705SPCHW	2
B	Dining Side Chair w/ PU- Cushion w/ Seat Frame	PDAH305SPCBCS PDAH505SPCBCS PDAH705SPCBCS	1	2	 ALLEN BOLT (Ø1/4**3")		4
C	Dining Side Chair - Front L/R Legs (Set)	PDAH305SPCLEG PDAH505SPCLEG PDAH705SPCLEG	2	3	 Nut (Ø5/16")		4
D	Dining Side Chair - Side Stretcher L/R (Set)	PDAH305SPCSTR PDAH505SPCSTR PDAH705SPCSTR	2	4	 SPRING WASHER (Ø5/16")		10
				5	 FLAT WASHER (Ø5/16")		10
				6	 SCREWS/ VIS (#4*1-1/2")		4
				7	 ALLEN KEY (Ø1/8")		1
				8	 Wrench (Ø5/16")		1

 Only tighten all bolts when all bolts aligned with bolt inserts.

STEP:1



STEP:2

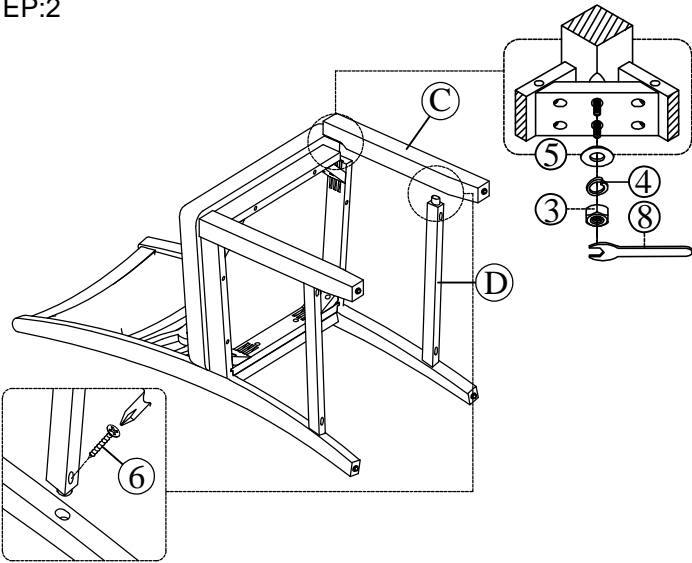

COMPLETED

