

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

108931
Dining Table

ITEM: **108931**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

25 MINUTES


PART IDENTIFICATION

A TOP

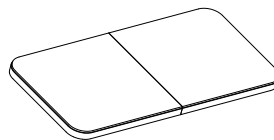

1PC

 B LEAF



1PC

C LEG



4PCS

 
D LEG SUPPORT



1PC

HARDWARE IDENTIFICATION

1 BOLT
(5/16" x 50mm - BLK)



8PCS

2 LOCK WASHER
(1.6 x 14mm - BLK)



8PCS

3 FLAT WASHER
(1 x 18mm - BLK)



8PCS

4 ALLEN WRENCH
(M5 x 70mm - BLK)



1PC

5 FLAT HEAD SCREW
(8 x 63mm - BLK)

 


4PCS


ITEM: **108931**

ASSEMBLY INSTRUCTIONS

STEP 1

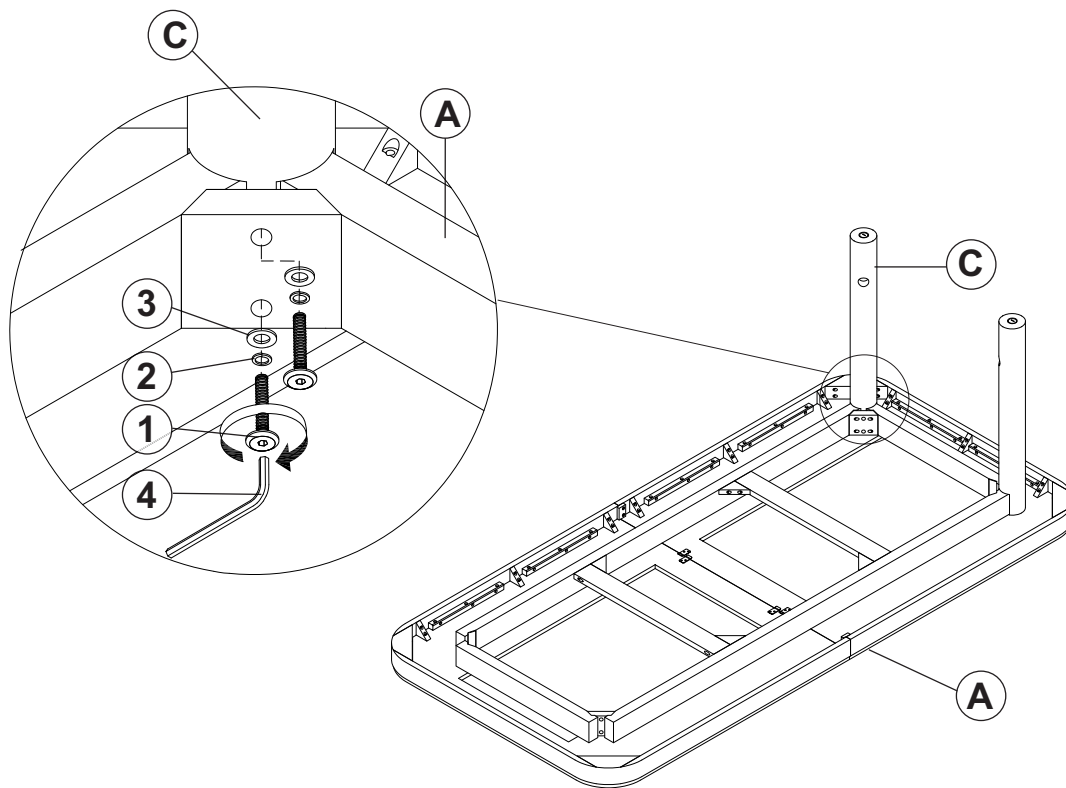

 STEP 2

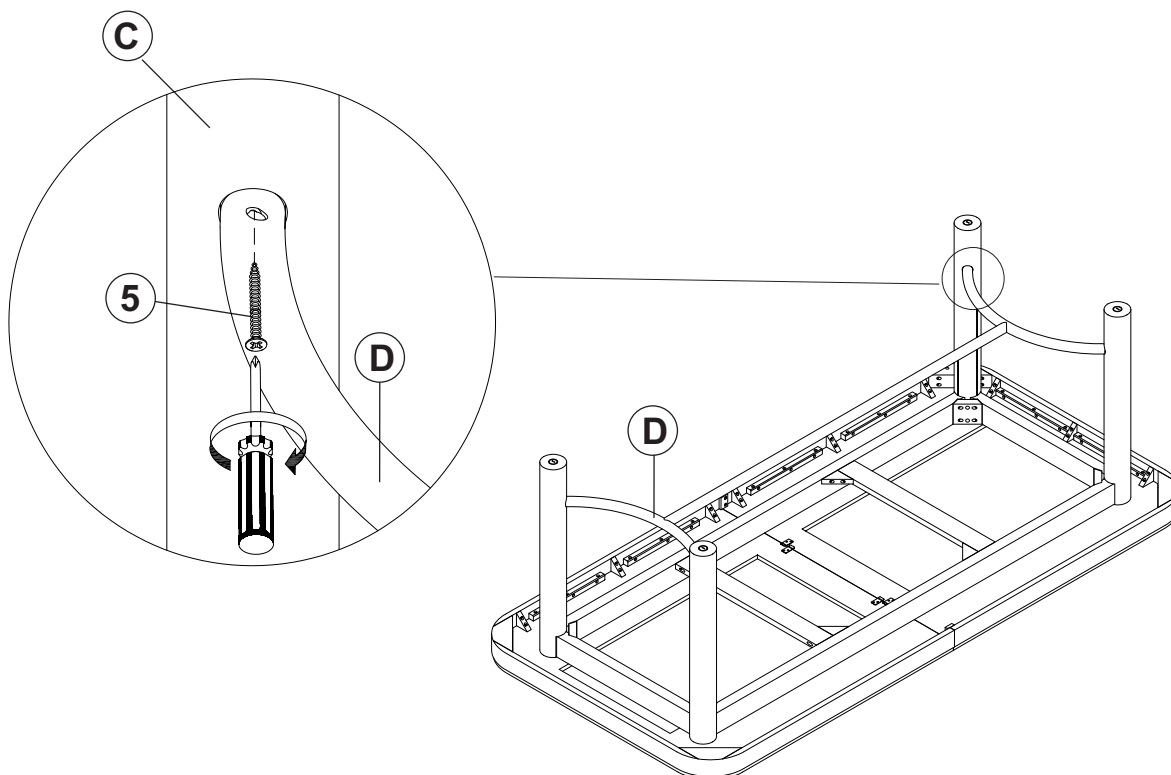

ITEM: **108931**

 
ASSEMBLY INSTRUCTIONS

STEP 3


ATTENTION !

Do not fully tighten bolts in this step.

COASTER
FINE FURNITURE

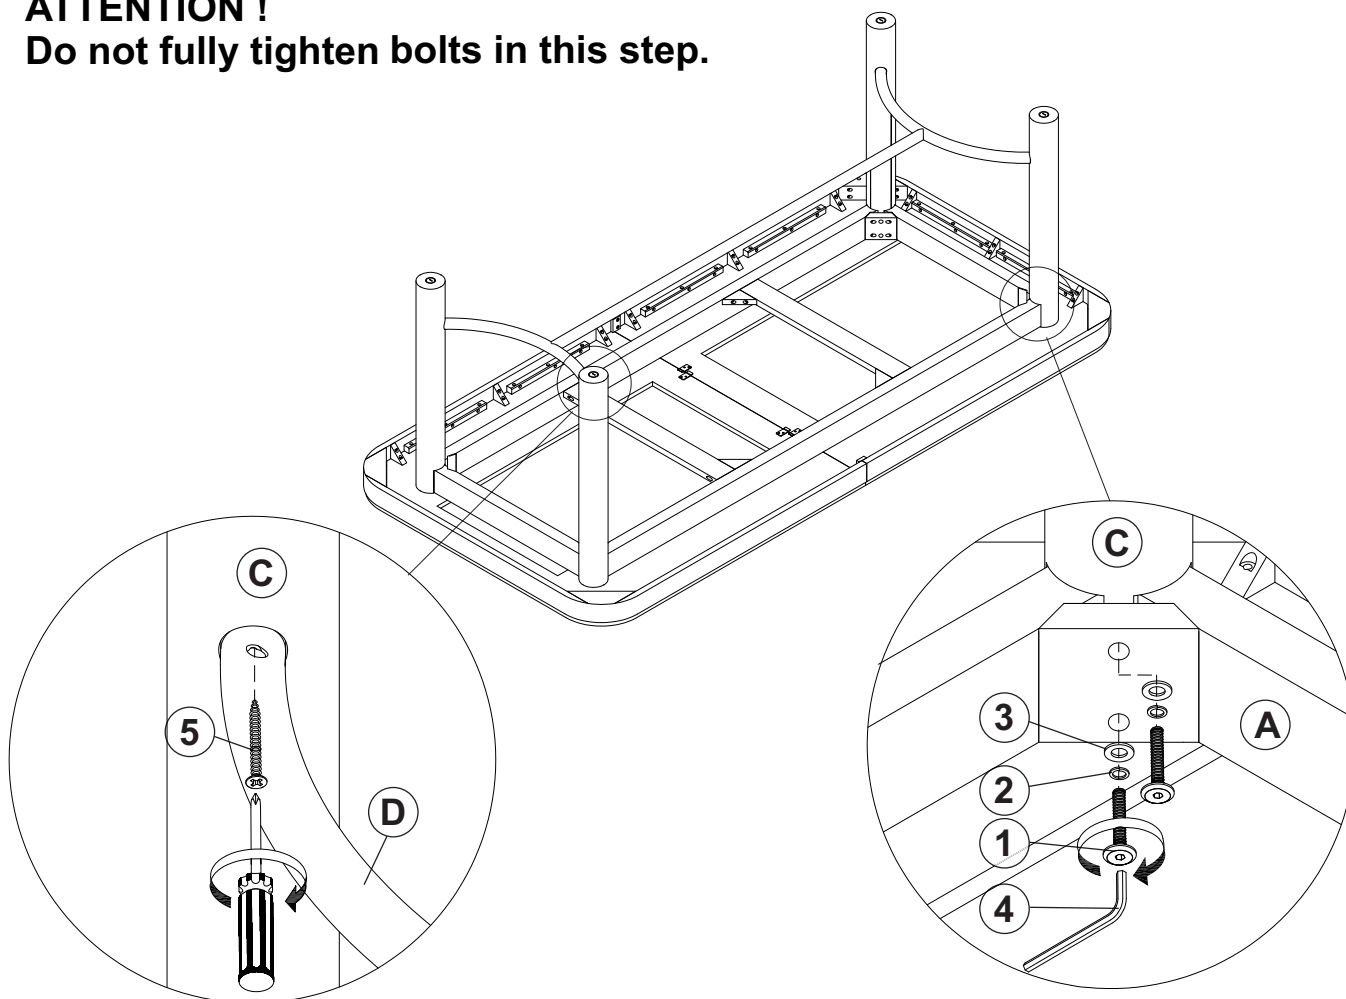


 
STEP 4

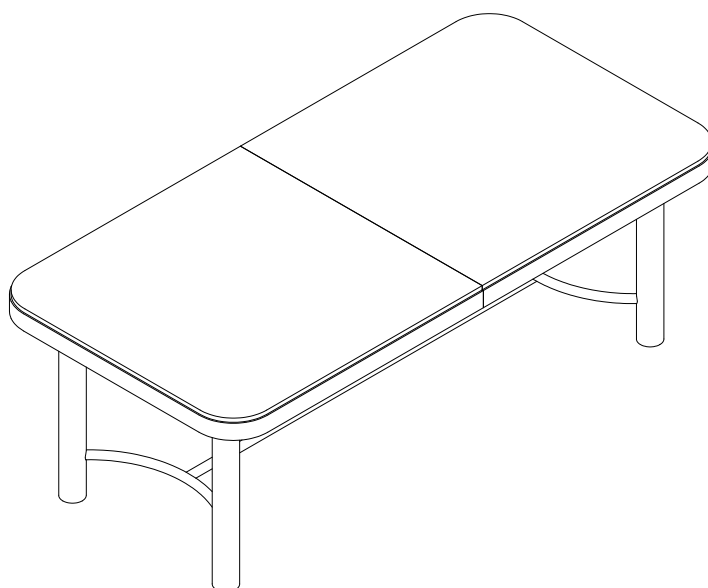


ITEM: **108931**

ASSEMBLY INSTRUCTIONS

  STEP 5

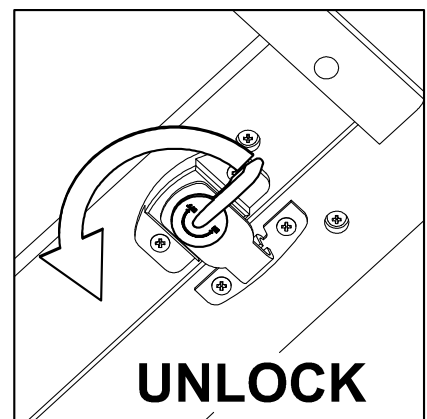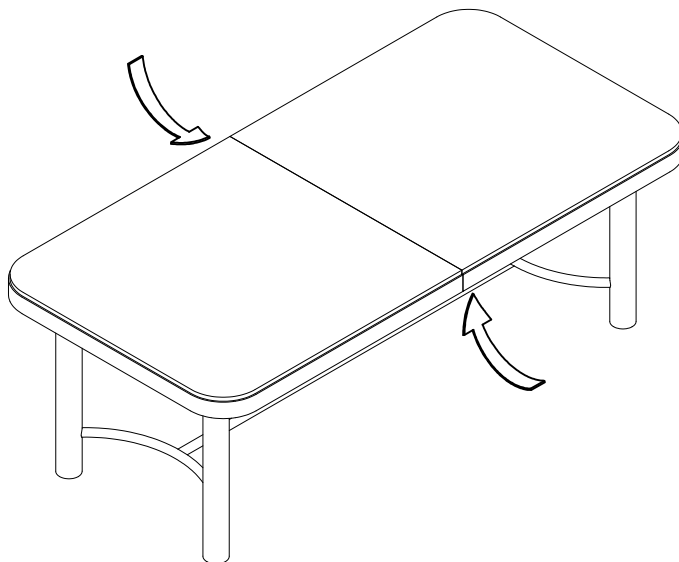

 STEP 6

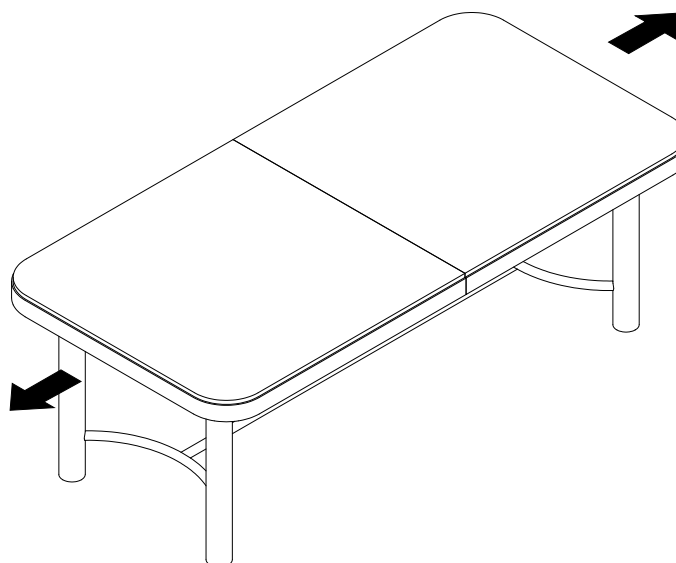


ITEM: **108931**


ASSEMBLY INSTRUCTIONS



 STEP 7

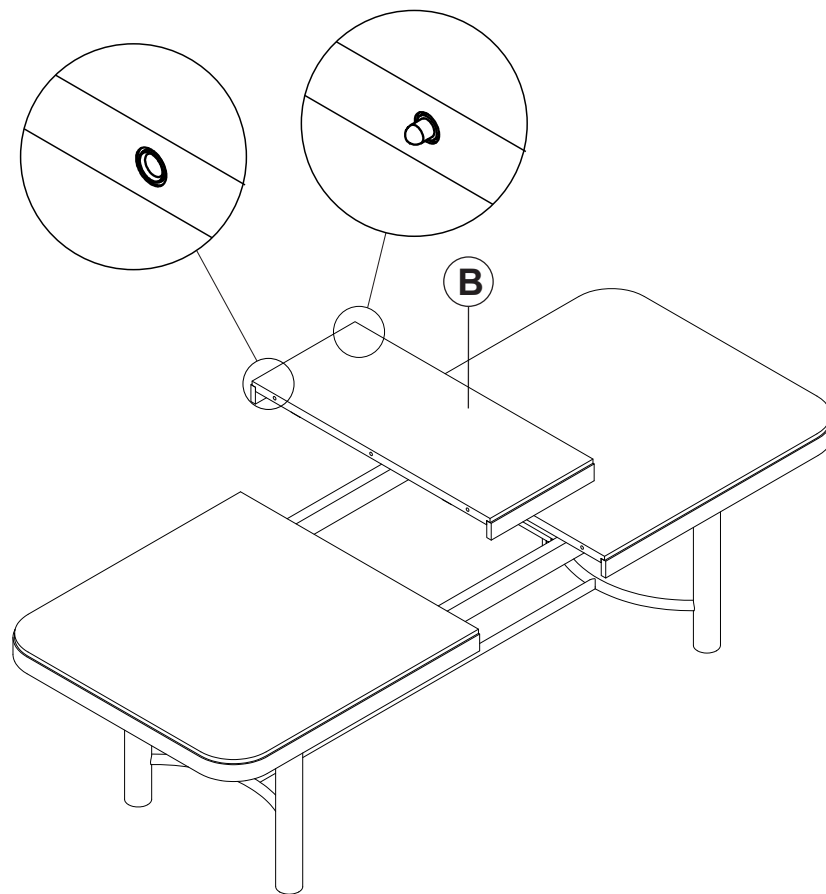


 
STEP 8

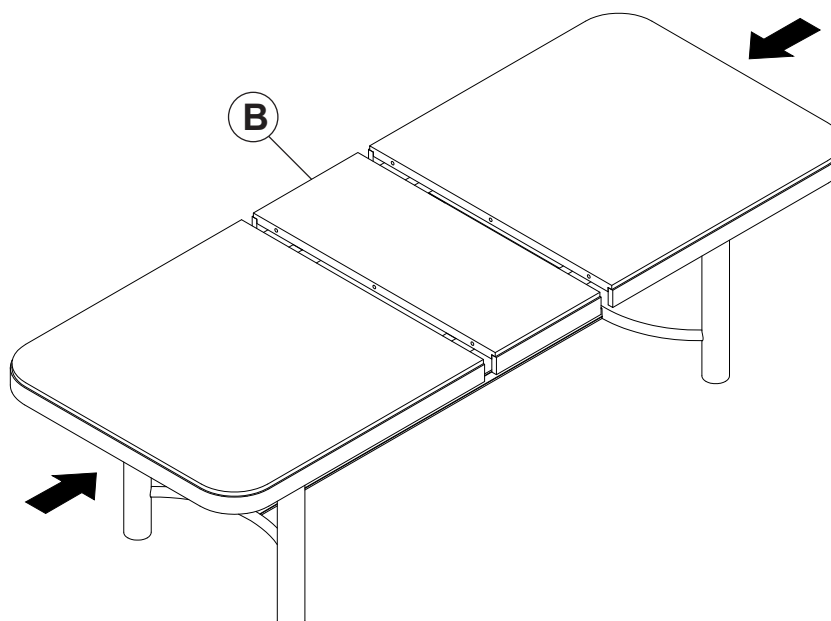



ITEM: **108931**

ASSEMBLY INSTRUCTIONS

  
STEP 9

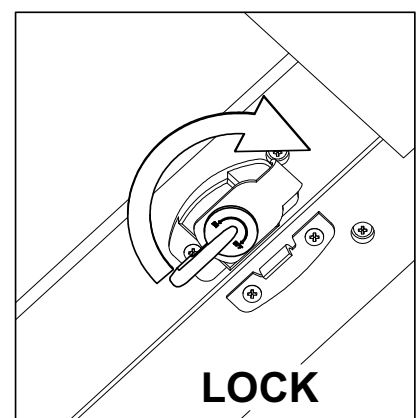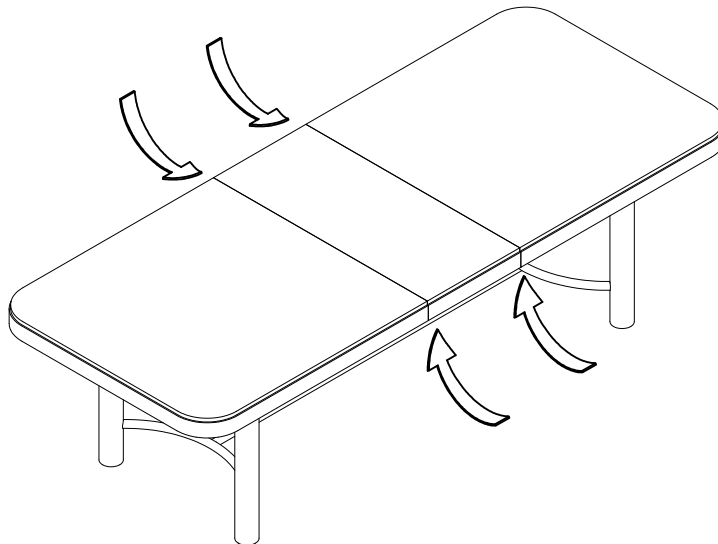

  STEP 10 COMPLETE

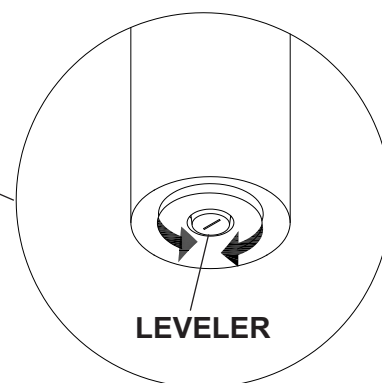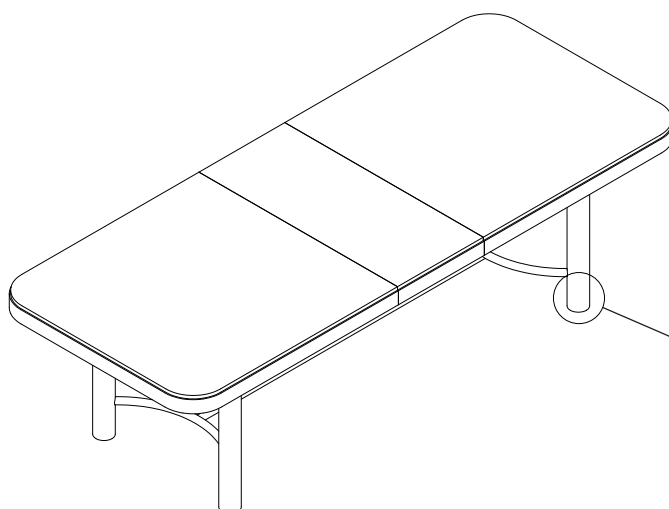

ITEM: **108931**

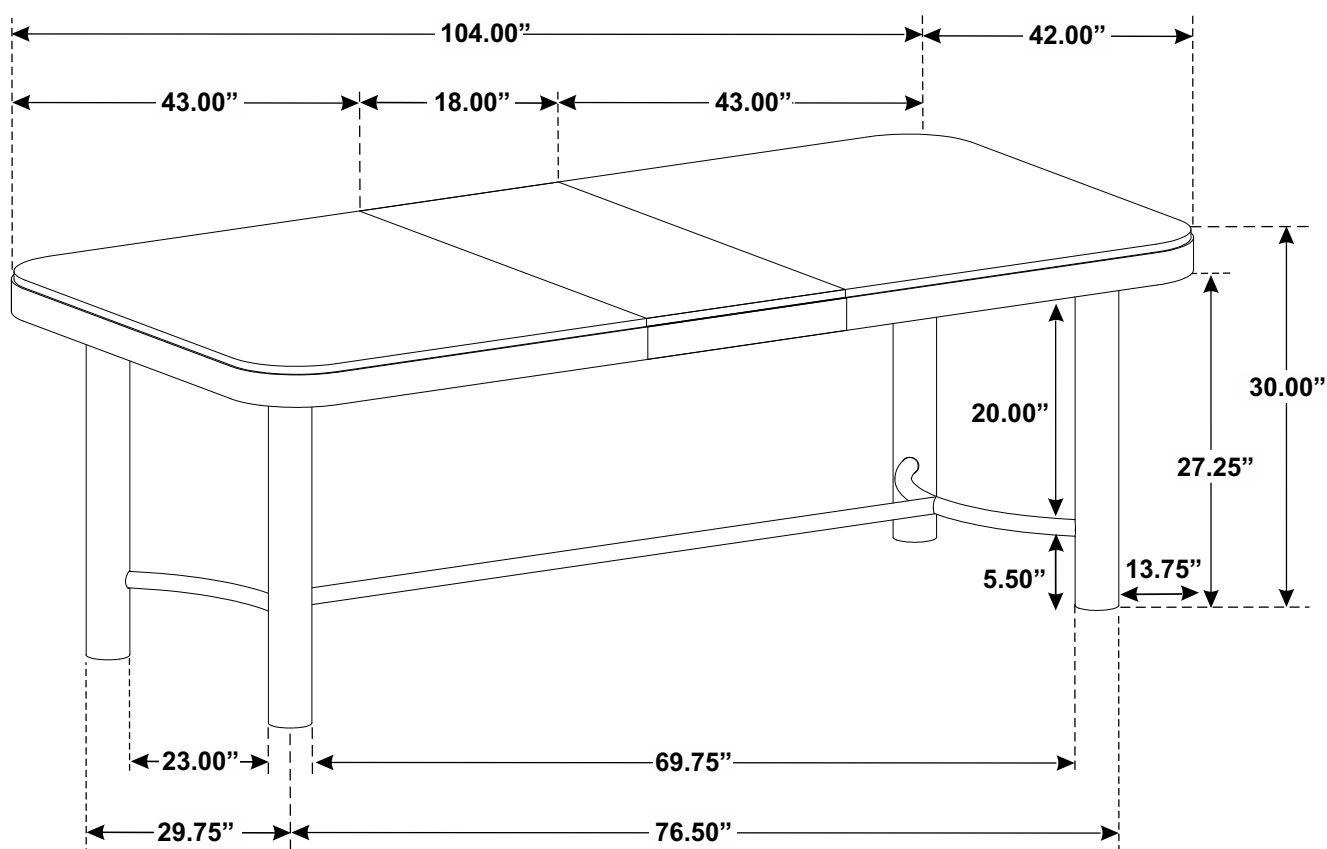 

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

108932SWD
Side Chair

ITEM: 108932SWD



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME

20 MINUTES

PART IDENTIFICATION

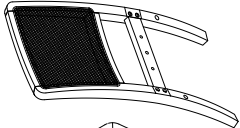A	BACK FRAME		1PC
B	SEAT CUSHION WITH FRAME		1PC
C	LEFT FRONT LEG		1PC
D	RIGHT FRONT LEG		1PC
E	SIDE STRETCHER		2PCS

  HARDWARE IDENTIFICATION

1	WOOD DOWEL (10 x 35mm - BRW)		1PC
2	SHORT BOLT (5/16" x 35mm - BLK)		2PCS
3	MEDIUM BOLT (5/16" x 50mm - BLK)		4PCS
4	LONG BOLT (5/16" x 75mm - BLK)		4PCS
5	LOCK WASHER (1.6 x 14mm - BLK)		10PCS
6	FLAT WASHER (1 x 18mm - BLK)		10PCS
7	ALLEN WRENCH (M5 x 70mm - BLK)		1PC
8	PAN HEAD SCREW (6 x 44mm - BLK)		4PCS

 
NOTE:

Quantities shown are for one chair.


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **108932SWD**
ASSEMBLY INSTRUCTIONS

STEP 1

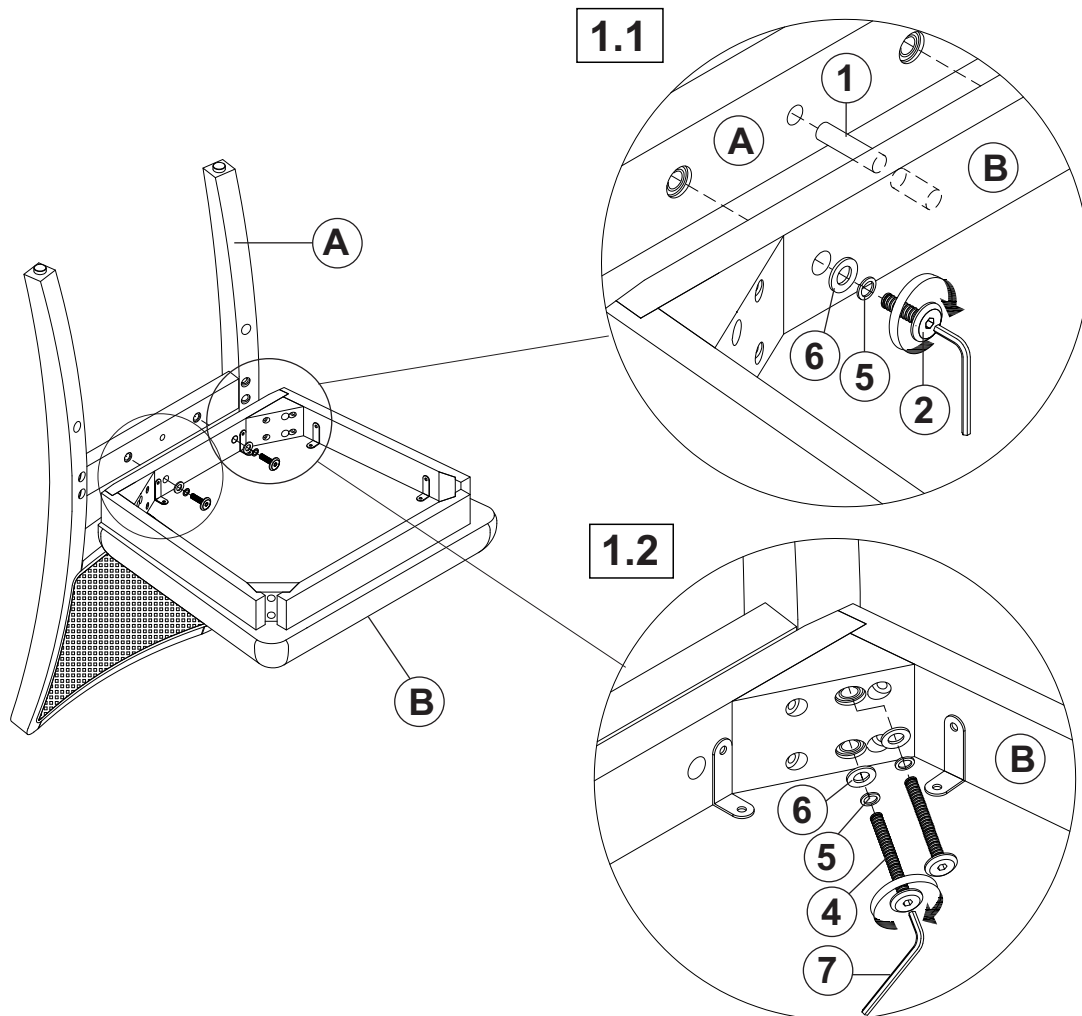

 
STEP 2

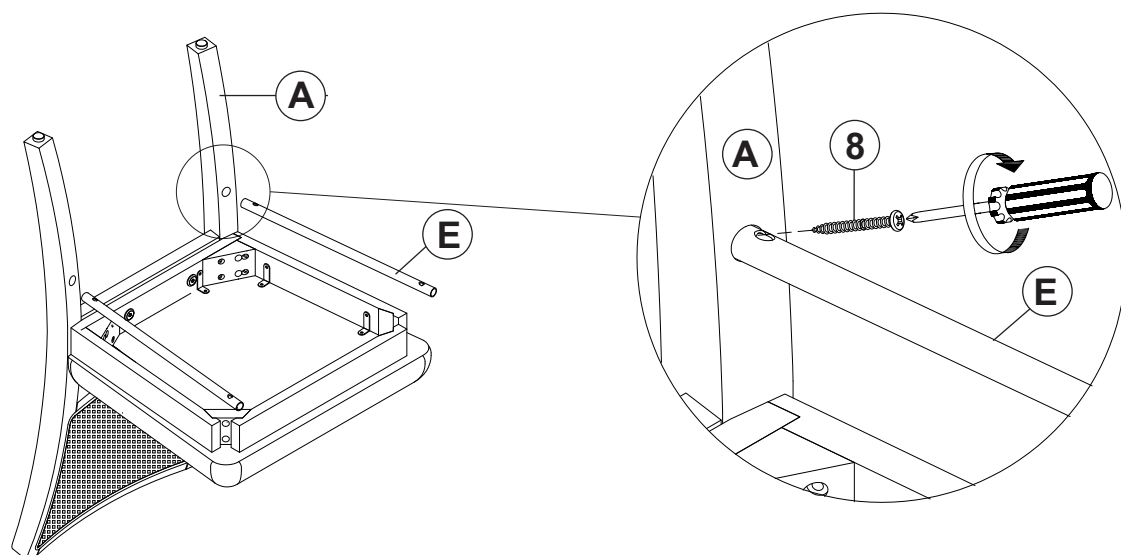



ITEM: **108932SWD**
ASSEMBLY INSTRUCTIONS



 
STEP 3

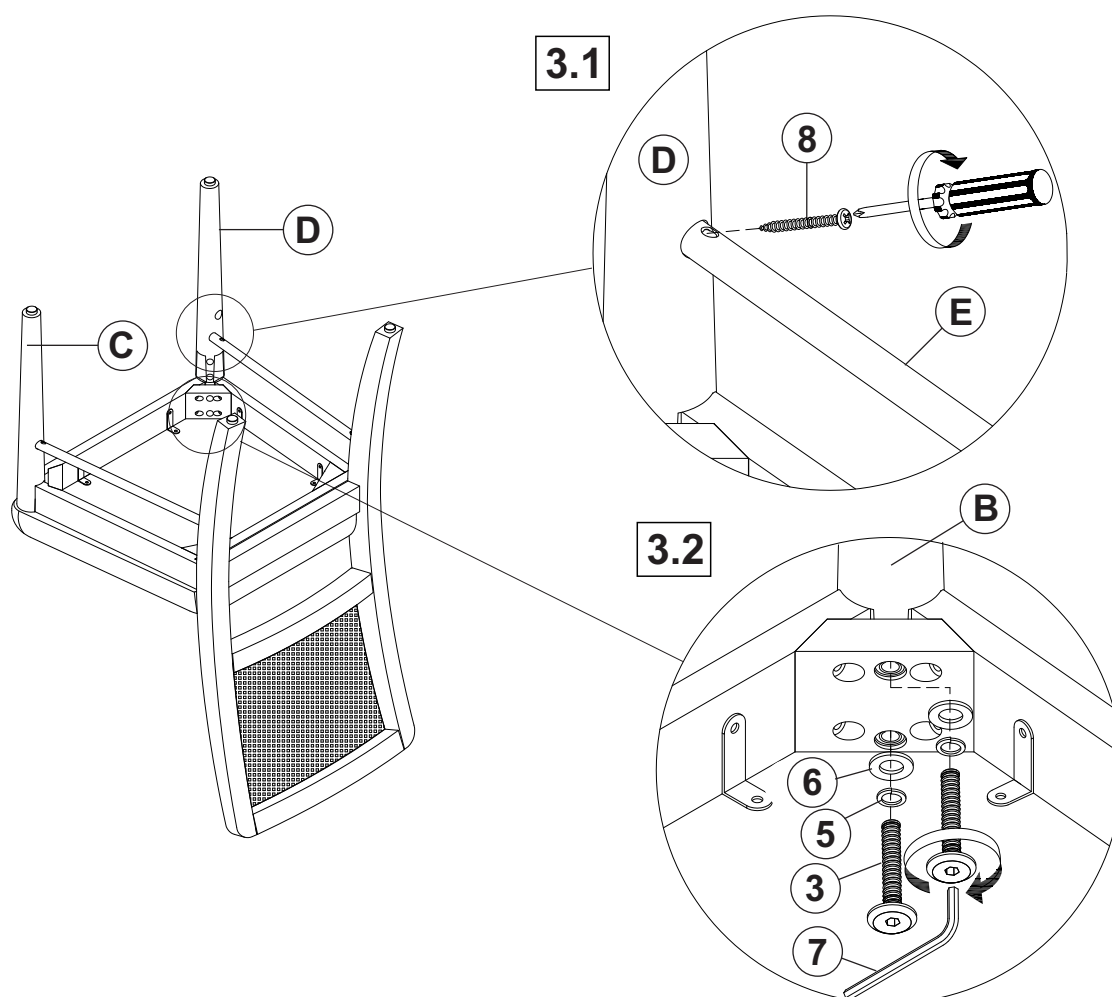

  STEP 4
COMPLETE

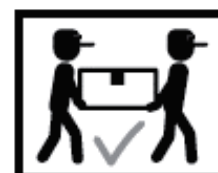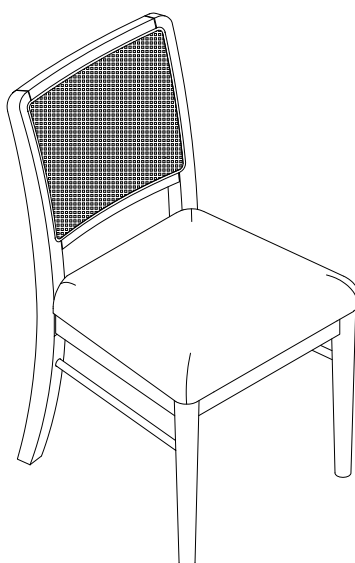

ITEM: **108932SWD**

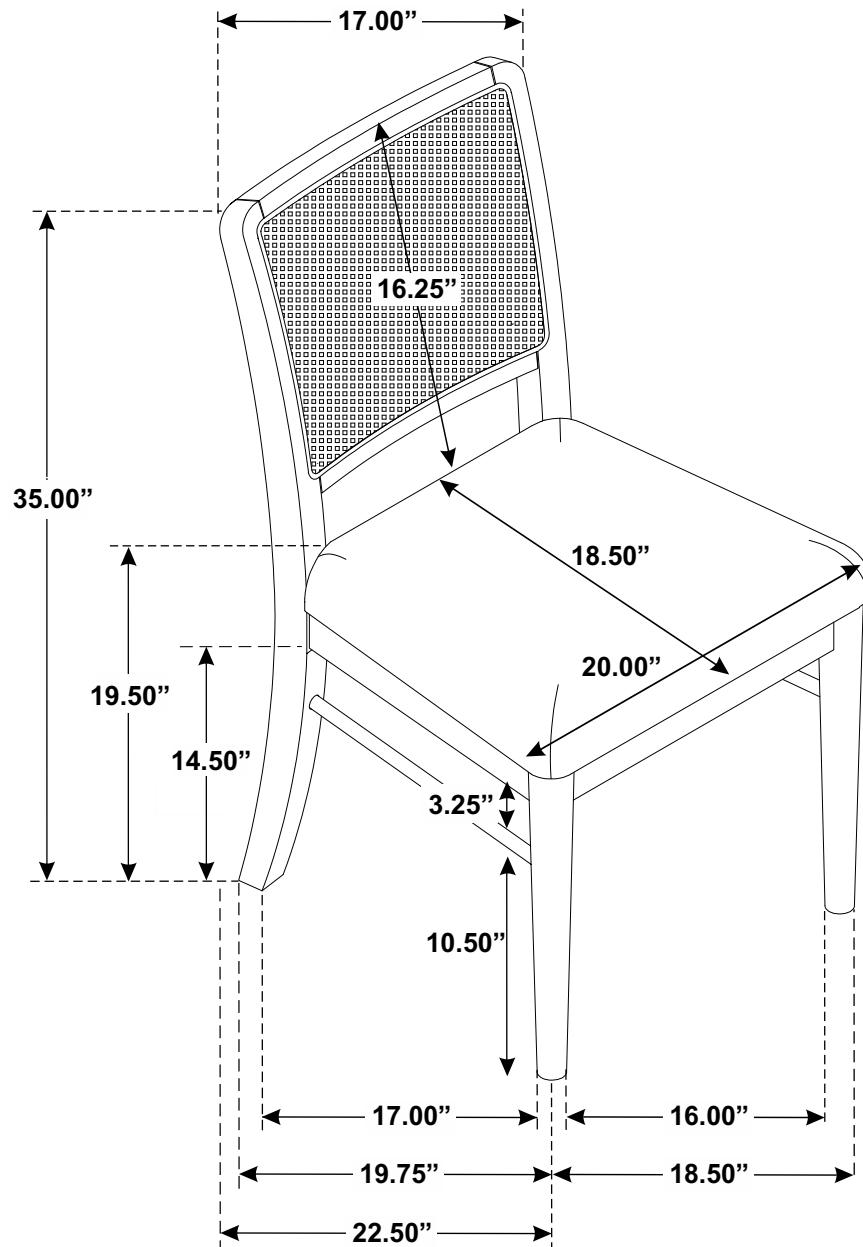 

Note: Dimension tolerance $\pm 5\%$