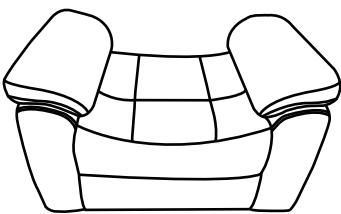
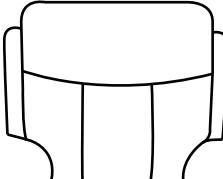


ASSEMBLY INSTRUCTION FOR ACME FURNITURE





MODEL#LV04271/LV04272

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, Identify and count all parts and metal hardware. Compare with all parts listed to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

COMPONENT PARTS

DESCRIPTION	PART NAME	Q'TY(PCS)
①:Chair Seat		1 PC
②:Chair Back		1 PC

HARDWARE REQUIRED

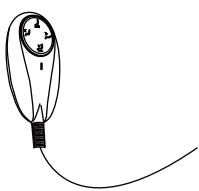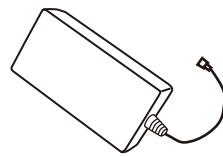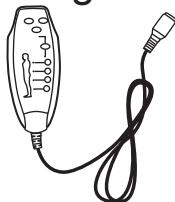
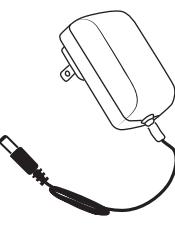
A:Motor Remote 	B:Transformer 	C:Plug 
D:Massage Remote 	E:Power Cord 	

Attention


***Some number parts listed on the instruction sheet may not be in parts bag as they may be assembled. Carefully check parts and packing materials prior to ordering replacements. ***

HOW TO ASSEMBLE:

STEP 1

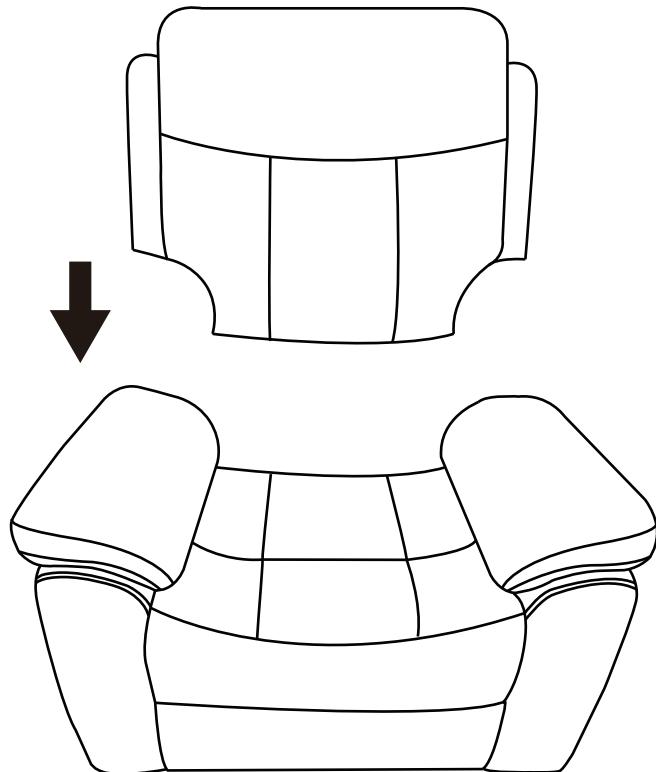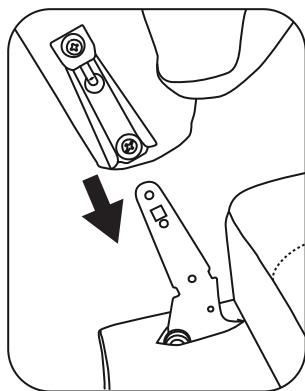

Insert the Chair back (②) on the Chair seat (①). Gently push down until the back locks into position.

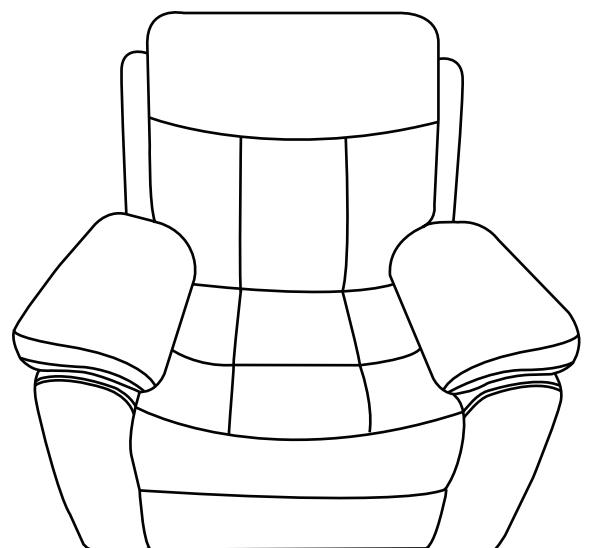


HOW TO CONNECT THE MOTOR WIRES:

STEP 2

No.1: Wire connect the motor and the Motor Remote(A),

No.2: Wire connect the motor and transformer (B).


No.3: Plug(C) connect the transformer (B)

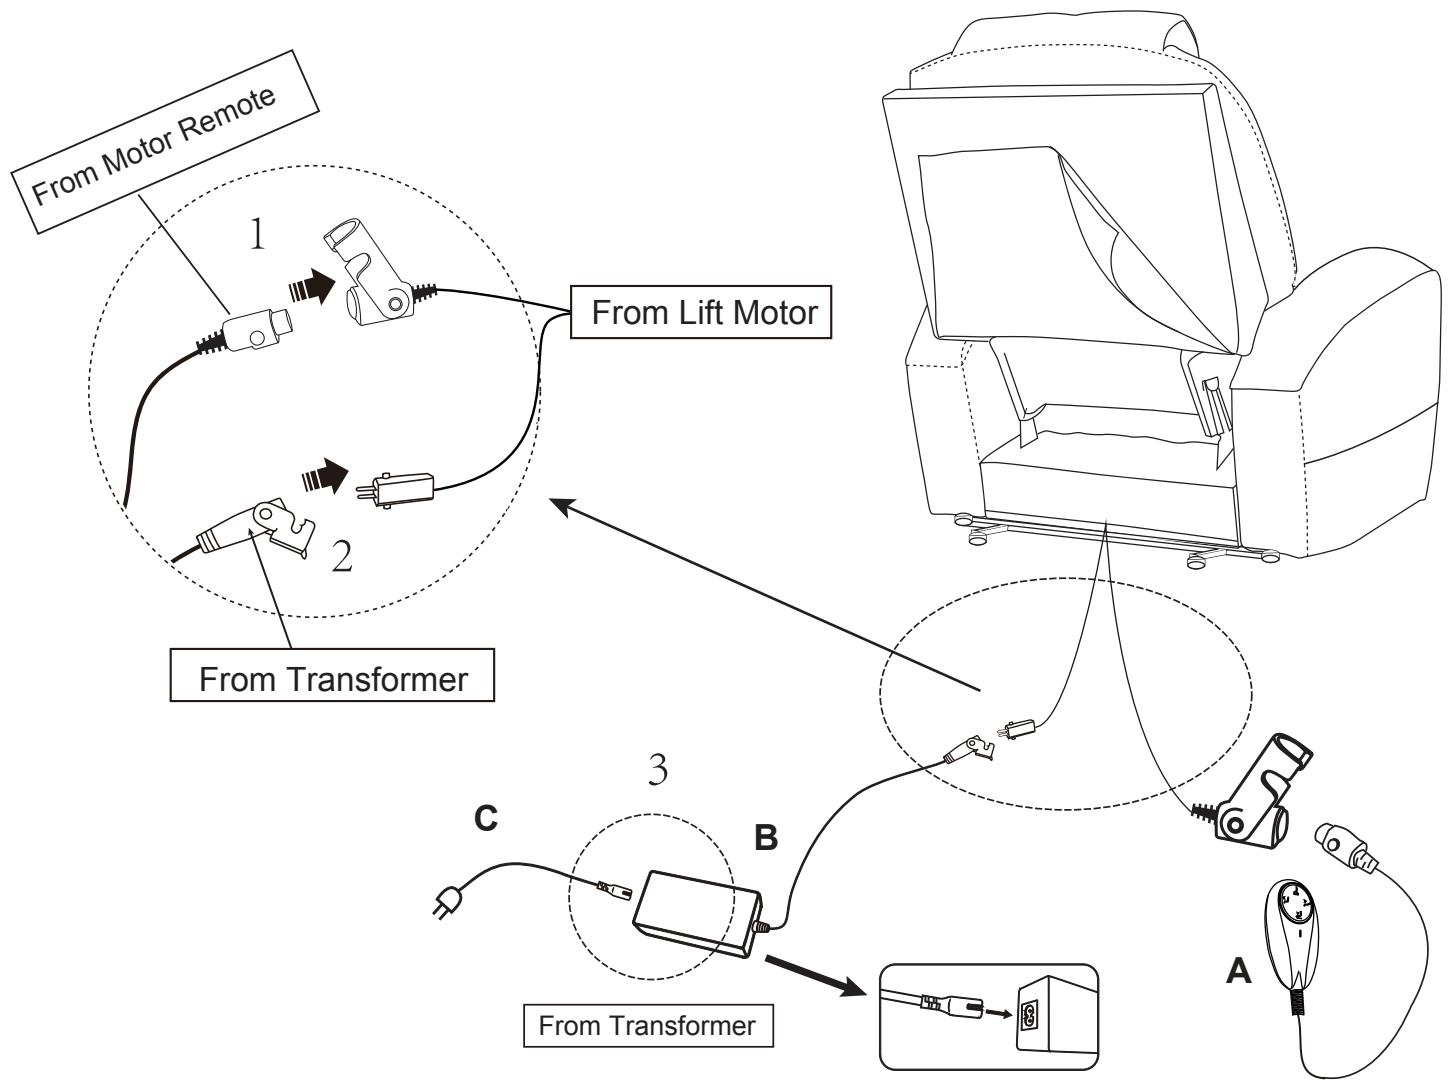

HOW TO CONNECT THE MOTOR WIRES:


STEP 3

There are 4 wires coming out of the backrest, if you find that the wire is missing, check to make sure it's not stuck between the backrest and the Seat before you make the connection.

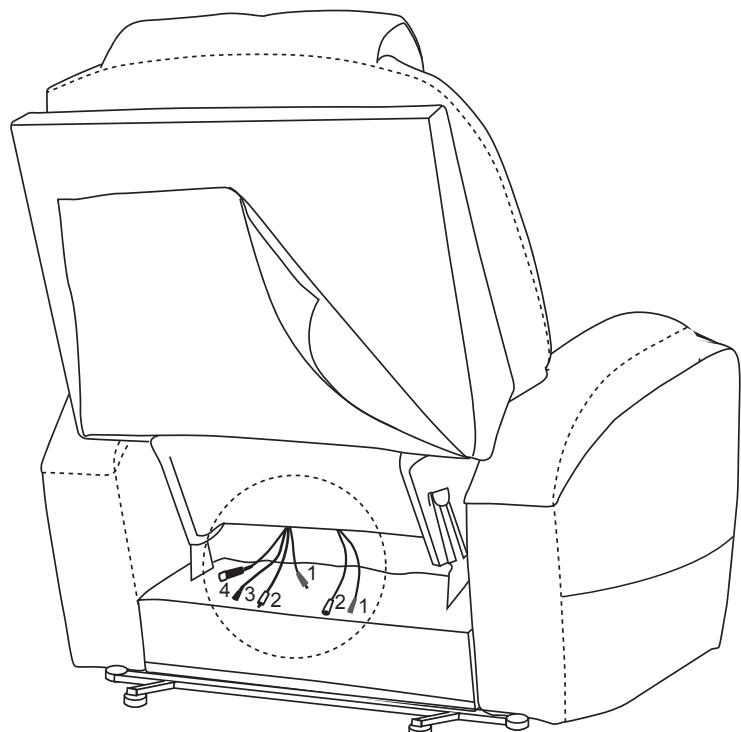

Chair back (2)

Chair seat (1)

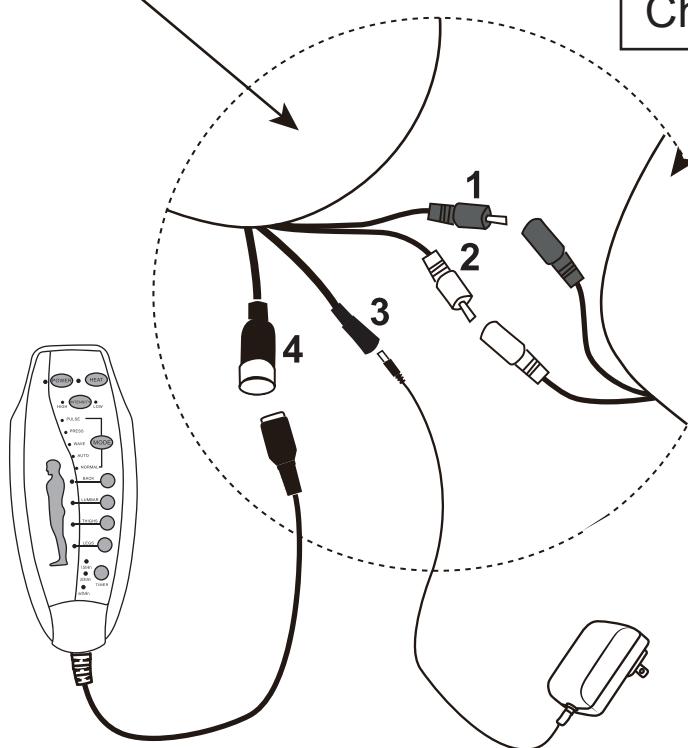

Wire 1: RED wire from the backrest connect to the RED wire from the seat.

Wire 2: WHITE wire from the backrest connect to the WHITE wire from the seat.


Wire 3: BLACK smaller wire from the backrest connect to the POWER CORD(E).

Massage Remote(D)

Power Cord(E)

Wire 4: BLACK bigger wire from the backrest connect to the Massage Remote(D).

HOW TO USE MOTOR REMOTE:

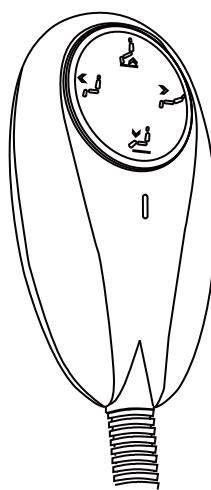

Press the button to recline the backrest.



Press the button to lift the backrest.




Press the button to rise the seat and retrieve footrest.



Press the button to descend the seat and unfold the footrest.

HOW TO USE MASSAGE REMOTE:

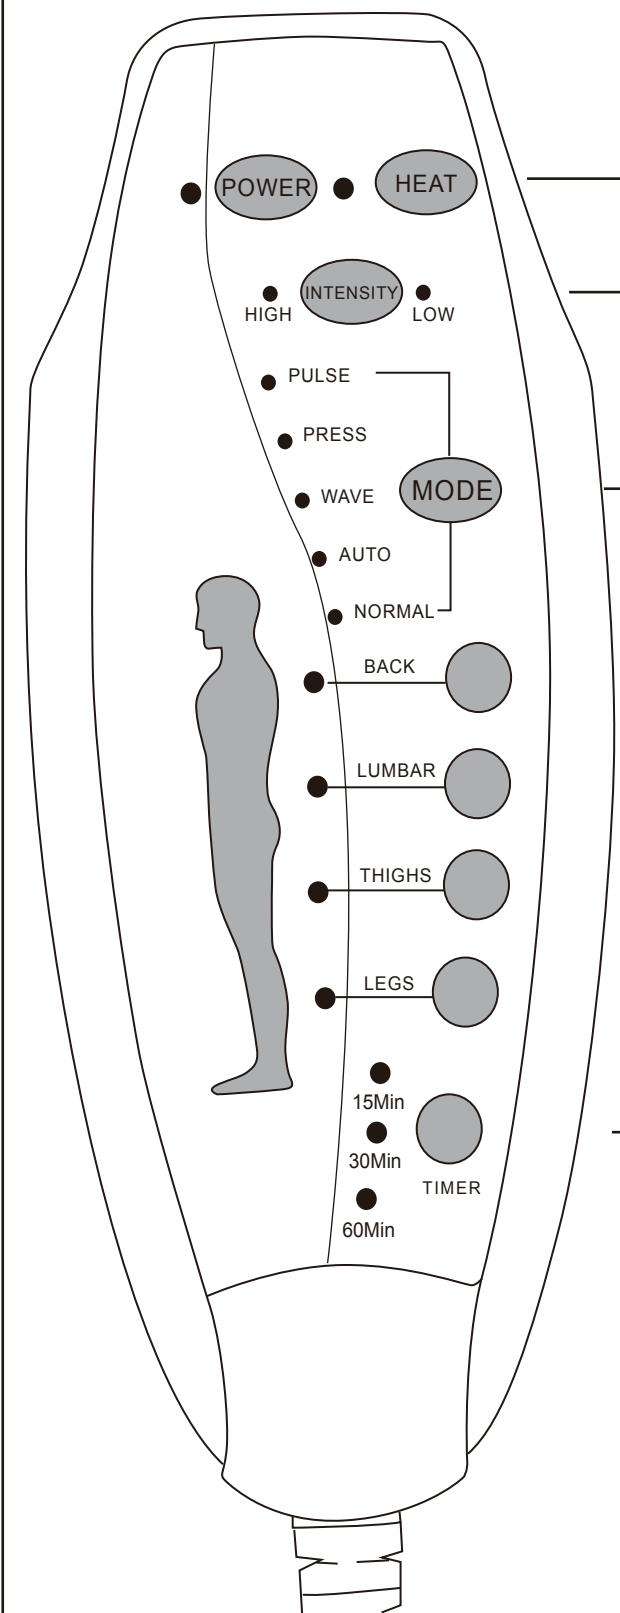

POWER: Turn on/off remote control

HEAT: Turn on/off heat function for lumbar part only

INTENSITY: Control massage function from low to high

MODE: Choose one massage mode you like(pulse, press, wave, auto, normal)

You can choose 1-4 massage parts(back, lumbar, thighs, legs) to enjoy.

TIMER : 15 mins/30 mins/60 mins