

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

708137 END TABLE

REVISION 0: 04/01/2025

PAGE 1 OF 7



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME 35 MINUTES

PARTS IDENTIFICATION

 
B1: TOP

A TOP

1PC

B2: BASE

B TOP FRAME



C LEG

Ζ



HARDWARE IDENTIFICATION

1 SHORT BOLT (1/4" x 15mm BLK)



4 LEVELER (1/4" x 12mm BLK)



4PCS

2 LONG BOLT (1/4" x 56mm BLK)



5 ALLEN WRENCH (4mm)



1PC

3 SUCTION CUP



4PCS


Hardware pack is located in 708137B2

PAGE 2 OF 7




STEP 1

Do not tighten until each step is completed or instructed.

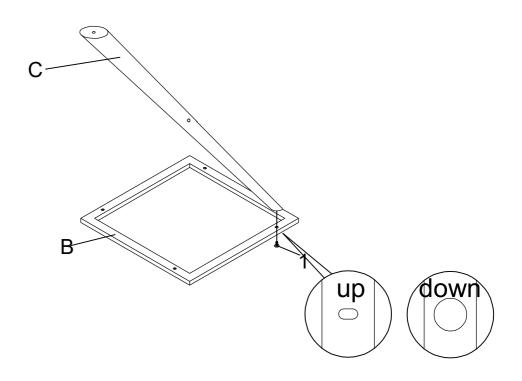


STEP 2

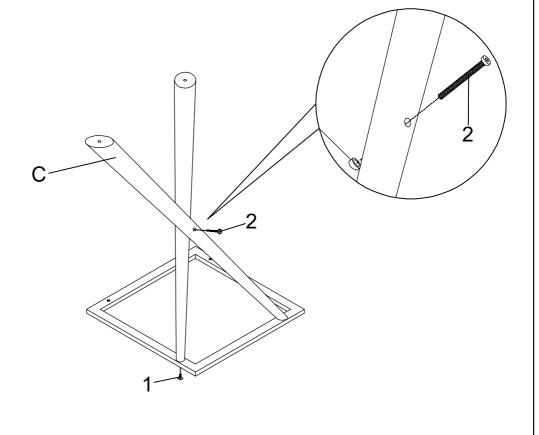


PAGE 3 OF 7




STEP 3

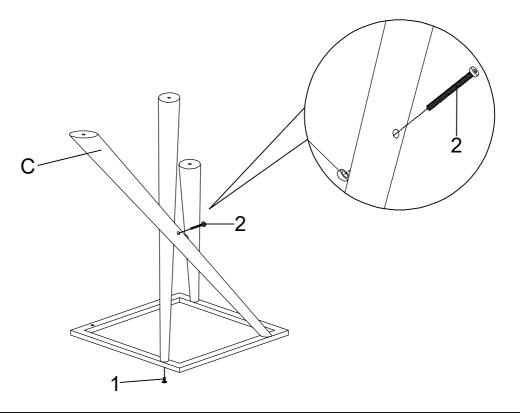


STEP 4

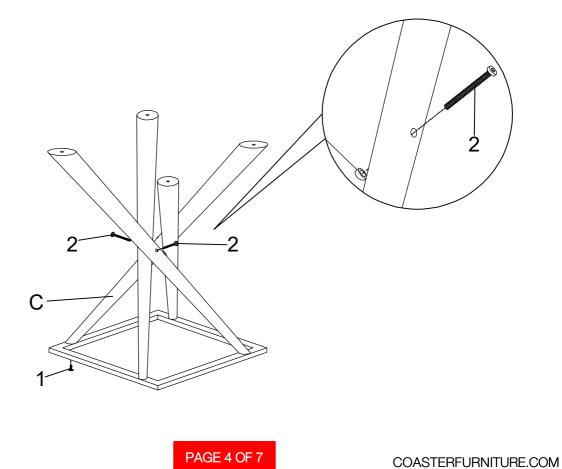



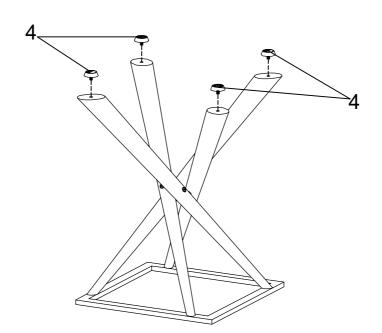

STEP 6

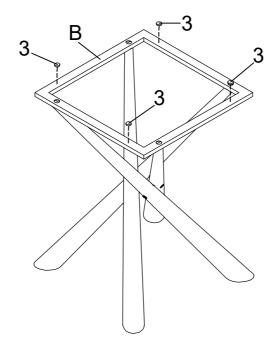

PAGE 5 OF 7





STEP 8 COMPLETE








Product Size: 597 X 597 X 572 H (MM)

Product Size: 23.5" X 23.5" X 22.5"

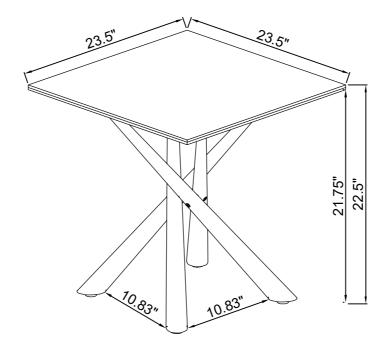

Note: Dimension tolerance ±5%