

 


Assembly Instructions

CM4037BK-E
(Black)

CM4037WH-E
(White)

CM4037RA-E
(Rustic Oak Print)

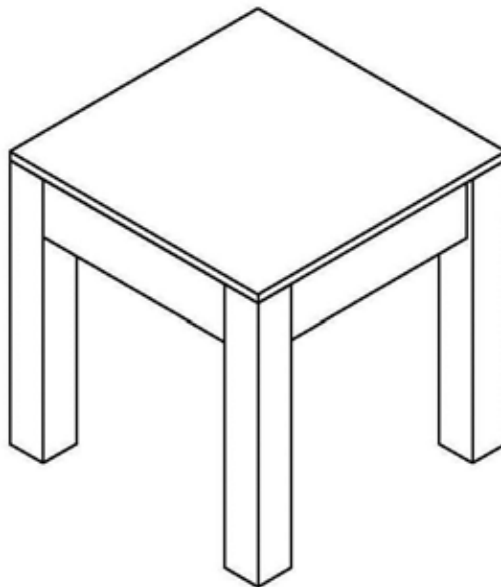

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required for Assembly:

Allen Wrench




(Included)




ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY.
PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 BASIC ASSEMBLY TECHNIQUES

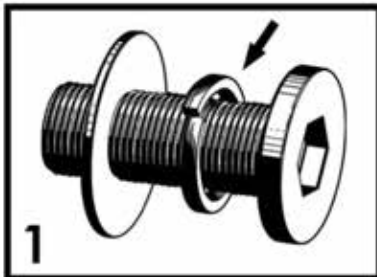

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

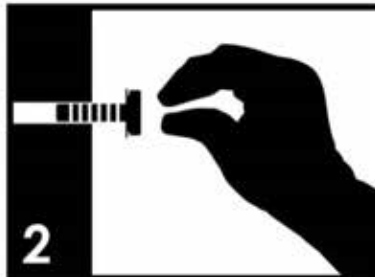


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.



 Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

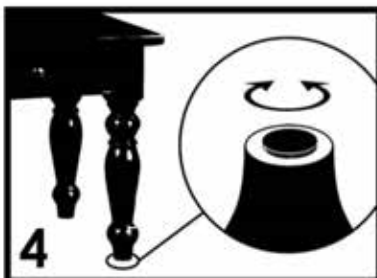

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

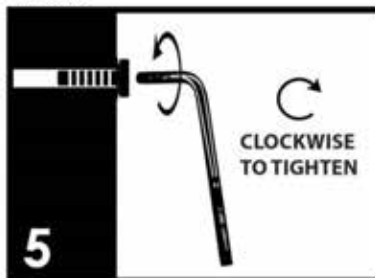

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.



Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**

 


Before you begin, please read Page 2 of "Assembly and Care Advice".


And remember, do not tighten until each step is completed.

MD

Parts List

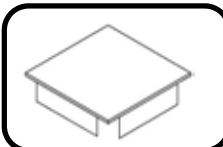

#1 x 1 pc
Table Top

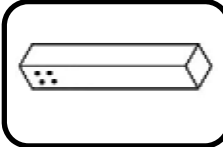 

#2 x 4 pcs
Corner Leg



#D x 1 pc
Allen Wrench M5

Hardware List



 
#A x 16 pcs
Bolt 5/16" x 2-1/8"



#B x 16 pcs
Spring Washer 5/16"




#C x 16 pcs
Flat Washer 5/16"x5/8"

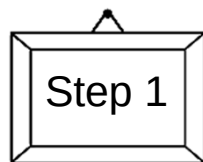


Step 1

 Turn right (clockwise) to tighten

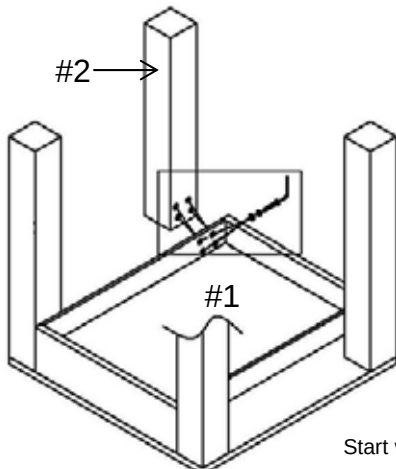

Carefully remove the table top (#1) and place it facing down on a protective surface. Starting with any corner leg, align the first corner leg (#2) with the 4 pre-drilled holes of the table top (#1). Prepare a bolt assembly by inserting FIRST the spring washer (#B) onto the bolt (#A) and then the flat washer (#C) onto the SAME bolt, in that order. Then insert the bolt assembly through one of the BOTTOM holes of the table top and secure that bolt using the Allen wrench (#D) to lock it in with the corner leg.

 
Repeat the same process for the other BOTTOM hole.

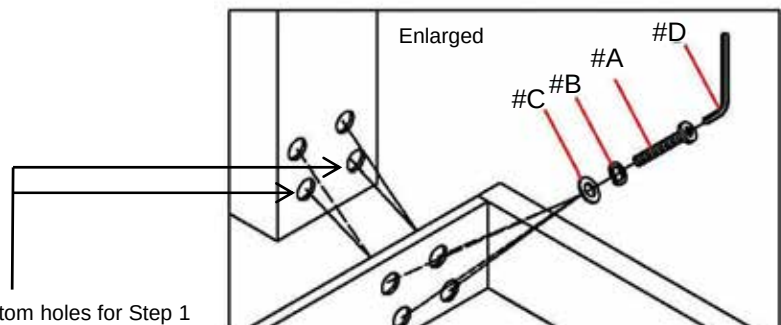


Step 2

Repeat the bolt assemblies (see Step 1) for the TOP holes of the table top (#1) and secure those bolts using the Allen wrench (#D) to lock them in with the SAME corner leg (#2).

 Repeat Step 1 and Step 2 for the remaining 3 corner legs.

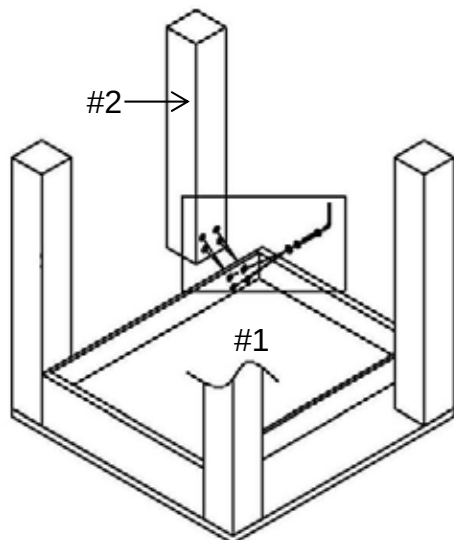

Start with the top holes for Step 2

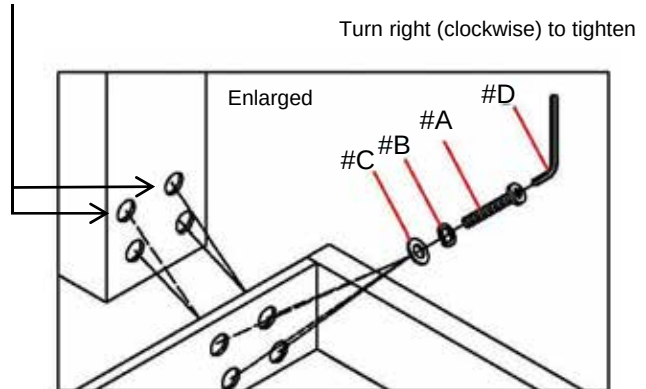 

Step 3

Carefully turn the completed table upright. Make sure the table is rested on a flat surface and it does not feel loose or wobbly. If it does, double check that the bolts are secured and properly tighten.

