SAMSUNG

AirDresser Quick Start Guide

Three simple steps to refreshing with AirDresser:

Please refer to AirDresser User Manual for acceptable fabric types.

- **1.** Slide out Air Hanger, place garment(s) on Air Hanger, slide back into place. (See below to learn how to use Accessory Rack or Built-In Shelf.)
- 2. Fill the water reservoir tank, located on the bottom right of AirDresser. (Remember to empty the drain tank when full.) See below for more information.
- **3.** Choose the appropriate cycle. See reverse side of this quide (page 2).



A. Simply remove an Air Hanger from the system and use like

B. To use your own hanger, simply remove an Air Hanger from the system and replace with the adaptable Regular Hanging Kit.



Built-in Shelf

Perfect for items that can't be hung, like hats, sweaters and toys.

A. Remove the Built-In Shelf from the inside of the AirDresser door.

B. Slide the Built-In Shelf into the track in the center of the AirDresser so that it lays flat.



6 Air Filter

The Air Filter captures and eliminates particles from your garments. Remove and clean the Air Filter periodically.



8 Lint Filter The Lint Filter captures and eliminates loose fibers from your garments. Remove and clean periodically.



Smart Access

Use the SmartThings app to control your AirDresser remotely.

- Start or pause a cycle • Cycle recommendations
- End-of-cycle notification

SmartThings



3 Accessory Rack

Use the Accessory Rack to conveniently hang items like scarves and ties.

A. Accessories can be hung from the bottom rung and flipped over the top.

B. Alternatively, items can be hung from the top rung and secured behind the bottom rung.



Air Hangers Your AirDresser comes with three Air Hangers.

a regular hanger.



2 Water Reservoirs The refillable, self-contained water reservoirs require no plumbing or water line.

A. First, fill the right reservoir (Refill Tank) with water.

B. When the discharge tank on the left (Drain Tank) is full, discard the water and refill the right reservoir.

5 Weight Kit for Pants The Weight Kit is designed to

efficiently relax wrinkles from pants.

A. Hang pants upside down on an Air Hanger, clipping the legs.

B. Remove the Weight Kit from the Accessory Rack and attach to the waistband.

7 Fresh Finish[™]

for a laundry-fresh scent.

Insert your favorite dryer sheet

*The strength of the scent may differ depending on the dryer sheet used, and the scent may remain inside the AirDresser after the cleaning cycle is complete.

SAMSUNG

AirDresser Cycle Guide

Please refer to AirDresser User Manual for acceptable fabric types.



Touch Display

Displays the selected cycle and estimated time remaining, notifications and Wi-Fi connectivity.



- 1. Cycle: Choose from General, Sanitize, Dry or Special
- 2. Silent: Turn on for quiet use
- **3. Child Lock:** Tap and hold for 3 seconds to deactivate all buttons except power
- **4. Delay End/Keep Fresh:** Tap and hold for 3 seconds for items you do not wish to remove at the end of the cycle or to increase the end time
- 5. Smart Control: Connects to the SmartThings app
- 6. Power: Turn on or off
- 7. Start/Pause: Tap and hold to start. Tap to pause.

For more information, please refer to AirDresser user manual.

* Eliminates 99.9% of bacteria (E. coli and S. aureus) using a Sanitize course. Verified by Intertek; individual results may vary. ** Available after downloading the cycle from the SmartThings App.