




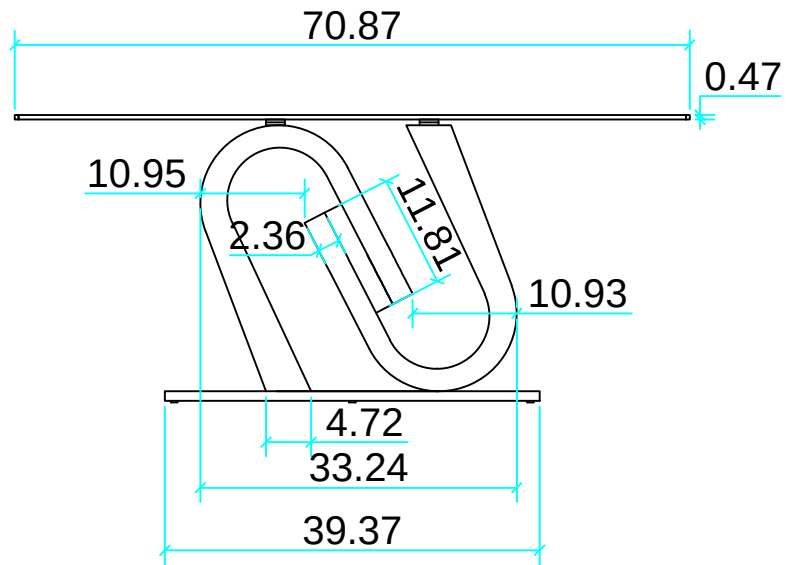


Front View

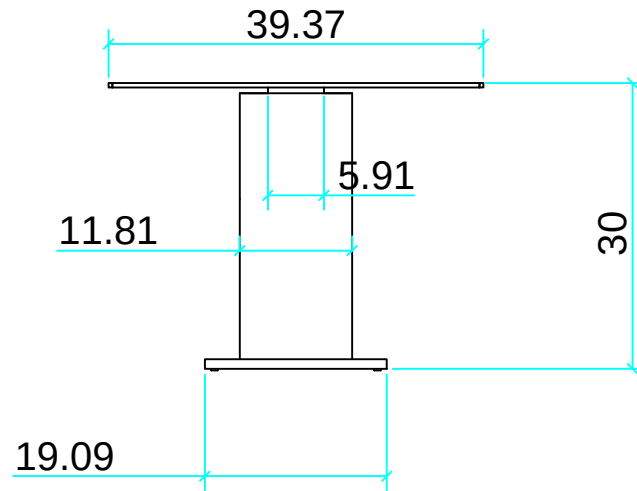

Side View

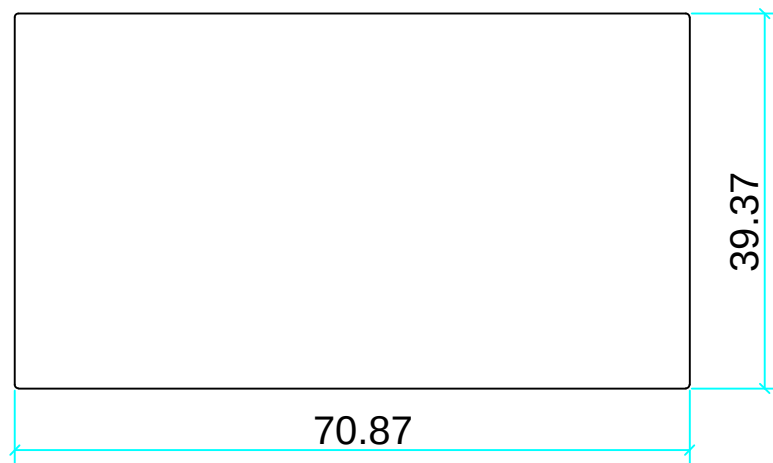

Top View

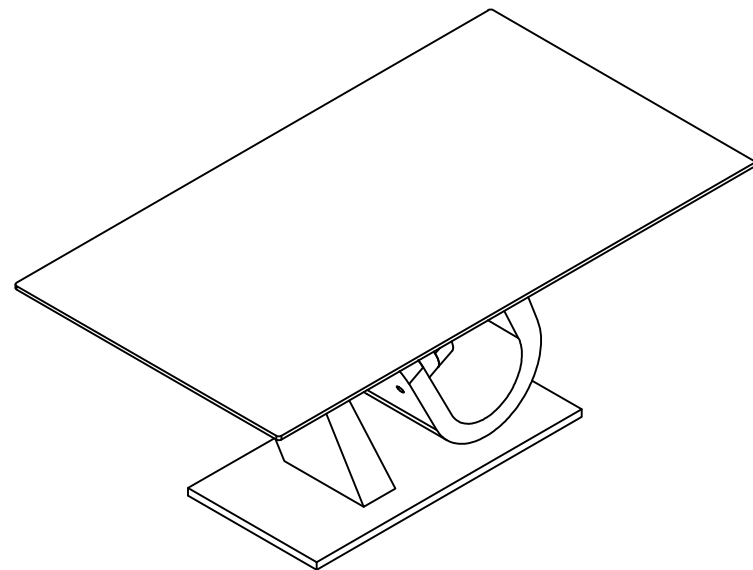

Isometric View


ASSEMBLY INSTRUCTION

Model :D4126DC/D4127DC

Description : Dining chair

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step 1:

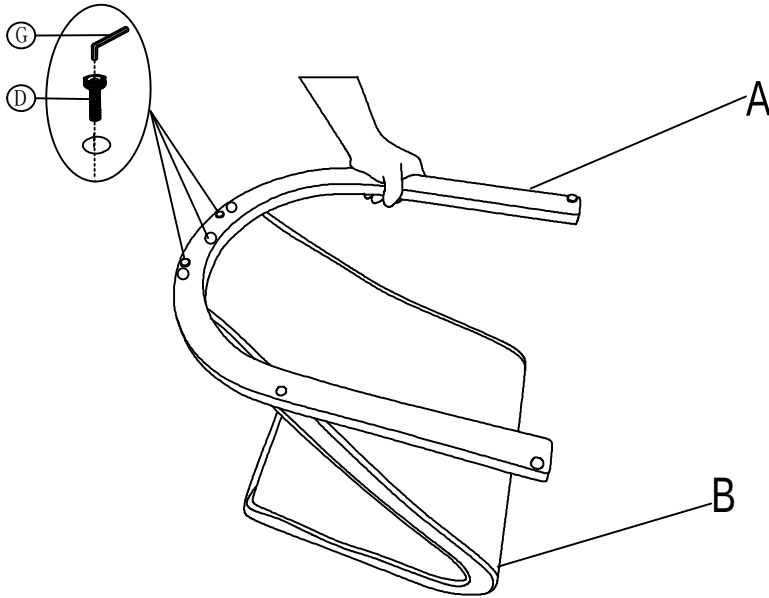


PART LIST :

No.	Description	Diagram	Quantity
A	Legs		1
B	Seat		1
C	Backrest		1


HARDWARE LIST :

No.	Description	Diagram	Size	Quantity
D	Bolt		M8*20	3
E	Bolt		M6*16	4
F	Flat washer		Ø6*Ø16	4
G	Allen key		M6	1
H	Allen key		M4	1


Step 2:

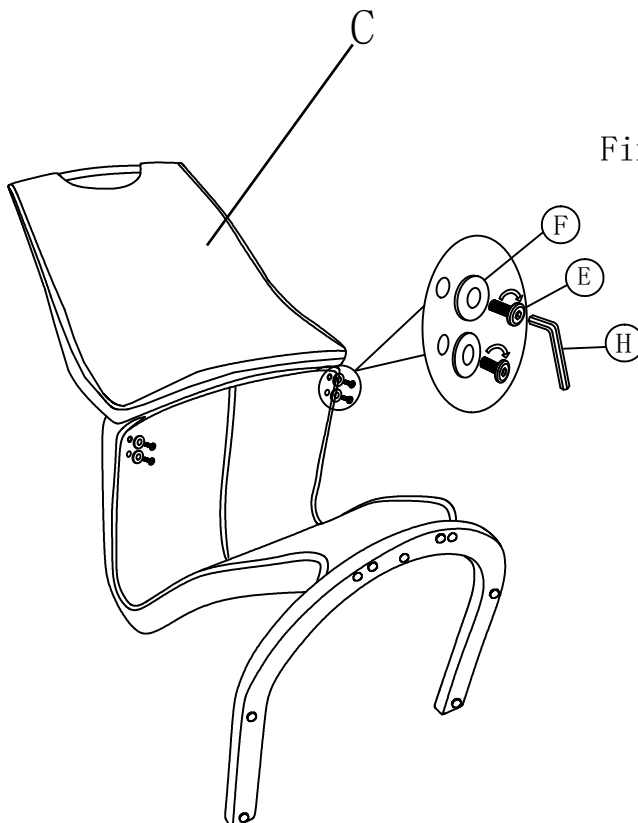



Finished:

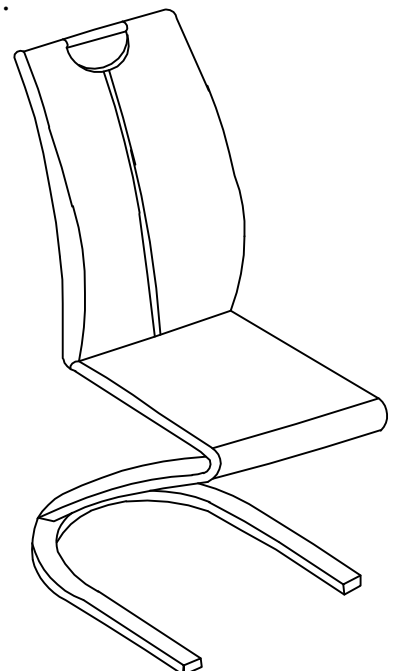



Poor Assembly Picture:

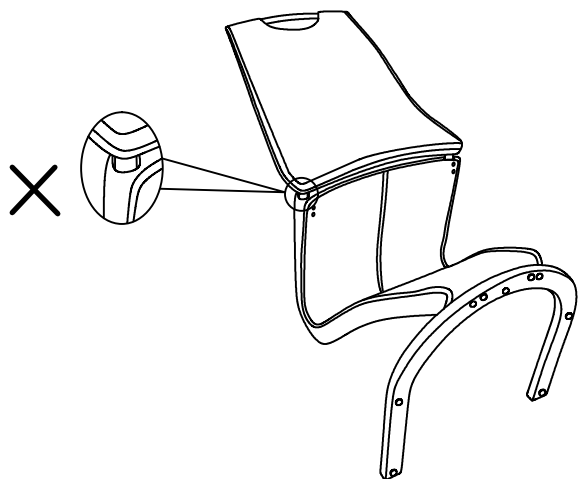

Step 2-a: Place the backrest (C) into the holes on the seat (B). Push down to make sure the screw holes on the backrest (C) are aligned with the screw holes on the seat (B). Screw in all necessary hardware as shown only halfway, do not completely tighten.

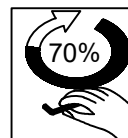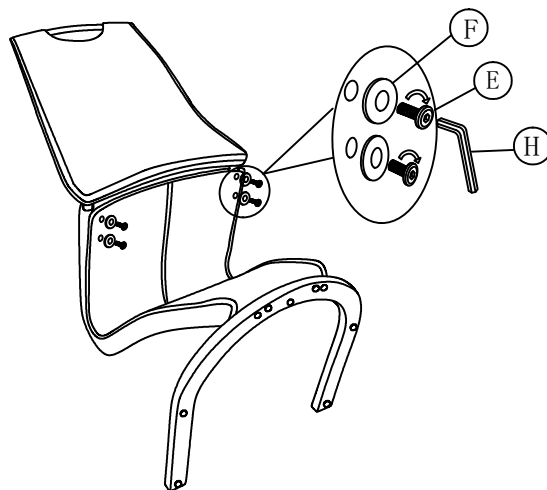

Step 2-b: Press the backrest (C) down so that the backrest is completely flush with the seat (B). Then proceed to completely lock all the screws. (Do not completely tighten the screws if the backrest (C) and seat (B) are not completely flush with each other)

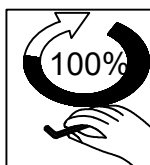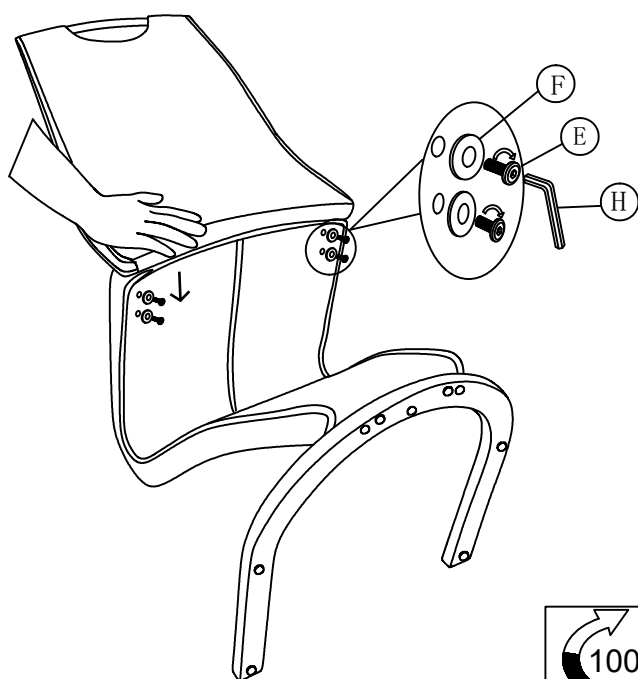

Finished:

