



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

150350
5Pc Dining Set

ITEM: 150350



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

35 MINUTES

PARTS IDENTIFICATION

A	TABLE TOP		1PC	E	LEFT FRONT LEG		4PCS
B	TABLE LEG		4PCS	F	RIGHT FRONT LEG		4PCS
C	BACK FRAME		4PCS	G	LEFT SIDE STRETCHER		4PCS
D	SEAT CUSHION WITH FRAME		4PCS	H	RIGHT SIDE STRETCHER		4PCS

HARDWARE IDENTIFICATION

1	BOLT 1 (Ø5/16" x 75mm - RBW)		8PCS	5	LOCK WASHER (Ø5/16" x 13mm - RBW)		44PCS
2	BOLT 2 (Ø1/4" x 75mm - RBW)		16PCS	6	FLAT WASHER (Ø5/16" x 19mm - RBW)		44PCS
3	BOLT 3 (Ø1/4" x 60mm - RBW)		16PCS	7	FLAT HEAD SCREW (Ø4 x 40mm - RBW)		16PCS
4	BOLT 4 (Ø1/4" x 35mm - RBW)		4PCS	8	ALLEN WRENCH (M4 x 59mm - RBW)		1PC

NOTE:


Phillips head screw driver is required in the assembly process. However, manufacturer does not provide this item.

ITEM: **150350**


ASSEMBLY INSTRUCTIONS



STEP 1

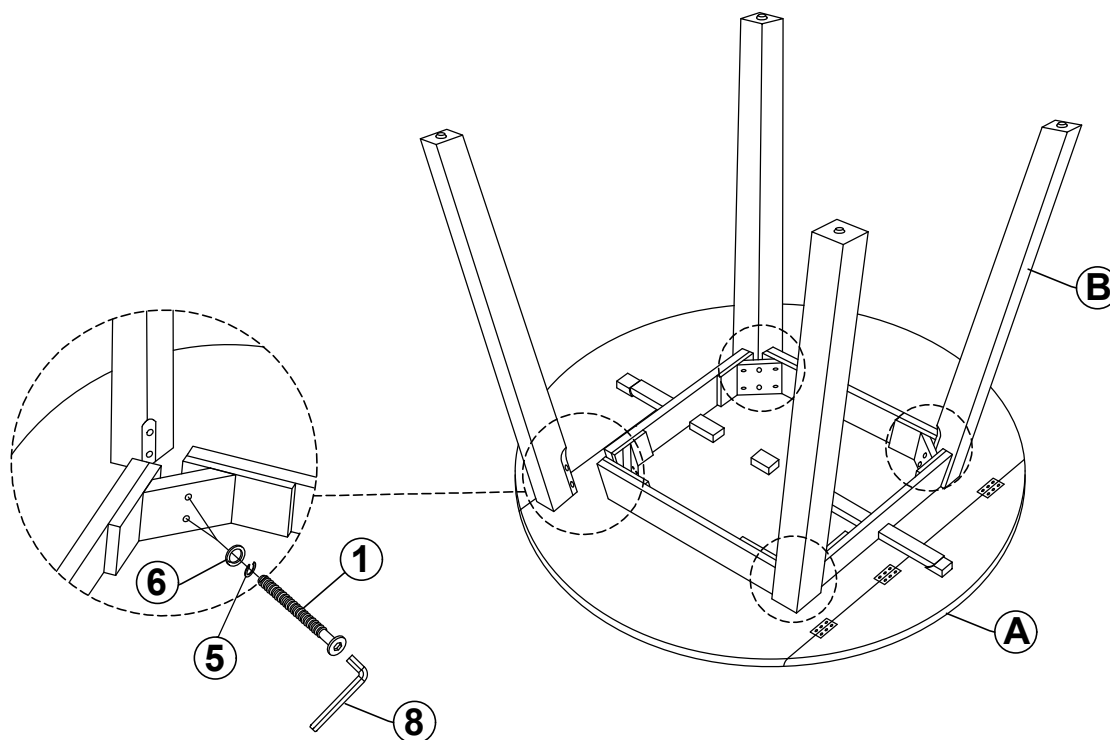

STEP 2

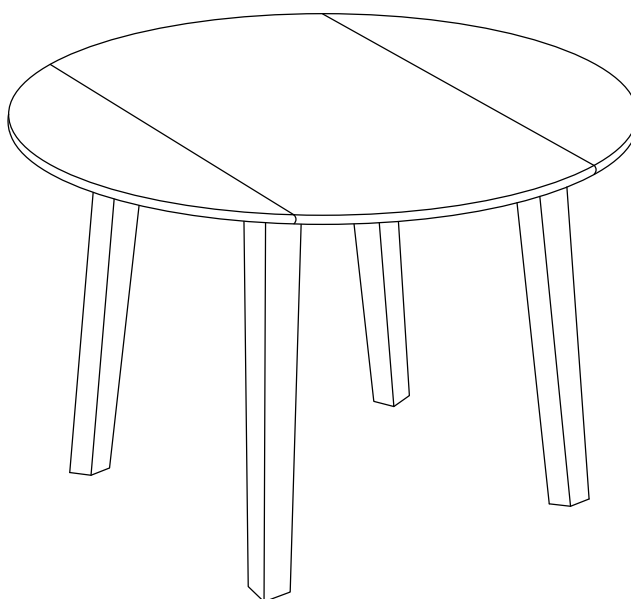


ITEM: **150350**


ASSEMBLY INSTRUCTIONS




STEP 3

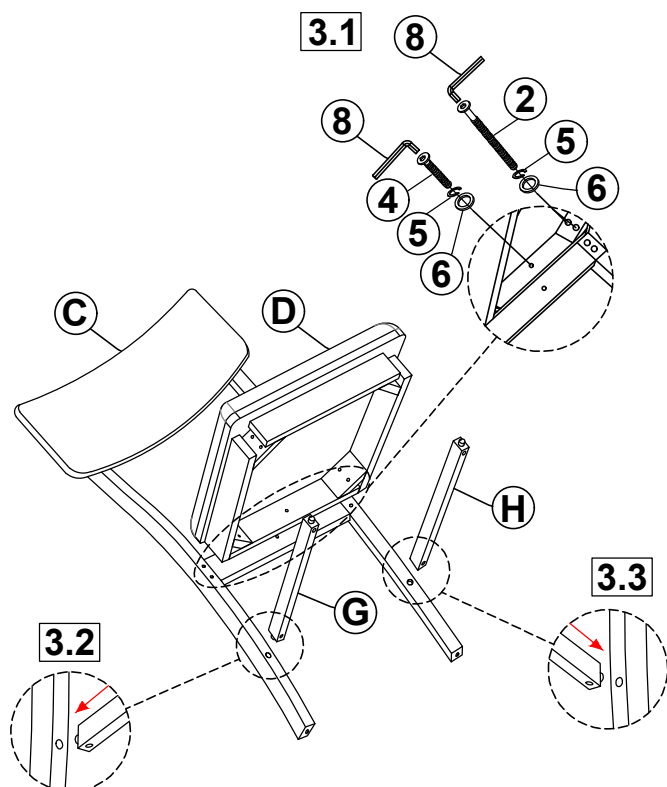


STEP 4

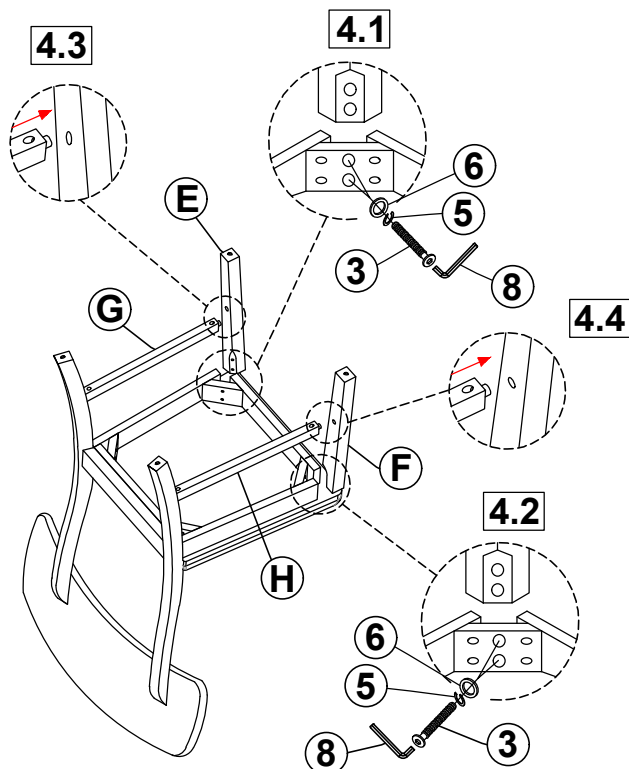


STEP 5

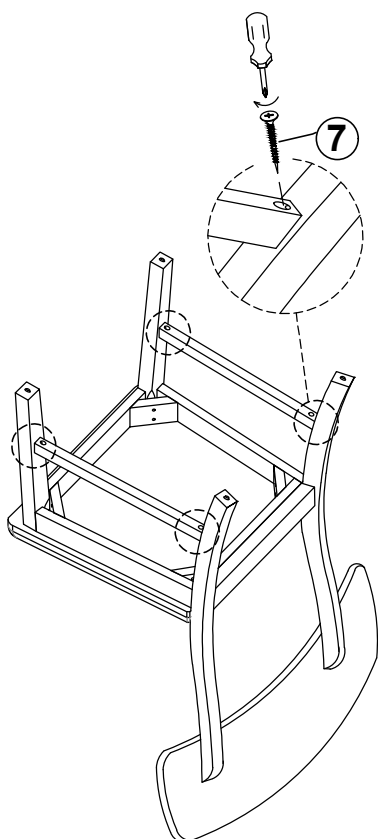

STEP 6 COMPLETE

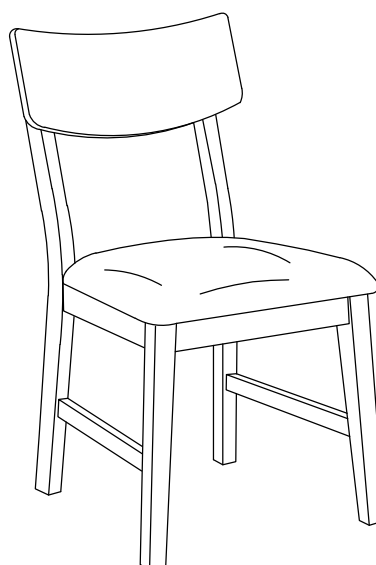


ITEM: **150350**

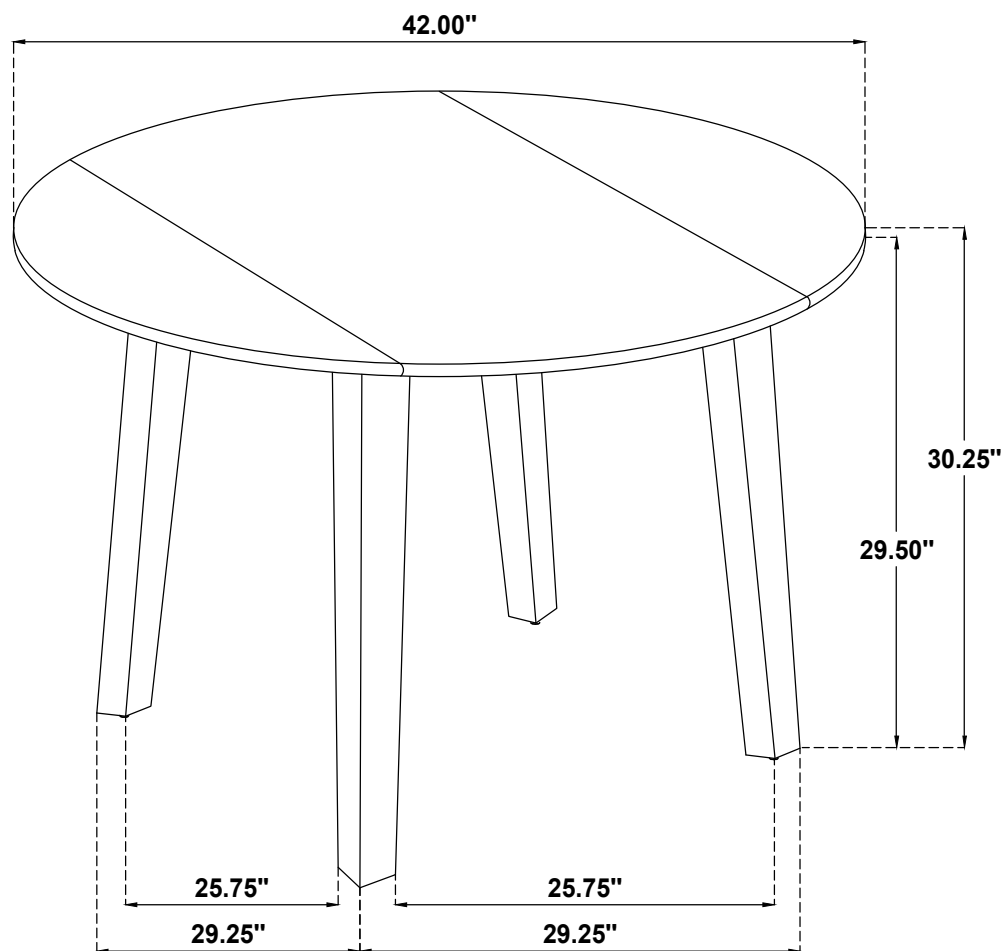

Note: Dimension tolerance $\pm 5\%$

ITEM: **150350**

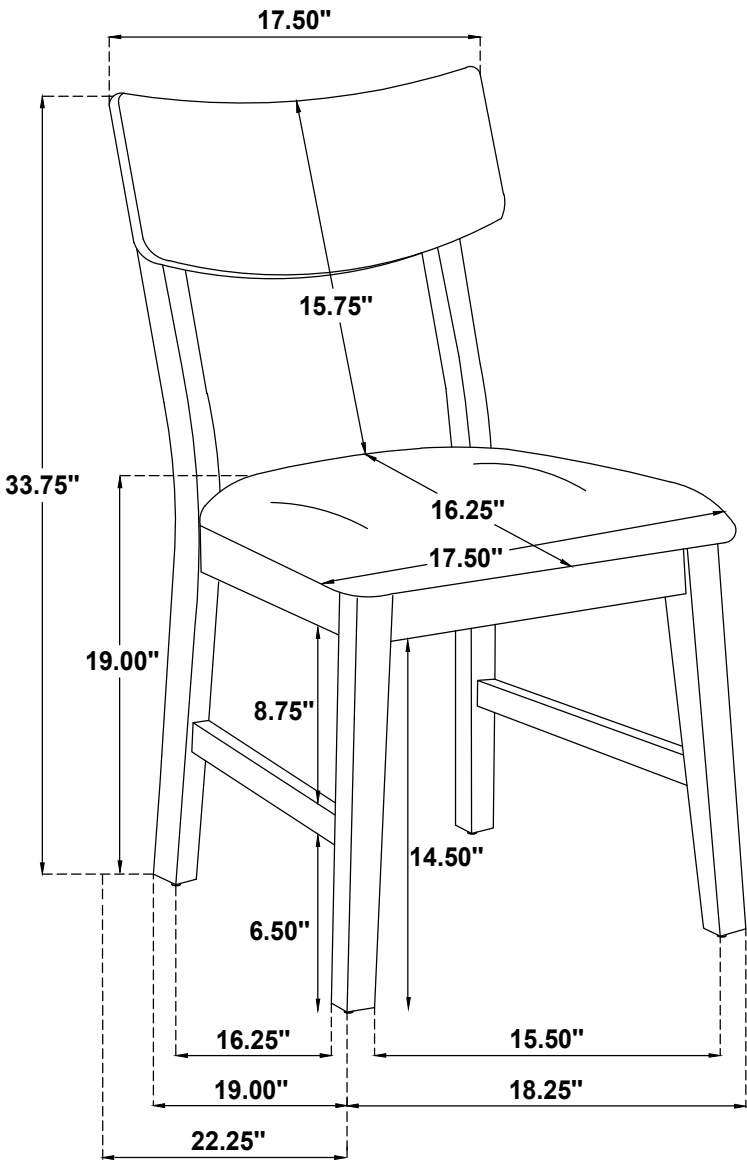

Note: Dimension tolerance $\pm 5\%$