

ASSEMBLY INSTRUCTIONS

 
Item No : D1248-10
LENNOX DINING TABLE

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown.

Cautions :



- (1) Do not fully-tighten the nuts or bolts until all nuts and bolts are assembled.
(To avoid causing damages to the thread, do not over-tighten the nuts or bolts.)
- (2) Keep all hardware part out of reach of children.

PARTS LIST


NO	COMPONENT	DRAWING	QTY
A	TABLE TOP		1 pc
B	TABLE LEG		4 pcs

HARDWARE LIST


NO	COMPONENT	DRAWING	QTY
1	Hex Com Bolt 5/16"x 2"		8 pc
2	Spring Washer Ø 1/4"		8 pc
3	Flat Washer Ø 1/4" x 1/2"		8 pc
4	Wrench 1/2"		1 pc

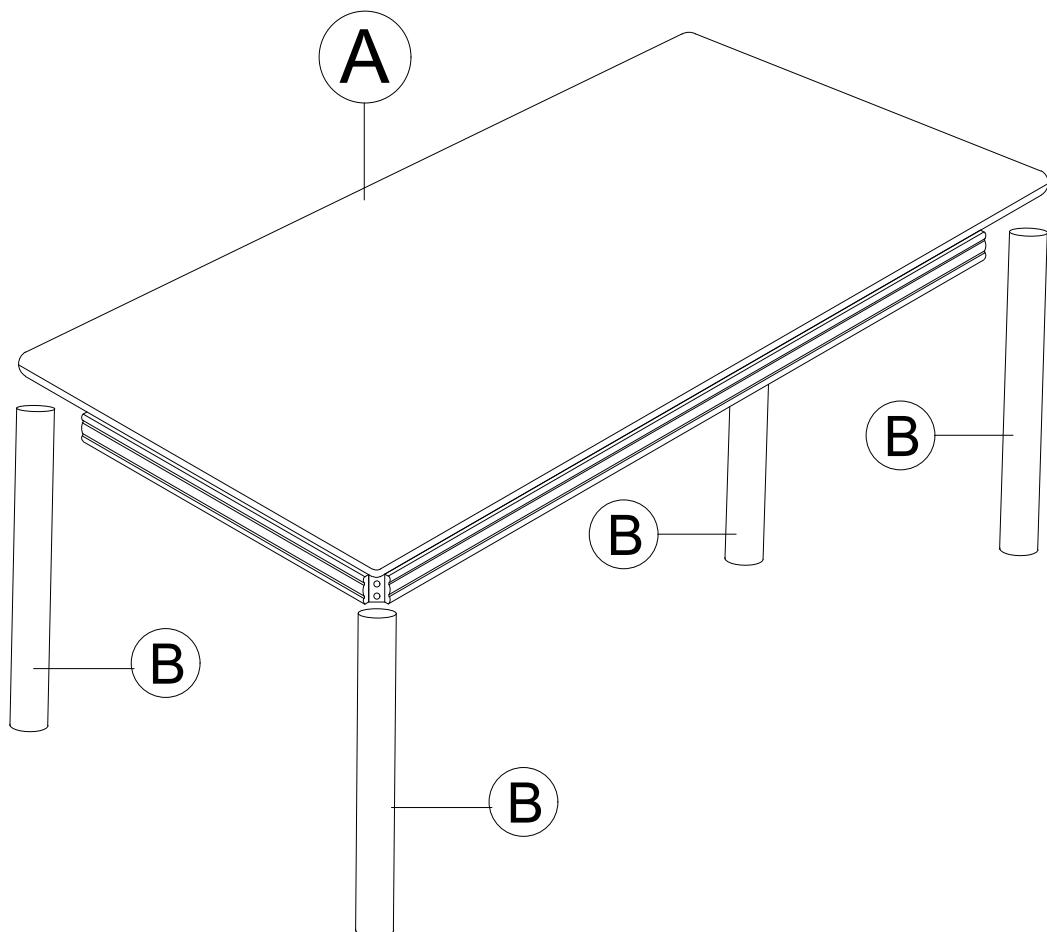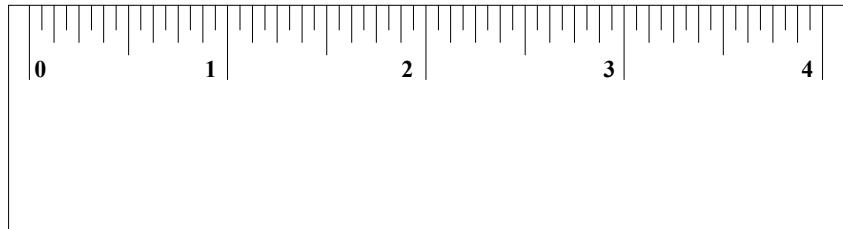

STEP 1 : Place the table top (A) upside down on a flat and clean surface. Assemble the table leg (B) to the table top (A) by using the Wrench (4) with hardware Hex Com Bolt 5/16"x 2" (1), Spring washer (2), and Flat washer (3).
**Attention: DO NOT TIGHTEN THE BOLTS.

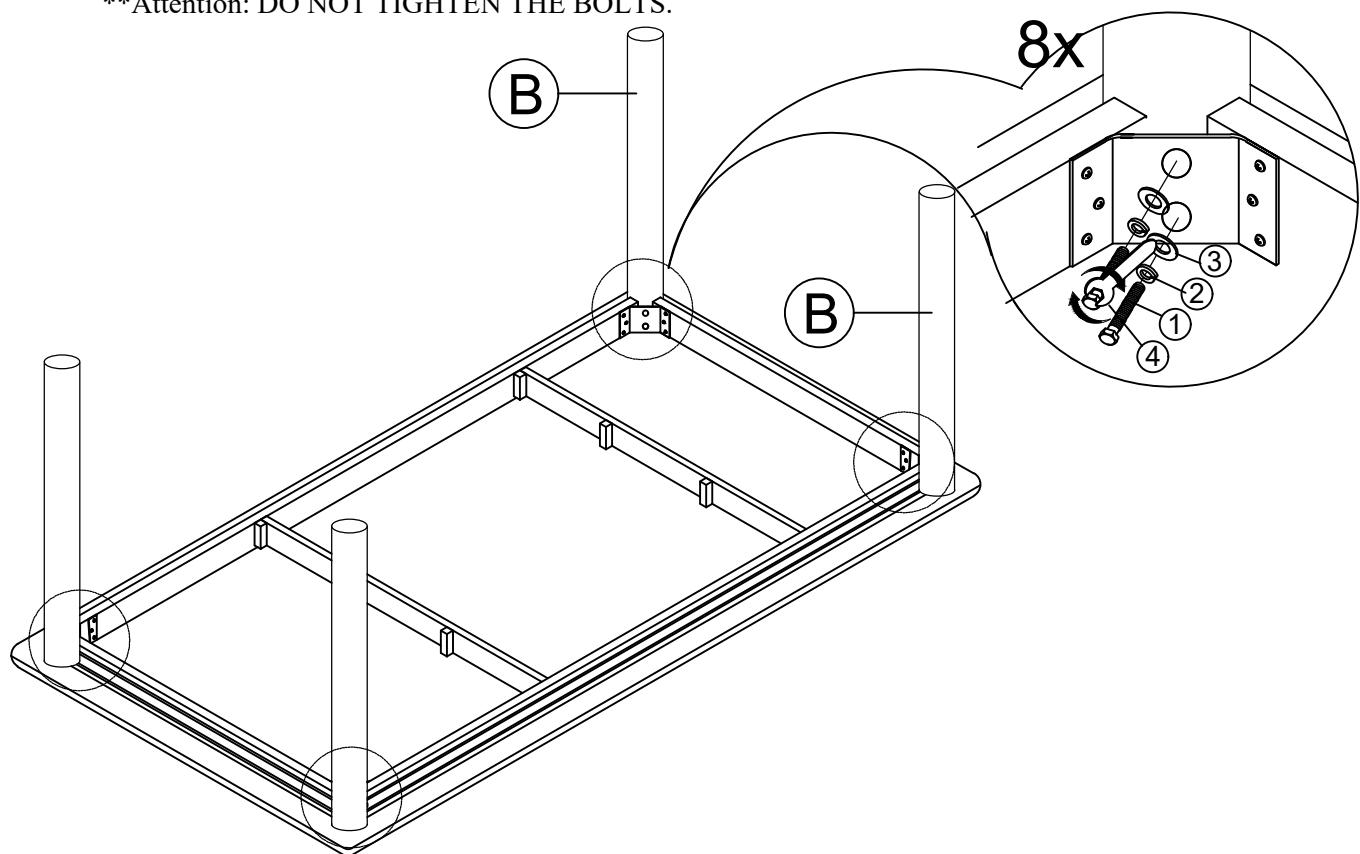

STEP 2 : To level the table, stand the table upright on a flat surface and tighten all the bolts by using Wrench (4).

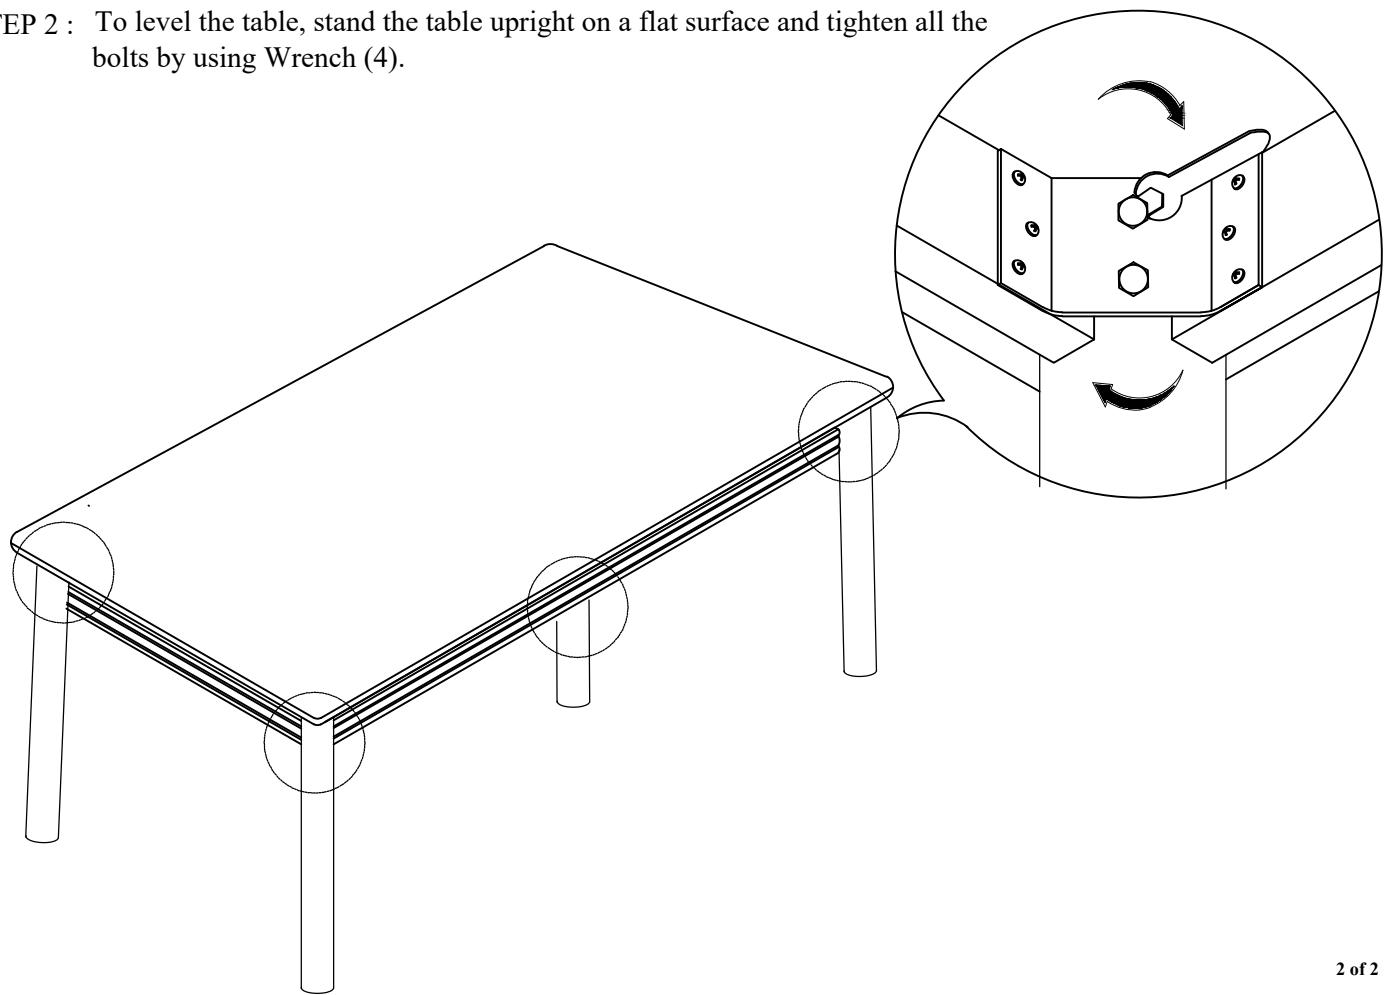

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.