


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

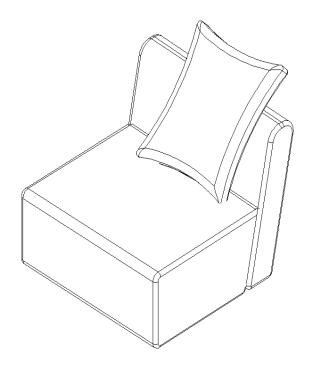

Fine Furniture for every stage of life

504924 ARMLESS CHAIR

ITEM: 504924



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

Please check to see that all hardware and parts are present prior to start of assembly.
 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

В	SEAT	1PC	D	LEG	4PCS
E	CORDUROY PILLOW	1PC			


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 504924



STEP 1

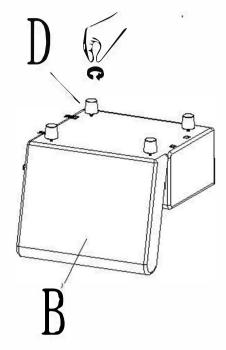

STEP2

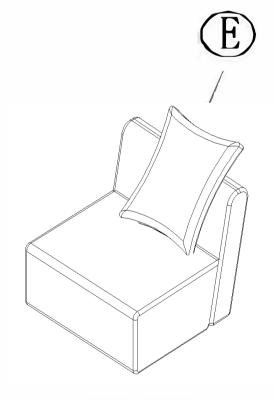


PAGE 3 OF 4

COASTERFURNITURE.COM

ITEM: 504924



ASSEMBLY INSTRUCTIONS PRODUCT DIMENSION

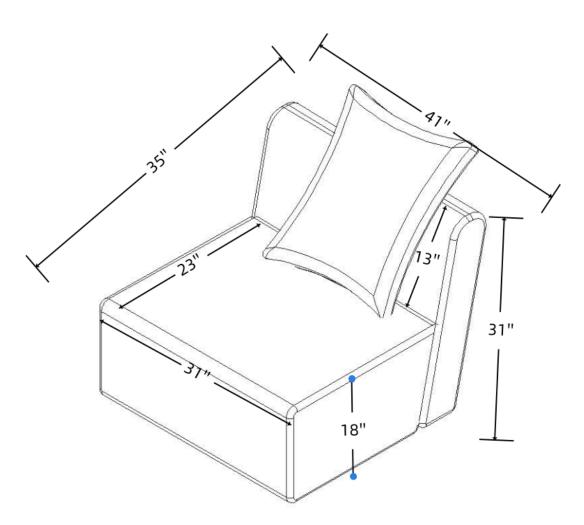

Note: Dimension tolerance ±5%