


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

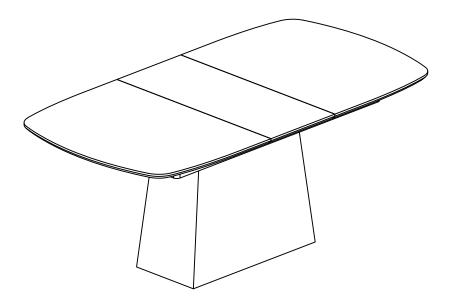

Fine Furniture for every stage of life

123131(B1-B2) *DINING TABLE*

REVISION 0: 12/20/2024

PAGE 01 OF 06

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

5 MINUTE

PARTS IDENTIFICATION

B1 (BOX 1)


A TABLE TOP



1PC

B2 (BOX 2)

B BASE

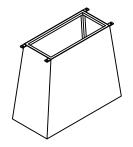

1PC

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOATED IN 123131 (B1)

1	BOLT
	(1/4"x5/8")



4PCS

2 WASHER (Ø16mm)



4PCS

3 ALLEN KEY (4x22x60mm)




1PC


ITEM: **123131(В1-В2)**

ASSEMBLY INSTRUCTIONS STEP 1:



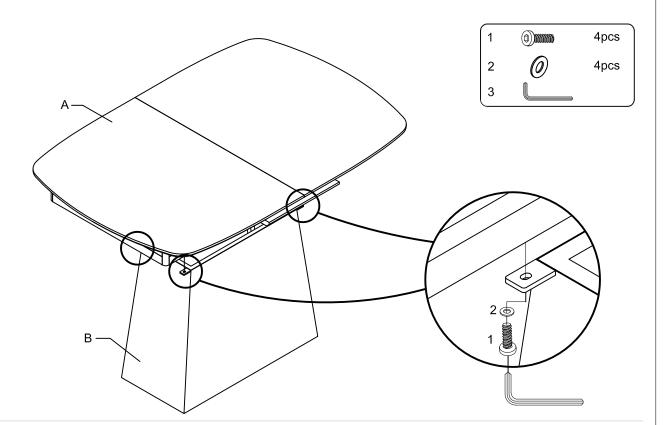


STEP 2: If you would like to extend the table top to a larger size, please follow step 2~4, Before extending, you need to open the plastic lock on the inner side of the slide rail.

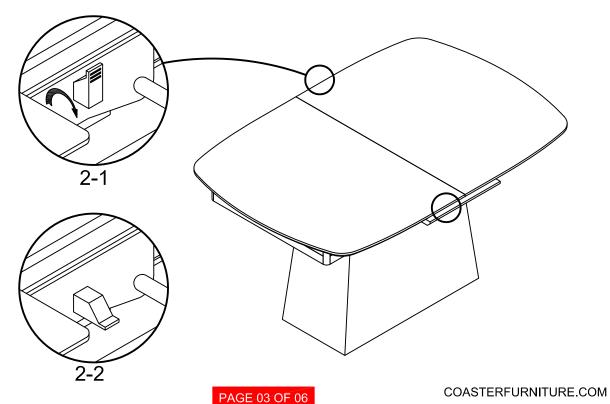


ASSEMBLY INSTRUCTIONS



STEP 3: Pull the left and right panel outward to the maximum size, then push them inward until they are close with the middle panel and level with it.

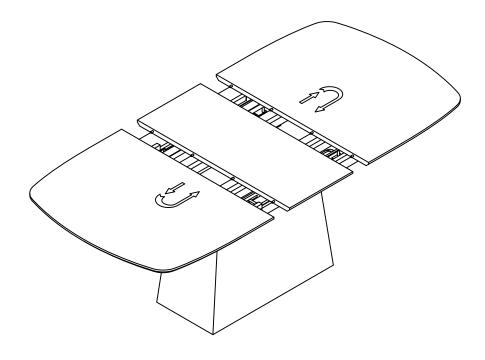

STEP 4:

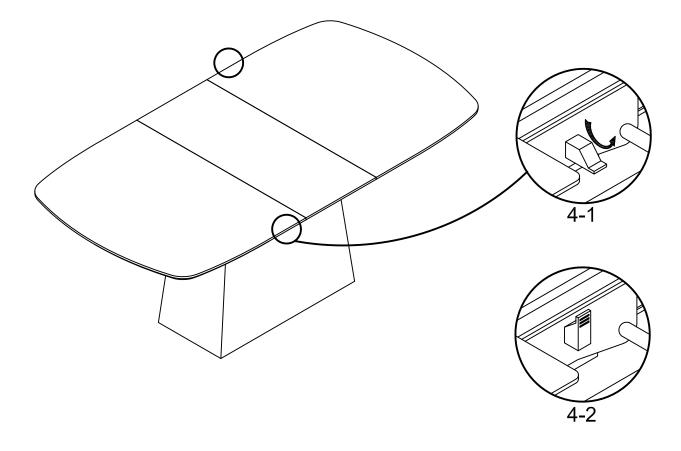


PAGE 04 OF 06

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS




STEP 5: If you would like to change the table top to a smaller size, please follow step 5~7.

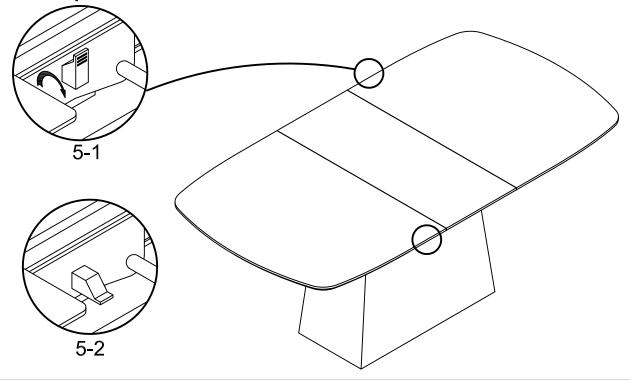

STEP 6:

Note: Slowly pull out the left and right panel, stop pulling when the middle panel sinks, then push the left and right panel inward until they are tightly attached.

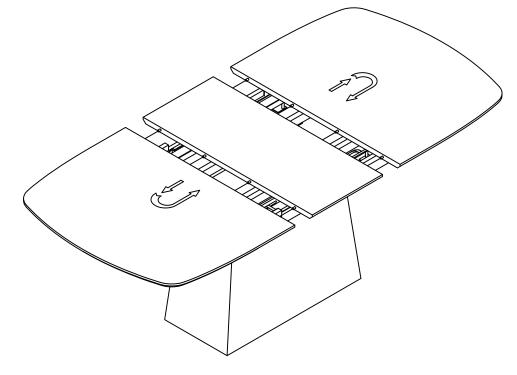


COASTERFURNITURE.COM


ASSEMBLY INSTRUCTIONS

STEP 7:



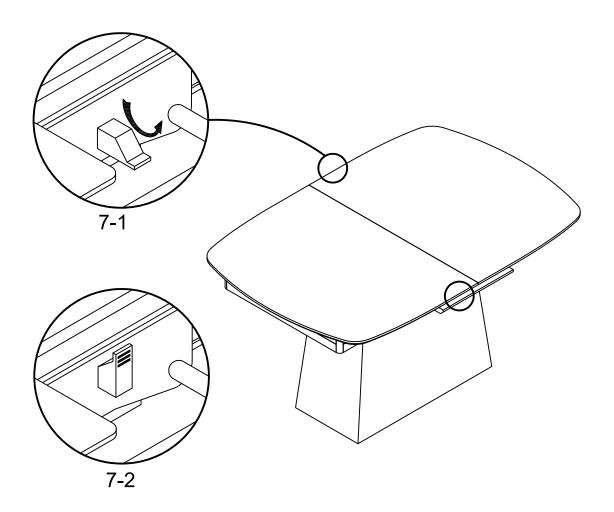



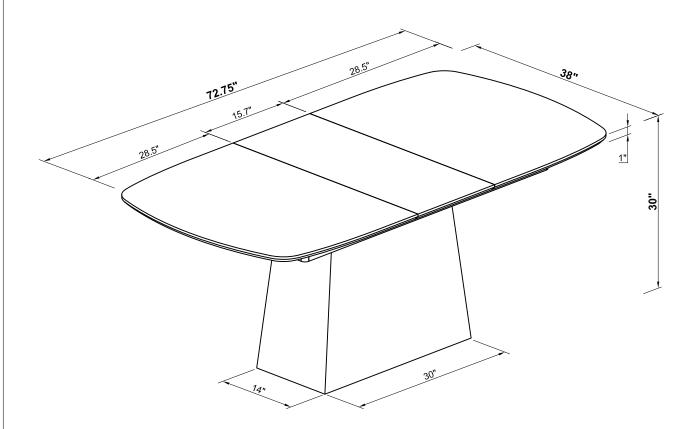

Note: Dimension tolerance ±5%