

ASSEMBLY INSTRUCTION FOR

ROUND BACK DINING CHAIR

D-3690-6-SC2/D-3690-8-SC2

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST			
No.	Part Description	Code.	Q'ty
A	Backrest Frame	PD-3690-6-SC2BFR	1
B	Seat Frame	PD-3690-6-SC2SEC	1
C	Front Leg	PD-3690-6-SC1LEG	2


HARDWARE LIST				
No.	Hardware Description		Code.	Q'ty
1		Flat washer 8*19*2mm	PD-3690-SC2HW	10
2		Spring washer 8mm		10
3		Allen Bolt 1/4"*75mm		4
4		Allen Bolt 1/4"*40mm		2
5		Hexagon 5/16"*13mm		4
6		Allen key 4*25*60mm		1
7		Wrench 13mm		1

 Only tighten all bolts when all bolts aligned with bolt inserts.

STEP 1

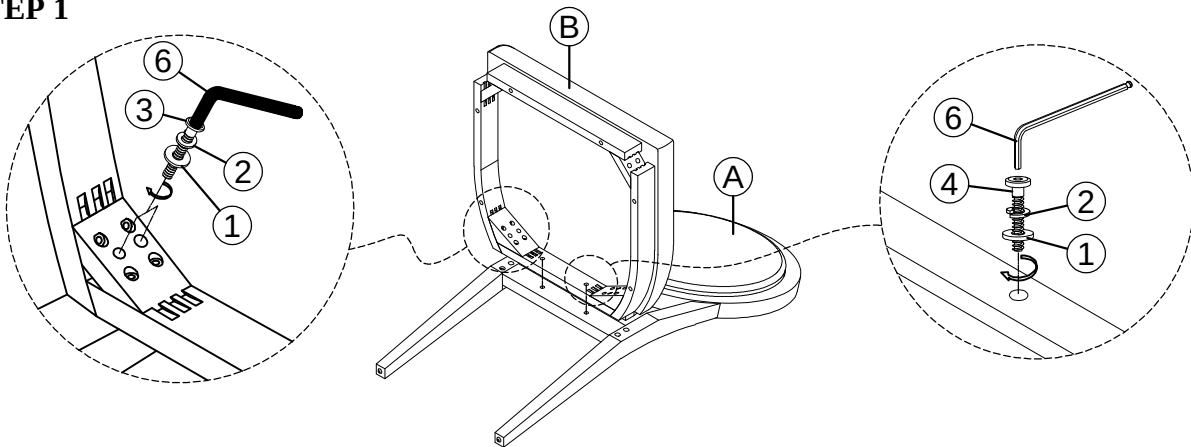

STEP 2

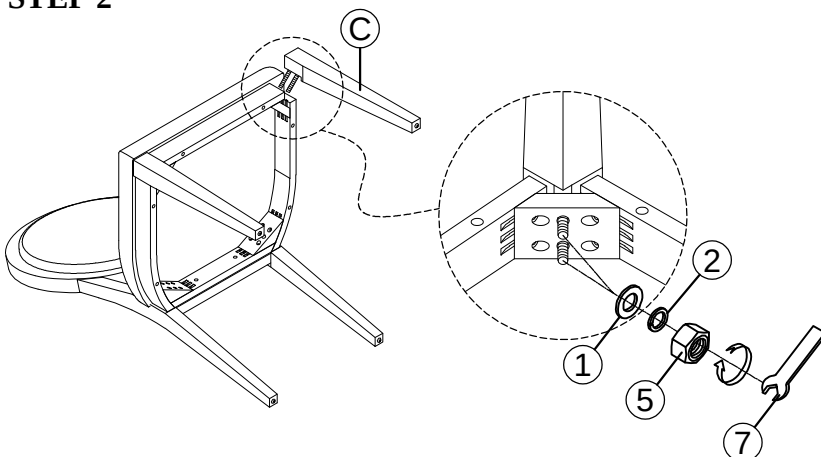

COMPLETE

