

---

# INDUCTION COOKTOP SAFETY & WARNINGS

---

Safety and warnings	6
Service and warranty	8

**FISHER & PAYKEL**

**US CA**

## **INDUCTION COOKTOPS**

---

CI365ZZDTB5, CI304ZDTB5, CI244ZZDTB5, CI122ZDTB5

### ⚠ WARNING!



#### Electric Shock Hazard

Failure to follow this advice may result in electrical shock or death.

- Do not cook on a broken or cracked cooktop. If the cooktop surface should break or crack, switch the appliance off immediately at the mains supply (wall switch) and contact a qualified technician.
- Switch off the appliance before cleaning or maintenance.



#### Fire Hazard

Failure to follow this advice may result in serious burns or death.

- Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- Never try to extinguish fire with water. Switch off the appliance. Cover the flame, eg with a lid or fire blanket, or use dry chemical or foam-type extinguisher.
- Do not store items on cooking surfaces.

### ⚠ WARNING!

#### **Hot Surface Hazard**

**Failure to follow this advice could result in burns and scalds.**

- During use, accessible parts of this appliance will become hot enough to cause burns.
- Do not let body, clothing or item other than suitable cookware contact the cook surface until the surface is cool.
- Never leave metal objects (such as kitchen utensils) or empty pans on the cooktop as they can become hot very quickly.
- Beware: magnetisable metal objects worn on the body may become hot in the vicinity of the cooktop. Gold or silver jewellery will not be affected.
- Keep children away.
- Handles of saucepans may be hot to touch. Check saucepan handles do not overhang other cook zones that are on. Keep handles out of reach of children.



### ⚠ WARNING!



#### Cut Hazard

**Failure to use caution could result in injury.**

- The razor-sharp blade of a cooktop scraper is exposed when the safety cover is retracted. Use with extreme care and always store safely and out of reach of children.

### ⚠ WARNING!



#### Health Hazard

**Failure to follow this advice may result in death.**

- This appliance complies with electromagnetic safety standards. However, persons with cardiac pacemakers or other electrical implants (such as insulin pumps) must consult with their doctor or implant manufacturer before using this appliance to make sure that their implants will not be affected by the electromagnetic field.

### READ AND SAVE THIS GUIDE

#### **WARNING!**

To reduce the risk of fire, electric shock, injury to persons or damage when using the appliance, follow the important safety instructions listed below. Read all the guidance before using the appliance.

#### **Installation**

- Unpack the packaging materials from the cooktop.
- Ensure your appliance is properly installed and earthed by a qualified technician.
- If a drawer is situated under an embedded appliance, ensure the space between the content of drawer and appliance is large enough (13/16 in) to provide correct ventilation.

#### **General Use**

- This domestic appliance is exclusively for the cooking of food to the exclusion of any other domestic, commercial or industrial use.
- Remove all labels and self-adhesives from the ceramic glass.
- Do not change or alter the appliance.
- Never leave the appliance unattended when in use. Boilover causes smoking and greasy spillovers that may ignite.
- Never use your appliance as a work or storage surface.
- Wear proper apparel — Loose-fitting or hanging garments should never be worn while using the appliance.
- Never leave any objects or utensils on the appliance.
- Do not place or leave any magnetizable objects (eg credit cards, memory cards) or electronic devices (eg computers, Smartphones) near the appliance, as they may be affected by its electromagnetic field.
- Storage on appliance — Flammable materials should not be stored on the cooktop or near surface units.
- Do not place or leave aluminum foil on the cooktop.
- Never use your appliance for warming or heating the room.
- Do not use water on grease fires - Smother fire or flame or use dry chemical or foam-type extinguisher.
- Use only dry potholders — Moist or damp potholders on any hot surfaces may result in burns from steam. Do not let potholder touch hot heating elements. Do not use a towel or other bulky cloth.
- After use, always turn off the cooktop as described in this guide (ie by using the power button).
- Do not rely on the pan detection feature to turn off the cook zones when you remove the pans.
- Do not use a steam cleaner to clean your cooktop.
- Do not place or drop heavy objects on your cooktop.
- Do not use pans with jagged edges as this can scratch the glass.
- Do not stand on your cooktop.
- Do not use scourers or any other harsh/abrasive cleaning agents to clean your cooktop, as these can scratch the cooktop surface.
- Do not operate your cooktop by means of an external timer or separate remote-control system.

## SAFETY AND WARNINGS

- Always turn hood ON when cooking at high heat or when flambeing food (i.e. Crepes Suzette, Cherries Jubilee, Peppercorn Beef Flambe').
- Do not cook on a broken cooktop. If cooktop is broken, cleaning solutions and spillovers may penetrate inside the cooktop and create a risk of electric shock. Contact a qualified technician immediately.
- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously

### Child Safety

- Do not allow children to play with the appliance or sit, stand, or climb on it.
- Do not store items of interest to children in cabinets above the appliance. Children climbing on the cooktop could be seriously injured.
- Do not leave children alone or unattended in the area where the appliance is in use. Children of less than 8 years old must be kept away from the appliance unless continuously supervised. This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and they understand the hazards involved. Cleaning and user maintenance shall not be done by children without supervision.

### Cleaning

- Clean cooktop with caution — If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burn. Some cleaners can produce noxious fumes if applied to a hot surface.
- Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.

### Servicing

- Do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).
- Do not repair or replace any part of the appliance unless specifically recommended in the user guide. All other servicing should be undertaken by a Fisher & Paykel trained and supported service technician or qualified person.
- If the power supply cable is damaged, it must only be replaced by a qualified technician.
- If the appliance is malfunctioning, it will display an alert code: first note down the alert code (see section 'Alert codes' in this manual), then contact your Authorized Service Center or Customer Care to arrange for service. Do not use your appliance until it has been repaired by a Fisher & Paykel authorized technician.

### Standard Requirements

- This induction cooktop generates and uses ISM frequency energy that heats cookware by using an electromagnetic field. It has been tested and complies with Part 18 of the FCC Rules for ISM equipment. This induction cooktop meets the FCC requirements to minimize interference with other devices in residential installation. Induction cooktops may cause interference with television or radio reception. If interference occurs, the user should try to correct the interference by:
  - Relocating the receiving antenna of the radio or television.
  - Increasing the distance between the cooktop and the receiver.
  - Connecting the receiver into an outlet different from the induction cooktop

## **SERVICE AND WARRANTY**

### **Before you call for service or assistance**

Check the things you can do yourself. Refer to the installation instructions and your user guide and check that:

- ① Your product is correctly installed.
- ② You are familiar with its normal operation.

If after checking these points you still need assistance or parts, please refer to the Service & Warranty book for warranty details and your nearest Authorised Service Centre, Customer Care, or contact us through our website [www.fisherpaykel.com](http://www.fisherpaykel.com).

