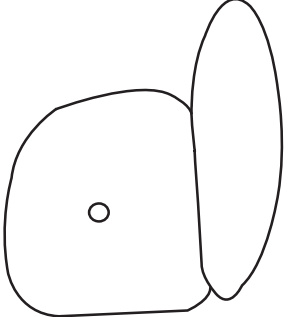
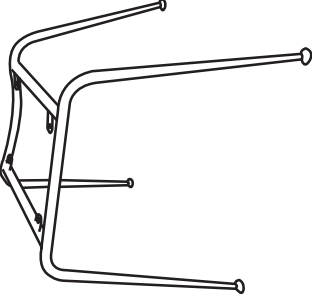


		
9300144		NISHAKD FABRIC DINING SIDE CHAIR
ASSEMBLY INSTRUCTIONS		
HARDWARE		
Ax4	Bx2	Cx2
 M6	 M6X25MM	 M6X16MM
PARTS		
1x1	2x1	
		

The more vertical and higher legs are front legs and more slanted legs are rear legs. Make sure to screw the straight part of seat to front legs and the curved part of seat to the rear legs.

(1)	
(2)	